



PROFESSIONAL QUALITY COOKING EQUIPMENT

USE AND CARE MANUAL FOR DUAL FUEL RANGES

MODEL NUMBERS: ARR-304DF, ARR-366DF, ARR-436GD, ARR-436GR, ARR-486GDDF, ARR-486GRDF, ARR-4862GDDF, ARR-484X22GRDF, ARR-484GDGRDF, ARR-6062GD, ARR-606X2GR, ARR-606GDGR



DESIGN



CLASS



FUNCTION

RETAIN THIS MANUAL FOR FUTURE REFERENCE



Table of Contents

Safety Notices

Safety Notices	iii
Procedural Notices	iii
Important Safety Instructions	iv

Section 1 General Information

Model Numbers	1-1
Model/Serial Number Location	1-1
Owner Warranty Registration Card	1-2
General	1-2
Warranty Coverage	1-2
General	1-2
Parts	1-2
Labor	1-2
Exclusions	1-2
Authorized Warranty Service	1-2

Section 2 Ventilation Requirements

General	2-1
Select Hood & Blower	2-1
Hood Placement	2-2
Make-Up Air	2-2

Section 3 Installation Instructions

Important Installation Information	3-1
General	3-1
Overall Dimensions	3-1
Location of Range	3-2
Cabinet Preparation	3-2
Electrical Service	3-3
Gas Supply	3-3
Preparing for Installation	3-3
Unpacking the Appliance	3-3
Removing the Oven Door	3-3
Connecting the Electrical Service	3-3
Connecting the Gas Supply	3-3
Final Installation	3-4
Sliding Appliance into Cabinet	3-4
Leveling and Adjusting the Appliance	3-4
Re-installing the Oven Door	3-4
Installing the Burner Components	3-4
Installation Check List	3-4
Before Starting the Appliance	3-4

Table of Contents

Section 4 Appliance Operation

Control Panel Keys	4-1
Cooking Modes	4-1

Section 5 Maintenance

Self-Cleaning	5-1
Cleaning the Cooktop	5-1
Cleaning the Burner Components	5-1
Cleaning the Control Panel	5-1
Cleaning Stainless Steel Surfaces	5-1
Cleaning Glass (Interior and Exterior)	5-1

Section 6 Before Calling For Service

Checklist	6-1
-----------------	-----

Section 7 Notes

Safety Notices

Safety Notices

As you work on this appliance, be sure to pay close attention to the safety notices in this manual.

Disregarding the notices may lead to serious injury and/or damage to the appliance.

Throughout this manual, you will see the following types of safety notices:

WARNING

PERSONAL INJURY POTENTIAL

Do not operate an appliance that has been misused, abused, neglected, damaged, or altered/modified from that of the original manufactured specifications.

WARNING

Text in a Warning box alerts you to a potential personal injury situation. Be sure to read the Warning statement before proceeding, and work carefully.

CAUTION

Text in a Caution box alerts you to a situation in which you could damage the appliance. Be sure to read the Caution statement before proceeding, and work carefully.

Procedural Notices

As you work on this appliance, be sure to read the procedural notices in this manual. These notices supply helpful information which may assist you as you work.

Throughout this manual, you will see the following types of procedural notices:

IMPORTANT

Text in an Important box provides you with information that may help you perform a procedure more efficiently. Disregarding this information will not cause damage or injury, but it may slow you down as you work.

NOTE

Text in a Note box provides you with simple but useful, extra information about the procedure you are performing.

Read These Before Proceeding:

CAUTION

Proper installation, care and maintenance are essential for maximum performance and trouble-free operation of your American Range Corporation. Read and understand this manual. It contains valuable care and maintenance information. If you encounter problems not covered by this manual, do not proceed, contact American Range Corporation. We are happy to provide assistance.

IMPORTANT

Routine adjustments and maintenance procedures outline in this manual are not covered by the warranty.

WARNING

If you smell gas:

- Do not use or light any appliance.
- Do not touch any electrical switch or use any electrical devices, including the telephone, in your building.
- From a neighbor's phone, immediately call the gas supplier. Follow the gas supplier's instructions.
- If you cannot contact the gas supplier, call the fire department.

Do not store or use combustible, flammable, or explosive vapors and liquids (such as gasoline) inside or in the vicinity of this or any other appliance. Also keep items that could explode, such as aerosol cans, away from the burners and the oven. Do not store flammable or explosive materials in adjacent cabinets or areas.

Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous, even if they sit out for "just a few days." When taking an appliance out of service, please follow the instructions below to help prevent accidents:

- Take off the door.
- Leave the racks in place so children cannot easily climb inside.
- Cut the prongs off the power cable plug and discard them.
- Cut the power cable off and discard it separately from the old appliance.

Safety Notices

Important Safety Instructions

To reduce the risk of fire, explosion, electric shock, serious injury, or death when installing or using this appliance, follow these basic safety precautions, including the following:

WARNING

1. Read the accompanying use and care manual before operating this appliance.
2. Keep packaging materials away from children. Plastic sheets and bags can cause suffocation.
3. If you receive a damaged product, immediately contact your dealer or builder. Do not install or use a damaged appliance.
4. This range must be properly installed and grounded by a qualified installer according to these installation instructions prior to use. The installer should show the customer the location of the gas shut off valve and the fuse or junction box so that they know where and how to turn off the gas supply and electric power to the range.
5. Do not install, repair, or replace any part of the range unless specifically recommended in the manual accompanying it. A qualified service technician should perform all other service.
6. Do not use (install) this appliance in conjunction with a surface (countertop) ventilation system. American Range Corporation recommends the installation of an overhead ventilation hood.
7. Do not connect this range to the gas supply without the supplied gas pressure regulator installed.
8. Before performing any type of service or installation, make sure that the gas supply and electric power to the range are turned off.
9. Only use the range for cooking tasks expected of a home appliance as outlined in the manual accompanying it. This range is not intended for commercial use.
10. DO NOT TOUCH THE SURFACES OF THE OVEN OR COOKTOP DURING OR IMMEDIATELY AFTER USE.
11. Do not leave children alone or unattended in the area around the range. Do not allow children to play with the controls, pull on the handle, or touch other parts of the range.
12. Do not store items of interest to children on top of or above the range. Children could be burned or injured while climbing on the appliance.
13. Do not attempt to use this appliance in the event of a power failure.
14. Do not tamper with the controls. Do not adjust or alter any part of the range unless specifically instructed to do so in these instructions.
15. To prevent the unit from tipping forward and to provide a stable installation, the unit must be secured in place with the anti-tip device as specified in this manual.
16. Do not block or cover any of the holes at various locations on the range. Doing so will obstruct air flow and affect burner operation or the internal cooling of the range's components. A fire hazard or damage to the range may also result.
17. Clean the cooktop thoroughly before operating it for the first time.
18. Keep flammable items, such as paper, cardboard, plastic, and cloth away from the burners and other hot surfaces. Do not place such items in the oven. Do not allow pot holders to touch hot surfaces or gas burners.
19. Do not wear loose or hanging apparel while using the range. Do not allow clothing to come into contact with the interior of the oven or the cooktop and surrounding areas during and immediately after use.
20. To avoid a fire hazard, do not hang flammable or heat sensitive objects over the range.
21. If the range is near a window, do not use long curtains as window treatment. The curtains could blow over the cooktop and create a fire hazard.
22. Do not use the oven for storage.
23. Do not touch the burner assembly, grates, or surrounding surfaces or the interior surfaces of the oven during use. After use, make sure these surfaces have had sufficient time to cool before touching them.
24. Do not touch the outside surfaces of the range during the self-clean cycle. They will be hot. Venting from the oven may cause the cooktop to become hot.

Safety Notices

WARNING

1. Make sure that all the cooktop parts are dry before lighting a burner.
2. Turn the knobs to the "OFF" position prior to removing them from the valve stems.
3. The cooktop should never be operated without the knobs and trim rings in place.
4. Do not use the range for warming or heating the room.
5. Non-stick coatings, when heated, can be harmful to birds. Remove birds to a separate, well-ventilated room during cooking.

CAUTION

1. Do not line the oven with aluminum foil or other materials. These items can melt or burn up during self-cleaning and cause permanent damage to the oven.
2. Do not leave metal objects, such as aluminum foil, cookie sheets, etc. on the bottom of the oven. Objects left on the bottom of the oven could damage the bake element. In addition, the objects themselves could be damaged.
3. The bake and broil elements are behind glass panels on the floor and ceiling of the oven chamber. Do not allow these glass panels to become covered up by cookie sheets, aluminum foil, pots, pans, etc. Covering them could cause the heating elements to over-heat, damaging the oven.
4. Do not expose the knobs or trim rings to direct flame, hot utensils, or other sources of heat.
5. Always ensure that the light fixture lens covers are in place when using the oven. The lens covers protect the light bulbs from breakage caused by high oven temperatures or mechanical shock.

Section 1 General Information

IMPORTANT

Do not operate an appliance that has been misused, abused, neglected, damaged, or altered/modified from that of the original manufactured specifications.

Model Numbers

This manual covers the following models:


American Range Professional Series Dual-Fuel Ranges

ARR-304DF


ARR-366DF

Model/Serial Number Location

These numbers are required when requesting service from your local American Range dealer, servicer or American Range Corporation.

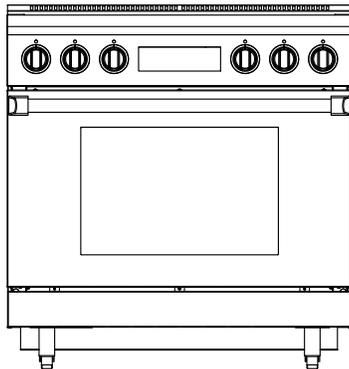

The model and serial number are listed on the data plate located under the control panel on the front of the appliance.

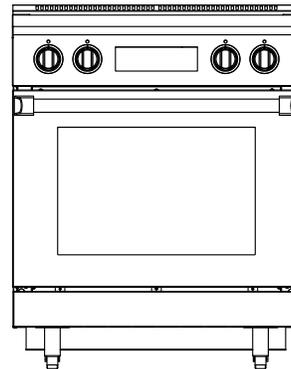

Warranty Registration Card

General

The packet containing this manual also includes warranty information. Warranty coverage begins the day your new range is installed.

If you do not return your Warranty Registration Card, American Range will use the date of sale to the American Range Distributor as the first day of warranty coverage for your new range.

IMPORTANT

Complete and mail the Warranty Registration Card as soon as possible to validate the installation date.

Warranty Coverage

General

The following Limited Warranty outline is provided for your convenience. For a detailed explanation, read the warranty bond shipped with each product.

Contact your local American Range Dealer if you need further warranty information.

Parts

American Range warrants the range against defects in materials and workmanship, under normal use and service for one (1) year from the date of original installation.

Labor

Labor required to repair or replace defective components is covered for one (1) year from the date of original installation.

IMPORTANT

This product is intended exclusively for residential application. No warranty is extended for commercial applications.

Exclusions

The following items are **not** included in the appliances' warranty coverage:

1. **Normal maintenance, adjustments and cleaning.**
2. Repairs due to **unauthorized modifications** to the appliance or **use of non-standard parts** without the prior written approval from American Range Corporation.
3. Damage caused by **improper installation** of the appliance, electrical supply, gas supply, or damage caused by floods, storms, or other acts of God.
4. **Premium labor rates** due to **holidays, overtime, etc.**; travel time; flat rate service call charges; mileage and miscellaneous tools and material charges not listed on the payment schedule. Additional labor charges **resulting from the inaccessibility of the appliance** are also excluded.
5. Parts or assemblies subjected to **misuse, abuse, neglect or accidents.**
6. **Damage or problems** caused by installation, cleaning and/or maintenance procedures inconsistent with the technical instructions provided in this manual.
7. **This product is intended exclusively for residential application.** No warranty is extended for commercial applications.

Authorized Warranty Service

To comply with the provisions of the warranty, **an appliance service company qualified and authorized by American Range Corporation must perform the warranty repair.**

Service Calls

Normal maintenance, adjustments and cleaning as outlined in this manual are not covered by the warranty. If you have followed the procedures listed on page 5-1 of this manual, and the appliance still does not perform properly, call your authorized service company.

NOTE

If the dealer you purchased the appliance from is not authorized to perform warranty service, contact American Range Corporation for the name of the nearest authorized service representative.

Final Installation

Sliding the Appliance into the Cabinet

Make sure that the gas supply and electrical service are properly connected.

Peel the protective coating off the appliance, if applicable.

Carefully slide the appliance into position in the cutout. The left rear leg should engage the anti-tip bracket.

Leveling and Adjusting the Appliance

Raise or lower the range until it is the same height as the countertop. To adjust the height, turn the bottom of the leg.

Use a level to make sure that the appliance does not tilt to the front/back or to either side.

Re-installing the Oven Door

Grasp both sides of the oven door and hold it at a 15 degree angle for the front of the appliance.

Slide the hinges into the hinge openings, resting the bottom of the hinge arms on the hinge openings.

While continuing to hold the door at a 15 degree angle, press in on each of the bottom corners of the door. Press until the notch on the bottom of each hinge slips over the lower lip of each hinge opening.


Lower the door to the fully opened position.

Rotate the hinge locks toward the oven.

Slowly and open and close the oven door completely to ensure that it is properly reinstalled.

Installing the Burner Components

Install the burner components as shown.

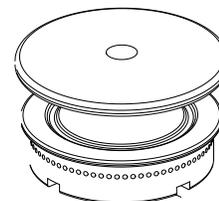

Installation Check List

Has the appliance been installed using the anti-tip bracket?

Is the appliance level and all of the leveling legs making contact with the floor?

Is the appliance electrical service grounded in accordance with all applicable electrical codes?

Has the gas supply been installed in accordance with all applicable codes?

Have all gas supply connections been check for leaks?

Has the oven door been installed in accordance to these instructions?

Are all burners and grates properly installed?

Before Using the Appliance

Prior to operating this appliance, please read the operation and maintenance sections of this manual.

Before beginning the test procedure, verify that all cooktop control knobs are in the OFF position. Turn on the gas supply at the manual shut-off valve.

Turn ON each cooktop burner separately by pushing in the control knob and turning it counterclockwise to the HIGH position. It may take a few seconds for ignition to occur. After ignition, rotate the control knob counterclockwise from HIGH to LOW to adjust the flame.

Turn the control knob to the OFF position.

To set the time of day press the clock button, adjust the clock by press the time UP and Down buttons.

Press the BAKE button.

Adjust the temperature to 375 degrees using the UP and Down TEMP buttons.

The display should show BAKE, and the preheating temperature.

Press the OFF button to stop the oven preheating process.

If either the cooktop or oven does not operate properly, do not attempt to repair the appliance yourself. American Range Corporation is not responsible for service required to correct a faulty installation.

Section 3
Installation Instructions






General

These instructions are provided to assist the qualified installer. It is the owner's responsibility to ensure that all governing codes and ordinances are observed during the planning and installation of this appliance.

IMPORTANT

Failure to follow these installation guidelines may affect warranty coverage.

Overall Range Dimensions

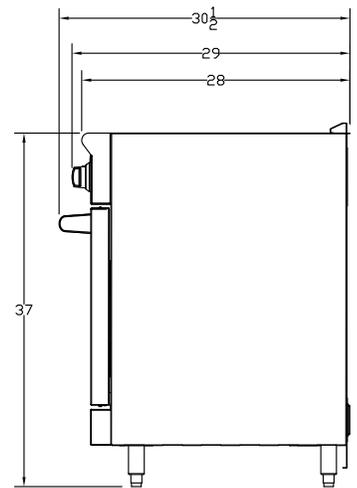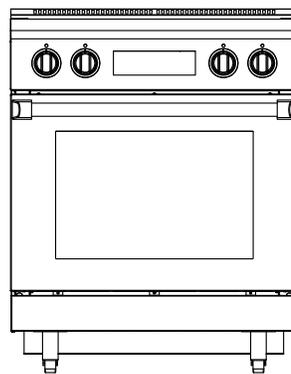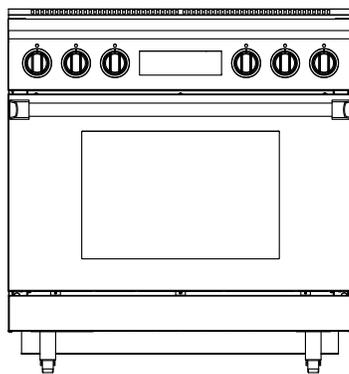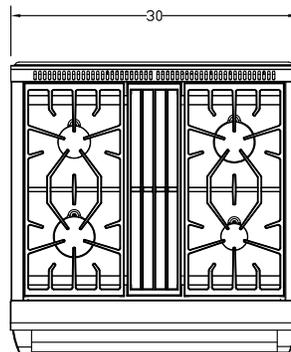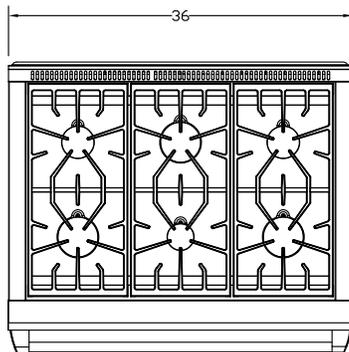

Range Location

The location selected for the range must meet the following criteria. If any of these criteria are not met, select another location.

Cabinet Preparation

1. The range is a free standing appliance. If the range is to be installed adjacent to cabinets, the clearances shown in below are required.
2. This range may not be recessed into the cabinets. The rear of the oven door must be beyond the edge of the front face of the adjacent cabinet.
3. The gas and electrical supplies should be located in adjacent right cabinet.
4. Any openings in the wall behind the range and in the floor under the range must be sealed.
5. Always keep the appliance are clear and free from combustible materials, gasoline, or other flammable vapors and liquids.
6. Do not obstruct the flow of combustion and ventilation air to the unit.

NOTE

For optimal performance, the range should be installed away from drafts that may be caused by doors, windows, and heating and air conditioning outlets.

NOTE

The maximum depth of the overhead cabinets installed on either side of the hood is 13" (330)

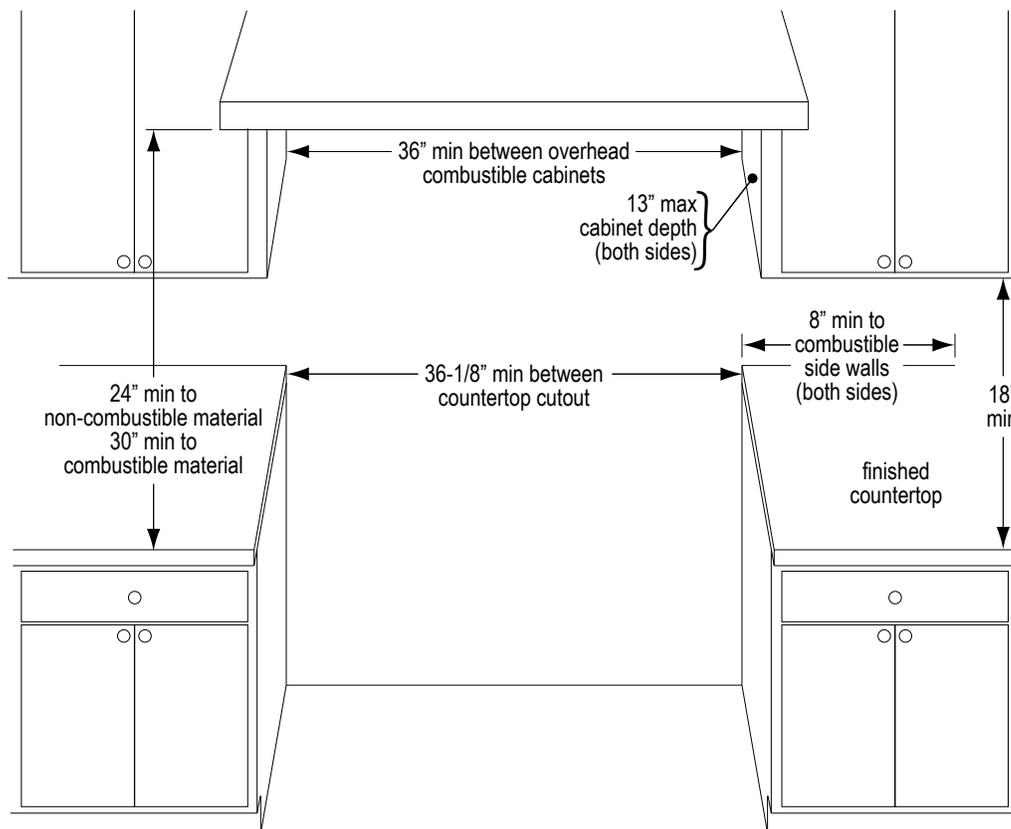


Figure Cabinet Clearances

WARNING

It is the owner's responsibility to ensure that the electrical connections of this appliance is performed by a qualified electrician. The electrical installation must be in accordance with the latest version of the National Electrical code ANSI/NFPA 70 and local codes and ordinances.

WARNING

Check your local building codes for the proper method of installation. In the absence of local codes, this appliance should be installed in accordance with the National Fuel Gas Code ANSI Z223.1. Be certain that the appliance being installed is correct for the gas service being provided.

IMPORTANT

Within the Commonwealth of Massachusetts, this appliance must be installed by a licensed plumber or gas fitter.

WARNING

Do not attempt to disengage the hinge catch with the door removed from the oven. The hinge spring could release causing personal injury.

Do not lift or carry the oven door by the door handle

Electrical Service

A 240VAC, 60Hz separately grounded circuit that is protected by a 30A circuit breaker or time delay fuse must be supplied to the appliance

A 4-wire connection (not provided) is required to connect the appliance to the electrical supply junction box. Consult local building codes for the type and minimum wire gauge to use.

The wiring to the appliance from the electrical supply junction box needs to be long enough to allow the appliance to be pulled out from the wall for service, while remaining connected.

Gas Supply

Be certain that the appliance being installed is correct for the gas service being provided. Refer to the appliance data plate for the gas supply requirements.

Minimum Natural Gas Supply Required – 6" water column

Minimum Liquid Propane (LP) Gas Supply Required – 11" water column

A manual gas shut-off valve must be remotely installed and easily accessible in the adjacent cabinet.

The regulator inlet is for a 3/4" gas line. The appliance ships with a 1/2" to 3/4" adapter connected to the regulator.

Preparing for Installation**Unpacking the Appliance**

Unpack all parts boxes and verify that all of the required components have been provided. If any items are missing or damaged, please contact your dealer immediately. Do not install a damaged or incomplete appliance.

- ◆ This Manual
- ◆ Anti-Tip Kit
- ◆ 3 Grates
- ◆ 4 Large and 2 Small Burner Assemblies
- ◆ 2 Racks

Removing the Oven Door

To make the appliance easier to move, remove the door to reduce weight. Open the door to its fully opened position.

1. Rotate the catch over the retaining arm on each hinge.
2. Lift the oven door to about a 15 degree angle from the vertical position.
3. Hold the door with both hands just below the handle and pull it away from the oven while continuing to lift.

Connecting the Electrical Service

1. Make sure that the conduit or appliance wire is long enough to allow the range to be pulled out for service without disconnecting it.
2. Connect the wires from the conduit or appliance wires to the wires on the appliance electrical panel.

Connecting the Gas Supply

1. Make sure the gas supply valve is in the off position.
2. Connect the gas line to the appliance.
3. Connect the gas line to the supply line.
4. Turn on the gas supply and check for leaks
5. Turn the gas supply off.

Final Installation

Sliding the Appliance into the Cabinet

- Make sure that the gas supply and electrical service are properly connected.
- Peel the protective coating off the appliance, if applicable.
- Carefully slide the appliance into position in the cutout. Install the anti-tip system.

Leveling and Adjusting the Appliance

- Raise or lower the range until it is the same height as the countertop. To adjust the height, turn the bottom of the leg.
- Use a level to make sure that the appliance does not tilt to the front/back or to either side.

Re-installing the Oven Door


- Grasp both sides of the oven door and hold it at a 15 degree angle for the front of the appliance.
- Slide the hinges into the hinge openings, resting the bottom of the hinge arms in the hinge openings.
- Lower the door to the fully opened position.
- Remove the hinge locks on each hinge.
- Slowly and open and close the oven door completely to ensure that it is properly reinstalled.

Installing the Burner Components

- Install the burner components as shown.

Installation Check List

- Has the appliance been installed using the anti-tip bracket?
- Is the appliance level and all of the leveling legs making contact with the floor?
- Is the appliance electrical service grounded in accordance with all applicable electrical codes?
- Has the gas supply been installed in accordance with all applicable codes?
- Have all gas supply connections been check for leaks?
- Has the oven door been installed in accordance to these instructions?
- Are all burners and grates properly installed?

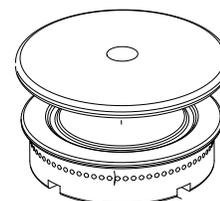

Before Using the Appliance

Prior to operating this appliance, please read the operation and maintenance sections of this manual.

- Before beginning the test procedure, verify that all cooktop control knobs are in the OFF position. Turn on the gas supply at the manual shut-off valve.

Turn ON each cooktop burner separately by pushing in the control knob and turning it counterclockwise to the HIGH position. It may take a few seconds for ignition to occur. After ignition, rotate the control knob counterclockwise from HIGH to LOW to adjust the flame.

Turn the control knob to the OFF position.

To set the time of day press the clock button, adjust the clock by press the time UP and Down buttons.

Press the BAKE button.

Adjust the temperature to 375 degrees using the UP and Down TEMP buttons.

The display should show BAKE, and the preheating temperature.

Press the OFF button to stop the oven preheating process.

If either the cooktop or oven does not operate properly, do not attempt to repair the appliance yourself. American Range Corporation is not responsible for service required to correct a faulty installation.

Section 4 Appliance Operation



Control Panel Keys

- CLOCK**
 Use this key to set the clock.
- OFF**
 Use this key to turn off the oven.
- TIMER**
 Use this key to time an event. You can use the timer even if the oven is not in use.
- LOCK**
 Pressing this key for 6 seconds will lock or unlock the control panel.
- LIGHT**
 Use this key to turn on or off the oven lights.
- COOKING MODES:** Select the type of cooking you want to perform by pressing one of the cooking mode keys
- CLEAN**
 Activates the oven's self-cleaning feature.
- CONVECTION BAKE**
 This mode is for single and multiple rack baking.
- BAKE**
 Uses only a heat source from below the food.
- BROIL**
 Uses a top heat source.
- WARM**
 Is used to warm food.

Section 5 Maintenance

WARNING

- Clean only the parts of the range listed in this manual. Clean them only in the manner specified.
- To avoid dangerous fumes or damage to your range's surfaces and accessories, use only the types of cleaning solutions specified in this manual.
- To avoid electrical shock or burns, turn off the burners and the oven and make sure that all parts are cool before cleaning.
- Do not use a steam cleaner to clean the range. Steam could penetrate the electrical components and cause a short circuit.
- Always wipe up excess grease and other food spills with a damp cloth prior to using the self-clean cycle. Doing so will minimize smoke and increase efficiency. See proper cleaning instructions on this page.
- Do not touch the outside surfaces of the oven during the self-clean cycle. They will be hot.
- Do not try to force the door open after it is locked. Damage to the door or latch may result.

CAUTION

- Do not try to remove heavy spills with a sharp object such as a knife or metal spatula. Sharp objects may scratch your range's surfaces.
- Items left in the oven during self-cleaning will become damaged or damage the oven.

Self-Cleaning Your Oven

- ◇ The oven will run better and produce better baked goods when it is clean. During self-cleaning, the oven is heated to very high temperatures which burn off any deposits on the surfaces of the oven. Self-cleaning eliminates the need for manual scrubbing of interior surfaces. The self-clean process takes about 3 hours.
 - ◇ It is normal for the oven to emit smoke during the first few self-clean cycles. It is also normal for the oven to emit popping sounds during self-cleaning. These sounds are caused by the expansion and contraction of metal surfaces when the oven heats up and cools down.
1. Before self-cleaning the oven, remove the racks, all cookware (pots, pans, forks, etc.), foil and any other loose objects from the oven cell.
 2. Clean soil from the porcelain surfaces of the door. Rinse surfaces well with a solution of vinegar and water, then wipe dry. Heavily soiled areas may be cleaned with a non-scratching scouring pad.
 3. Turn on kitchen fans or vents to help remove odors during the self-cleaning cycle.
 4. Make sure the oven door is completely closed.
 5. Press the **CLEAN** key.
 6. Press the **UP** and **DOWN TIME** keys to adjust the Self-Clean time from 2 - 4 hours.




The control panel automatically locks the oven door during self-cleaning. The latch prevents the door from being opened since the high interior oven temperatures can easily cause injury.

After the Self-Clean cycle is complete reinstall the oven racks. You may also notice a powder ash in the bottom of the oven after self-cleaning. This is normal. Use a damp cloth or sponge to wipe up the residue after the oven cools down.

Cleaning the Cooktop

To keep the cooktop looking and operating its best, clean it after every use. Also, quickly wipe up spills that occur while cooking. Be careful not to touch any hot areas. Spills that remain on hot burner parts will be very difficult to clean.

Use only a sponge, soft cloth, fibrous or plastic, or nylon pad for cleaning the surfaces of your range. Avoid the use of abrasive cleaners. For extremely stubborn stains, you may use a mild abrasive cleaner or applicator. Use with extreme care and only on occasion. Extensive use of abrasive cleaners will eventually damage the ranges surfaces.

Cleaning the Burner Components

Remove anything stuck in the holes with a straightened paper clip, wire, or needle. Be careful not to scratch or damage the burner components.

Soak the burner components in a warm solution of hand dishwashing liquid and water. Rinse well with clean water. Dry the burner components thoroughly.

Cleaning the Control Panel

To avoid accidentally turning on the oven on while cleaning the control panel, activate the lock-out feature. Press the **LOCK** key for 6 seconds. The lock-out feature disables the control panel keys. When the control panel is locked, the control panel will display the word OFF.



CAUTION

- Do not use abrasive cleaners or scrubbers on the control. They will permanently damage the finish.

When you want to re-activate the control panel, press the **LOCK** key for 6 seconds.

Clean the control panel with a soft dampened sponge with a mild solution of detergent and warm water. Dry the control panel completely with a soft lint-free cloth.

Cleaning Stainless Steel Surfaces

Clean with a soft dampened sponge with a mild solution of detergent and warm water. Rinse and dry completely with a soft lint-free cloth.

CAUTION

- Always wipe stainless steel surfaces with the grain. To prevent scratching, do not use abrasive cleaners or scrubbers on stainless steel surfaces.

Cleaning Glass (Interior and Exterior)

Use a mild glass cleaner to remove finger prints on glass surfaces. You can also clean glass surfaces with Cooktop Cleaning Cream. Use according to manufactures directions.

Section 6
Before Calling For Service

<u>PROBLEM</u>	<u>POSSIBLE CAUSE</u>	<u>WHAT TO DO</u>
Nothing works	Range not connected to electrical power.	Have electrician connect range to properly wire electrical connection.
	Power to range is off	Turn power on at the junction box. Check for tripped circuit breaker or blown fuse.
	Control panel locked.	Press LOCK key for 6 seconds to reactivate control panel.
	Power outage	Contact power company
Oven will not heat.	Oven setting not correct.	
	Oven set for delay timed cooking	
Time on display not correct	Time of day not set	Set time
	Power failure or power was turned off.	Reset time
Time flashes on display	Power failure or power was turned off	Reset time
Oven does not self-clean	Door not shut correctly	Check of obstructions.

**Specifications contained within are subject to change without notice.
No liability is assumed by American Range Corporation for changes in specifications.**

The information and images in this book are the copyright property of American Range Corporation. Neither this book nor any information or images contained herein may be copied or used in whole or in part without the express written permission of American Range Corporation.

©2010 American Range Corporation - All Rights Reserved.