


⚠ WARNING

Before using the dishwasher, read carefully and follow the safety instructions in the Use and Care Manual.

- 1 On/Off button
- 2 Half Load indicator led
- 3 Salt level indicator led *
- 4 Start/Pause/Cancel indicator led
- 5 Start/Pause/Cancel button
- 6 Time Delay button
- 7 Time Delay indicator led
- 8 Rinse aid level indicator led
- 9 Remaining Time Indicator/Delay Time Indicator
- 10 Tablet Detergent indicator

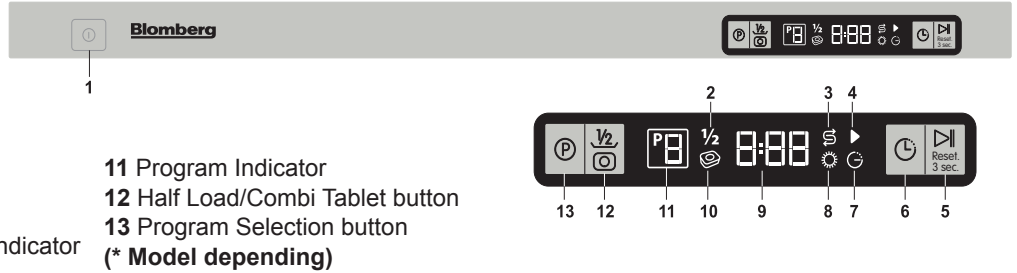

- 11 Program Indicator
 - 12 Half Load/Combi Tablet button
 - 13 Program Selection button
- (* Model depending)

HOW TO USE YOUR DISHWASHER:

1. Open the door and load the dishwasher.
2. Check that both upper and lower spray arms move freely.
3. Pour correct amount of detergent into the detergent dispenser and close the lid.
4. Push in the On/Off button 1 and check that the display lights come on.
5. Check the rinse aid level indicator led. 8 If necessary, refill rinse aid.
6. Check the salt level indicator led. 3 If necessary, refill salt. (model depending)
7. Use the programme selection button 13 to choose your washing programme.
 - When there are few dishes, additionally use the Half load button.
 - Depending on the hardness level of the tap water, the Tablet Detergent function allows better drying and washing performance from the multi-purpose tablets.

8. Start the program with the Start/Pause/Cancel button 5.
9. Close the door and the program will start.
10. When the wash program has ended, an electronic beep will sound and will continue every 10 seconds. After 2 minutes of elapsed time the sound will stop. The beep can be stopped also by opening the door or by pressing the On/Off button 1.
11. Press the On/Off button 1 and open the door after the program is completed. The indicator lights will go off.
12. Allow your dishes to cool for 15 minutes, with the door open.
13. Unload the dishes. Begin with the lower rack.


⚠ CAUTION
 Avoid opening the door during the washing process. This interrupts the washing process, and hot steam will escape. Hot steam can cause burns and other serious injuries. When the door is closed, the program will continue.

PROGRAM TABLE

Program number		1	2	3	4 Reference*	5	6	7
Program name		Rinse & Hold	Quick Wash	China/Crystal	Regular Wash	Pots & Pans	Pots & Pans Plus	Auto
Wash Temperatures	(°F)	-	113	122	122	158	158	113-149
	(°C)	-	45	50	50	70	70	45 - 65
Rinse Temperatures	(°F)	-	131	149	142 - 145	158	167	149
	(°C)	-	55	65	61 - 63	70	75	65
Degree of dirtiness		-	Few	Few	Medium	High	High	Few - High
Detergent in dispenser section	15 ml	-	+	-	-	-	-	-
	15-25 ml	-	-	+	+	+	+	+
	+ 5 ml	-	-	-	+	+	+	-
Recommended detergent amount	Hard water	ml	15-25	25	25-40	40	40	25-40
		tsp	3-5	5	5-8	8	8	5-8
	Medium water	ml	15	15-25	25	40	40	15-40
		tsp	3	3-5	5	8	8	3-8
	Soft water	ml	15	15	15-25	25-40	25-40	15-40
		tsp	3	3	3-5	5-8	5-8	3-8
Program process		Wash ↓ End	Main wash ↓ Rinse ↓ Final rinse ↓ End	Main wash ↓ Rinse ↓ Final rinse ↓ Dry ↓ End	Wash ↓ Main wash ↓ Rinse 1 ↓ Rinse 2 ↓ Final Rinse ↓ Dry ↓ End	Wash ↓ Main wash ↓ Rinse ↓ Final Rinse ↓ Dry ↓ End	Wash ↓ Main wash ↓ Rinse 1 ↓ Rinse 2 ↓ Final Rinse ↓ Dry ↓ End	The programme process is adapted to the degree to which the dishes are dirtied
Duration (minutes)		12	34	65	100 - 135	101	120	100 - 135
Water (gallons)		1,2	3,1	3,1	2,38 - 4,70	4,3	5,3	2,43 - 4,7
Water (liters)		4,4	11,8	11,8	9,0 - 17,8	16,2	20,2	9,2 - 17,8

The consumption values shown in the table were determined under standard conditions. For this reason, deviations are possible under practical conditions.
 * The energy-usage label is based on this program.

- 1 On/Off button
- 2 Half Load indicator led
- 3 Salt level indicator led *
- 4 Start/Pause/Cancel indicator led
- 5 Start/Pause/Cancel button
- 6 Time Delay button
- 7 Time Delay indicator led
- 8 Rinse aid level indicator led
- 9 Remaining Time Indicator/Delay Time Indicator
- 10 Tablet Detergent indicator

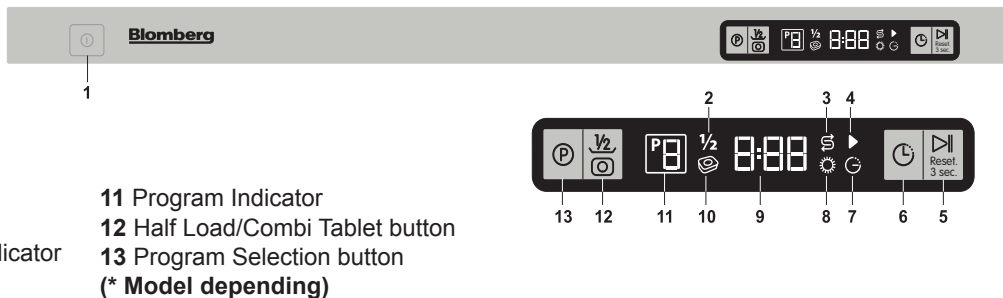

- 11 Program Indicator
- 12 Half Load/Combi Tablet button
- 13 Program Selection button
- (* Model depending)

ON/OFF BUTTON

Turn the dishwasher on with the On/Off button. When turning on, the icon on the display module of the last used program will light up.

PROGRAM SELECTION BUTTON

Use the Program Selection button to select the desired program. The icon of the corresponding program will light up. Refer to "Table of Programme Data and Average Consumption Values" to select a programme suitable for your dishes. Select the desired programme with programme selection button.

HALF LOAD/TABLET DETERGENT BUTTON

Half Load/Tablet Detergent Button allows you to turn on and off the Half Load and Tablet Detergent functions of your machine.

START/PAUSE/CANCEL BUTTON

Use this button to start the selected program. When the button is pressed once, the light on the button will turn on. Stop the program with the Start/Pause/Cancel button.

REMAING TIME INDICATOR/DELAY TIME INDICATOR

You can follow the remaining program duration from the time indicator display.

TIME DELAY BUTTON

This option enables you to start the selected program with a delay of 0,5 to 9,5 hours.

1. Delay time is adjusted by pressing the Time Delay button (press several times).
2. After adjusting the delay time, press the Start/Pause/Cancel button.
3. Close the door. At the end of the delay set, the program starts automatically.

Notice :

During a wash program the Time Delay option does not function.

CANCELLATION OF A PROGRAM

To cancel a program while the dishwasher is running:

1. Open the door gently.
2. Press and hold Start/Pause/Cancel button for 3 seconds. The indicator light will start flashing.
3. Close the door.
4. The dishwasher will drain the water inside the machine for 2 minutes. At the end of the cycle a beep will sound. You can choose and start a new program.

WARNING

Depending on the stage of the program you have cancelled, there may be detergent residue or rinse aid inside the machine and on the dishes. Make sure the items in the dishwasher are not used before washing properly. Ingestion or inhalation of detergent or rinse aid may cause serious injury. Avoid contact with skin and eyes and keep children and infirm persons away from these materials.

PROGRAM CHANGE

To change the program selection while the dishwasher is running:


1. Open the door.
2. Press Start/Pause/Cancel and select a new program.
3. Press Start/Pause/Cancel again, to start.

WARNING


Depending on the length of the terminated program detergent and rinse aid may still be in the dispensers.

Ingestion or inhalation of detergent or rinse aid may cause serious injury. Avoid contact with skin and eyes, and keep children and infirm persons away from these materials.

8 RINSE AID LEVEL INDICATOR LED

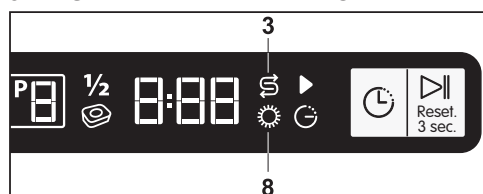



Visual indicator

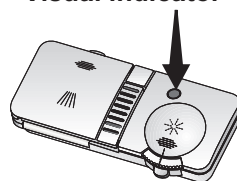

Dark : Sufficient rinse aid
Light : Refill rinse aid

If this indicator light comes on, you need to refill rinse aid. You can also tell whether rinse aid must be refilled by looking at the rinse aid dispenser. When the visual fill indicator is dark, there is enough rinse aid in the dispenser. When the color is light, open the dispenser and refill rinse aid.

3 SALT LEVEL INDICATOR LED (MODEL DEPENDING)

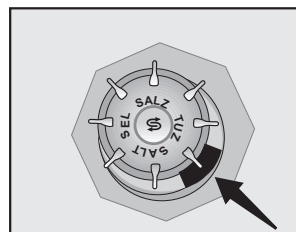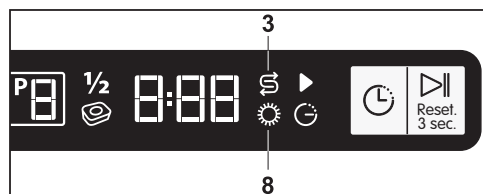

When this indicator light comes on, you must refill special salt. Only use special dishwasher salt in your machine to soften the water. The salt content can be read on the container for the salt. When the visual fill indicator is dark, there is enough salt in the container. When the color is light, open the container and add dishwasher salt.

CHANGING WARNING SOUND VOLUME

Press and hold Half Load / Tablet Detergent key for 5 seconds until S:03 appears on the display. Every time you press the Half Load / Tablet Detergent key, the warning sound level will change as - - Off, S:01 Low, S:02 Medium, and S:03 High. After selecting the sound volume, wait for 10 seconds to save it. Factory setting of your machine is S:03.