


USER INTERFACE CONNECTION PORTS / PUERTOS DE CONEXIÓN DEL USER INTERFACE			
PORT NAME / NOMBRE PUERTO	UI1	UI2	UI3
YL230	-	X32	-
YL231	-	X14.1	-
YL238	-	X32	-

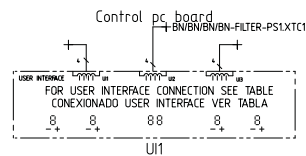

INDUCTOR	NTC_FS CONNECTION ONLY FOR FRYING SENSOR FUNCTION			
	ELECTRONIC BOARD EB1	ELECTRONIC BOARD EB2	XNTC2	XNTC5
I5	-	-	-	X

COLOURS IEC 60757				
Blue / Azul	BU	Orange / Naranja	OG	
Brown / Marrón	BN	Pink / Rosa	PK	
Black / Negro	BK	Turquoise / Turquesa	TQ	
White / Blanco	WH	Grey / Gris	GY	
Red / Rojo	RD	Violet / Violeta	VT	
Green / Verde	GN	Gold / Oro	GD	
Yellow / Amarillo	YE	Silver / Plata	SR	
Green-Yellow / Verde-Amarillo		GN YE		

I5 and I6 inductor connection can also be made exchanging the wire that is connected to the other terminal of the inverter.
(That is between XC1-QX1 and between XQ2-XC2)

9001304644 -9703