

HSD5051UC Stainless Steel

The storage drawer is designed to match the perfectly flush fit of a Bosch wall, speed or steam oven.

Features & Benefits

The storage drawer fits 30" racks, the meat probe and other cooking relevant utensils.

A silicone mat protects the bottom of drawer.

Installs vertically under Bosch speed, steam or wall oven.

Matches Bosch built-in products. Install either flush or proud.

General Properties	
Door opening	Push to Open
Hinges	Ball bearing hinges
Capacity	
Cavity capacity (cu. ft.)	2.4 cu. ft.
Dimensions & Weight	
Overall appliance dimensions (HxWxD) (in)	9 7/16" x 29 3/4 x 23 1/2"
Required cutout size (HxWxD) (in)	9 1/4" x 28 1/2" x 23 1/2"
Net weight (lbs)	47 lbs
Accessories-Included	
Installation brackets	Installation brackets to install drawer below speed or steam oven in one cut out (identical to single wall oven cut out)
Drawer mat	Rubber mat to protect bottom of drawer










For help and assistance with Bosch accessories please call 1-800-944-2904 Mon-Fri 8am to 6pm EST


Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout. Applicable product warranty can be found in accompanying product literature or you may contact your account manager for further details.

Warranties: Bosch warrants that the Product is free from defects in materials and workmanship for a period of three hundred and sixty-five (365) days from the date of purchase. The foregoing timeline begins to run upon the date of purchase, and shall not be stalled, tolled, extended, or suspended, for any reason whatsoever. This Product is also warranted to be free from cosmetic defects in material and workmanship (such as scratches of stainless steel, paint/porcelain blemishes, chip, dents, or other damage) to the finish of the Product, for a period of thirty (30) days from the date of purchase or closing date for new construction. This cosmetic warranty excludes slight color variations due to inherent differences in painted and porcelain parts, as well as differences caused by kitchen lighting, product location, or other similar factors. This cosmetic warranty specifically excludes any display, floor, "As Is", or "B" stock appliances.



Installation Details

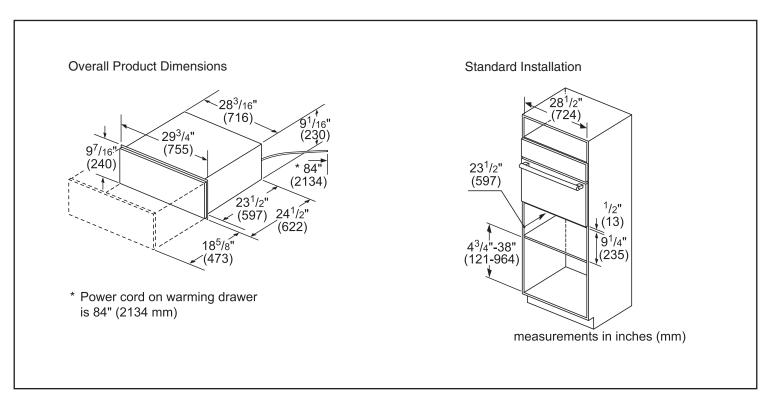

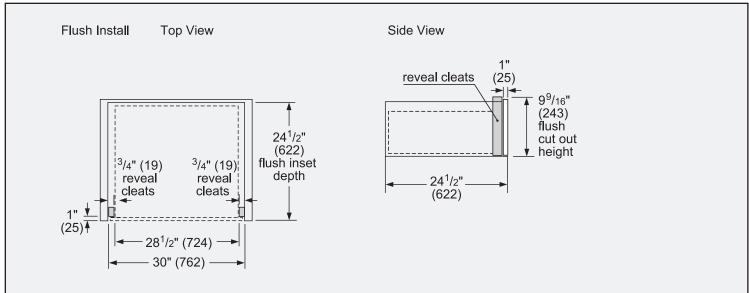

For help and assistance with Bosch accessories please call 1-800-944-2904 Mon-Fri 8am to 6pm EST


Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout. Applicable product warranty can be found in accompanying product literature or you may contact your account manager for further details.

Warranties: Bosch warrants that the Product is free from defects in materials and workmanship for a period of three hundred and sixty-five (365) days from the date of purchase. The foregoing timeline begins to run upon the date of purchase, and shall not be stalled, tolled, extended, or suspended, for any reason whatsoever. This Product is also warranted to be free from cosmetic defects in material and workmanship (such as scratches of stainless steel, paint/porcelain blemishes, chip, dents, or other damage) to the finish of the Product, for a period of thirty (30) days from the date of purchase or closing date for new construction. This cosmetic warranty excludes slight color variations due to inherent differences in painted and porcelain parts, as well as differences caused by kitchen lighting, product location, or other similar factors. This cosmetic warranty specifically excludes any display, floor, "As Is", or "B" stock appliances.


For more information on our entire line of products, go to www.bosch-home.ca or call 1-800-944-2904



Installation Details

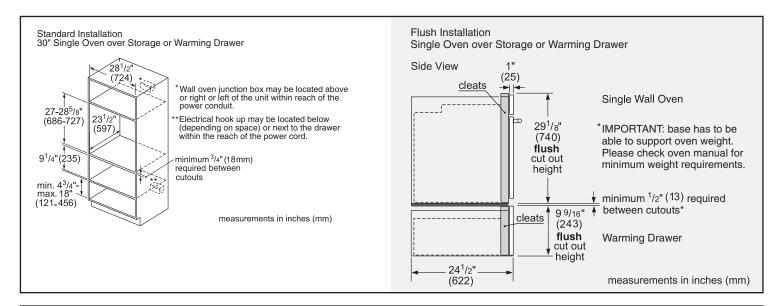

Standard Installation 30" Double Oven over Storage or Warming Drawer

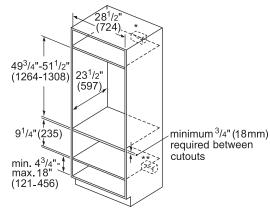

measurements in inches (mm)

- *Wall oven junction box may be located above or right or left of the unit within reach of the power conduit.
- **Electrical hook up may be located below (depending on space) or next to the drawer within the reach of the power cord.

Flush Installation Double Oven over Storage or Warming Drawer Side View (25)cleats Double Wall Oven 52³/16" (1326)flush cut out height *IMPORTANT: base has to be able to support oven weight. Please check oven manual for minimum weight requirements. minimum $^{1}/_{2}$ " (13) required between 99/16" cutouts* cleats (243)flush Warming Drawer cut out height 24¹/2" (622)measurements in inches (mm)

For help and assistance with Bosch accessories please call 1-800-944-2904 Mon-Fri 8am to 6pm EST


Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout. Applicable product warranty can be found in accompanying product literature or you may contact your account manager for further details.

Warranties: Bosch warrants that the Product is free from defects in materials and workmanship for a period of three hundred and sixty-five (365) days from the date of purchase. The foregoing timeline begins to run upon the date of purchase, and shall not be stalled, tolled, extended, or suspended, for any reason whatsoever. This Product is also warranted to be free from cosmetic defects in material and workmanship (such as scratches of stainless steel, paint/porcelain blemishes, chip, dents, or other damage) to the finish of the Product, for a period of thirty (30) days from the date of purchase or closing date for new construction. This cosmetic warranty excludes slight color variations due to inherent differences in painted and porcelain parts, as well as differences caused by kitchen lighting, product location, or other similar factors. This cosmetic warranty specifically excludes any display, floor, "As Is", or "B" stock appliances.

For more information on our entire line of products, go to www.bosch-home.ca or call 1-800-944-2904




Installation Details

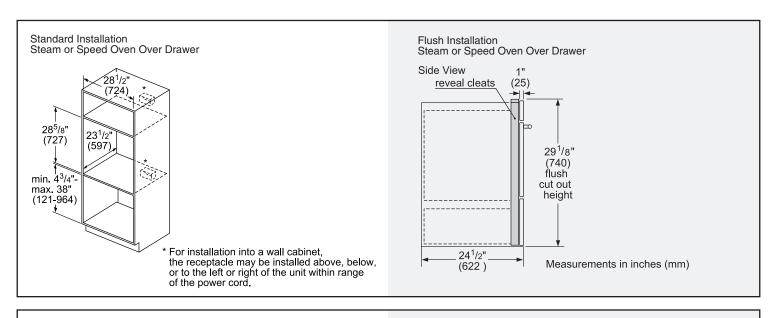

Flush Installation

Standard Installation Combination Oven over Storage or Warming Drawer

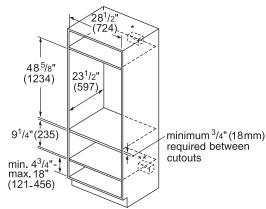

measurements in inches (mm)

- *Wall oven junction box may be located above or right or left of the unit within reach of the power conduit.
- **Electrical hook up may be located below (depending on space) or next to the drawer within the reach of the power cord.

Combination Oven over Storage or Warming Drawer Side View cleats Combination Wall Oven 49¹/8' (1248)flush cut out height * IMPORTANT: base has to be able to support oven weight. Please check oven manual for minimum weight requirements. minimum $^{1}/_{2}$ " (13) required between 9 9/16" cutouts' <u>cleats</u> (243)Warming flush cut out Drawer height 24¹/2" measurements in inches (mm) (622)

For help and assistance with Bosch accessories please call 1-800-944-2904 Mon-Fri 8am to 6pm EST

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout. Applicable product warranty can be found in accompanying product literature or you may contact your account manager for further details.

Warranties: Bosch warrants that the Product is free from defects in materials and workmanship for a period of three hundred and sixty-five (365) days from the date of purchase. The foregoing timeline begins to run upon the date of purchase, and shall not be stalled, tolled, extended, or suspended, for any reason whatsoever. This Product is also warranted to be free from cosmetic defects in material and workmanship (such as scratches of stainless steel, paint/porcelain blemishes, chip, dents, or other damage) to the finish of the Product, for a period of thirty (30) days from the date of purchase or closing date for new construction. This cosmetic warranty excludes slight color variations due to inherent differences in painted and porcelain parts, as well as differences caused by kitchen lighting, product location, or other similar factors. This cosmetic warranty specifically excludes any display, floor, "As Is", or "B" stock appliances.

For more information on our entire line of products, go to www.bosch-home.ca or call 1-800-944-2904