

LEGEND/LEYENDA/LEGENDE

SW. - SWITCH/INTERRUPTOR/INTERRUPTEUR
 R.F. - RIGHT FRONT/FRENTE DERECHO/AVANT DROIT
 R.R. - RIGHT REAR/TRASERO DERECHO/ARRIERE DROIT
 L.F. - LEFT FRONT/FRENTE IZQUIERDO/AVANT GAUCHE
 L.R. - LEFT REAR/TRASERO IZQUIERDO/ARRIERE GAUCHE
 P.L. - PILOT LIGHT/LAMPARA PILOTO/LAMPE TEMOIN

COLORS

BK. - BLACK/NEGRO/NOIR
 G. - GREEN/VERDE/VERT
 W. - WHITE/BLANCO/BLANC
 R. - RED/ROJO/ROUGE
 O. - ORANGE/NARANJA/ORANGE
 Y. - YELLOW/AMARILLO/JAUNE
 BR. - BROWN/MORENO/BRUN
 BL. - BLUE/AZUL/BLEU

 
CODE	GAUGE	TEMP.°C	CSA	UL
1	18	125	CL1251	3173
2	16	125	CL1251	3173
3	14	125	CL1251	3173
4	12	125	CL1251	3173
5	18	150	EXL-150	3321
6	16	150	EXL-150	3321
7	14	150	EXL-150	3321
8	12	150	EXL-150	3321
9	10	150	EXL-150	3321
10	18	200	SEW-1	3122
11	16	200	SEW-1	3122
12	12	250		3252
13	16	250		3252
14	20	150	EXL-150	3321
15	8	150	EXL-150	3321
16	8	60		
17	10	60		
18	10	200	SEW-1	3122
19	20	125	CL1251	3173

**UNIT RATING
CALIBRACION DEL ELECTRODOMESTICO
CALIBRE DE L'APPAREIL**


RATED VOLTAGE/VOLTAJE NOMINAL/
TENSION NOMINALE: 240 V.

OVEN ELEMENTS ELEMENTO DE HORNO ELEMENTS DU FOUR	WATTS	OHMS
	+5% &-10%	
BAKE/HORNO/CUISSON	2400	24
	3000	19.2
	3400	14.2
BROIL/ASADO/GRIL	2750	20.8

**CONNECTOR/CONECTOR/
CONNECTEUR B OR C**



**CONNECTOR/CONECTOR/
CONNECTEUR A**

 

**CAUTION: DISCONNECT CURRENT BEFORE REMOVING REAR COVER.
 ATENCION: CORTAR EL CORRIENTE ANTES DE REALIZAR EL MANTENIMIENTO DEL ELECTRODOMESTICO.
 ATTENTION: COUPEZ L'ALIMENTATION AVANT D'EFFECTUER LA REPARATION.**

318271902 REV:C