NO LOAD & NO DOO		AT MID-PO		ROL SET	TING		
Type A With Run/Start Capacitor	65°F (18°C	) Ambient	90°F (32°C) Ambient				
Operating Time	25 to	35%	40 to 55%				
Freezer Temperature	2° to 8°F (-17	7° to -13°C)	0° to 5°F (-18° to -15°C)				
Refrigerator Temperature	35° to 40°F	(2° to 4°C)	35° to	35° to 40°F (1° to 4°C)			
Low Side Pressure (cut-in)	8 to 16 psig (5	55 to 110 kPa)	8 to 16	8 to 16 psig (55 to 110 kPa)			
Low Side Pressure (cut-out)	1 to 4 psig (7	7 to 28 kPa)	1 to 4 psig (7 to 28 kPa)				
High Side Pressure (last 1/3 cycle)	110 to 1: (758 to 8		150 to 175 psig (1034 to 1207 kPa)				
Wattage (last 1/3 cycle)	95 to	115		95 to 125			
Amps (running)	0.9 to	1.10		0.9 to 1.20	)		
Base Voltage	115 vac (12	7 vac max)	115 \	vac (127 vac	c max)		
Refrigerant Charge	18' = 4.	25 oz. (121 g)	/ 20' & 21' = 4.75 oz. (135 g)				
	DEFROST SF	PECIFICATIO	NS				
	Safety The	ermostat	Heater		Defrost Thermis- tor		
Cabinet Size: 18'/20'/21'	Cut-in	Cut-out	Watts	Ohms	Termina- tion		
	110°F (43.3°C)	135°F (57.2°C)	375	35	47°F (8.3°C)		
	CONDENSE	R FAN MOT	OR				
Watts	RP	М	Amps				
3.1	1100 CW Opposite Shaft		0.03 Running				
	<b>EVAPORATO</b>	R FAN MOT	OR				
Watts	RP	M	Amps				
3.2	2600 CW		0.05 Running				
[(	CE MAKER S	PECIFICATI	ONS				
Electrical	115 vac (12	7 vac max)	60 Hertz				
Thermostat	Opens at 48°F (9°C)		Closes at 15°F ( -9°C) (ice maker				
Heater Wattage	165 ·	vac	with black housing) 9°F (-13°C) (ice maker with white housing)				
ICE MAKE	R CONNECT	OR PLUG C	ONNECTIO	ONS			
Wire Number	Wire C	Color	Connects to:				
1	Green /	Yellow	Ground				
2	Yello	OW	Water Valve				
3	Blac	ck	Line				
4	Light	Blue	Neutral				

**PERFORMANCE DATA** 

# ICE MAKER INFORMATION

**Test Cycling:** Remove cover by inserting screwdriver in notch at

bottom and prying cover from housing. Use screwdriver to rotate motor gear counterclockwise until holding switch circuit is completed. All components of ice maker should function to complete the cycle.

**Water Fill Volume:** The water fill adjustment screw will change the fill time. One full turn is equal to 20cc (.68 oz.). The correct fill is 102 to 130cc (3.4 to 4.3 oz.). When a water valve is replaced, the fill volume must be checked.

## **SERVICE DATA SHEET**

A02609401

# STANDARD - AUTOMATIC DEFROST WITH LED TOP MOUNT FREEZER - R134a

## **IMPORTANT SAFETY NOTE**

The information provided herein is designed to assist qualified repair personnel only. Untrained persons should not attempt to make repairs due to the possibility of electrical shock. Disconnect power cord before servicing this appliance.

#### IMPORTANT

If any green grounding wires are removed during servicing, they must be returned to their original position and properly secured.

# **⚠** CAUTION


heater at 135°F.

All electrical parts and wiring must be shielded from torch flame. DO NOT allow torch to touch insulation; it will char at 200°F and flash ignite (burn) at 500°F. Excessive heat will distort the plastic liner.

	DOOR AJAR ALARM				
Condition:	Fresh Food Door is left open for more than 5 minutes and alarm sounds.				
Duration:	Alarm will sound for 2 minutes, then stop. If the "Door Ajar" condition remains the alarm will repeat every 30 minutes for two intervals.				
Fresh Food Light:	at: After 15 minutes of "Door Ajar" condition, the Fresh Food light will turn off.				
Reset:	Close the Fresh Food door or Press the Fresh Food Door switch.				
MANUAL DEFROST					
Unit will complete normal defrost cycle.					
enter	> Press the FF door switch 5 times in 2 secs.; Alarm sounds 5 short beeps to acknowledge MANUAL DEFROST.				
exit	> Cycle power to the unit or enter and exit SERVICE MODE. (See SERVICE MODE)				

Defrost is terminated when defrost thermistor located on the evaporator coil reaches 47°F.


Safety Thermostat in the defrost circuit is a safety device only. It will interrupt power to the defrost

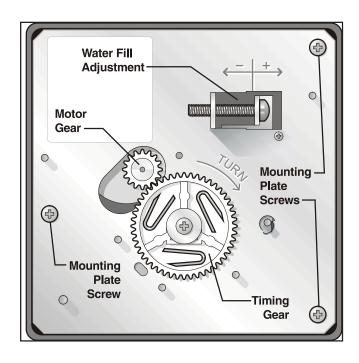

## **IMPORTANT**

#### PLEASE RETURN THIS SHEET TO ITS ORIGINAL LOCATION.

SERVICE MODE						
SERVICE MODE will step through available tests to diagnose individual electrical circuits. Fresh Food compartment light will be OFF while in SERVICE MODE.						
enter/exit		> Press the door switch 3 times and hold the 4th press until 1 long beep is heard. The door switch must be pressed 4 times in 2 seconds.				
initiate first/next test		> Press the door switch 2 times; 2 short beeps acknowledge selection.				
1	Compressor	Press the FF door switch twice to start the first test. In each test, the				
2	Heater	component listed will be powered on. The component will stay powered until the next test is activated, or until 5 minutes of inactivity expire. Listen				
3	FF Light	for operating sounds; feel for heat or air flow, as appropriate, to determine the result of each test. Press the FF door switch twice again to advance				
4	Evaporator Fan	between tests. Two beeps will sound to confirm the next test has started.				

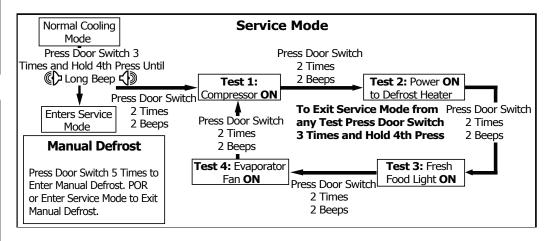

TEMPERATURE/RESISTANCE CHART FOR FRESH FOOD THERMISTOR AND DEFROST THERMISTOR							
°F	kOHMS	°F	kOHMS	°F	kOHMS	°F	kOHMS
-10	83.88	11	47.25	32	27.20	53	16.87
-9	81.56	12	46.02	33	27.04	54	16.49
-8	79.32	13	44.84	34	26.38	55	16.13
-7	77.15	14	43.67	35	25.75	56	16.77
-6	75.04	15	42.55	36	25.13	57	15.41
-5	73.02	16	41.45	37	24.53	58	15.07
-4	71.02	17	40.39	38	23.95	59	14.74
-3	69.08	18	39.36	39	23.38	60	14.42
-2	67.16	19	38.36	40	22.83	61	14.10
-1	65.34	20	37.39	41	22.29	62	13.79
0	63.55	21	36.44	42	21.77	63	13.49
1	61.82	22	35.53	43	21.26	64	13.21
2	60.15	23	34.63	44	20.77	65	12.92
3	58.20	24	33.78	45	20.29	66	12.65
4	56.97	25	32.94	46	19.83	67	12.38
5	55.43	26	32.13	47	19.37	68	12.11
6	53.97	27	31.33	48	18.92	69	11.85
7	52.53	28	30.57	49	18.49	70	11.60
8	51.16	29	29.83	50	18.07	71	11.36
9	49.81	30	29.10	51	17.66	72	11.12
10	48.51	31	28.39	52	17.26	73	10.88

