

LG REMOTE LAUNDRY MONITOR RLM10 and MODEM PLC10
PROCEDURE FOR FIXING REMOTE: Single or Multiple Remote set up.
REVISION 2.0 – Oct 16 2006

For multiple remotes, skip to PROCEDURE 3) and 4)

SINGLE REMOTE PROCEDURE:

"I have one Remote Laundry Monitor in my house, it is not working. What should I do?"

If the remote is not working follow PROCEDURE 1) and if necessary PROCEDURE 2) below:
(Procedures must be followed exactly as below to work properly)

Note: make sure modems (part # PLC10) are attached to the back of the washer and dryer.

PROCEDURE 1): Set the home code:

STEPS:

1-A) Plug in the remote.

1-B) Plug in both the washer and dryer.

1-C) Press and hold the button on the Remote until it says "SET".

1-D) Check if the remote is now working by turning on the washer, choose a cycle, and wait for a few seconds, the remote should light up with information about the wash cycle. If the remote is still blank, perform procedure # 2)

PROCEDURE 2): If Procedure 1) did not work follow these steps:

→ Clear the Home Code on the Modem:

2-A) On the washer panel, Press EXTRA RISE and STAIN CYCLE at the same time – then press POWER while holding the other 2 buttons.

The Washer display will Show "Hcr" for Home Code Clear.

2-B) On the Dryer press WRINKLE CARE and ANTI BACTERIAL at the same time – then press POWER while holding the other 2 buttons.

The Dryer display will eventually show "Hcr" for Home Code Clear.

→ Clear the Home Code on the Remote:

2-C) Press the button on the Remote 7 times, hold for 3 seconds on 7th press.

You will see "18:88<==>1LP1" flashing on the remote screen.

2-D) Press the button on the remote one more time.

You will see "Test==>ERR" on the remote screen.

2-E) Press the button once on the remote to remove the "ERR" code.

→ Set the Home Code on the Remote:

2-F) Make sure the remote and the washer and dryer are all plugged in.

2-G) Press and hold the button on the Remote until it says "SET".

2-H) Check if the remote is now working by turning on the washer, choose a cycle, and wait for a few seconds, the remote should light up with information about the wash cycle. Procedure is now complete!

PROCEDURE FOR FIXING MULTIPLE REMOTES: Multiple Remote set up.

"I have multiple Remotes in my house, and one or more are not working, what should I do?"

If one or more of the remotes are not working follow PROCEDURE 3) and 4) below:

(procedure must be followed exactly as below to work properly)

Note: make sure modems (part # PLC10) are attached to the back of the washer and dryer.

PROCEDURE 3) Setting the home code:

3-A) Plug in the remotes.

3-B) Plug in both the washer and dryer.

3-C) Press and hold the button on ONLY ONE of the Remotes until it says "SET".

3-D) Check if all the remotes are now working by turning on the washer, choose a cycle, and wait for a few seconds, all the remotes should light up at the same time with information about the wash cycle.

PROCEDURE 4): If Procedure 3) did not work try the following:

→ Clear the Home Code on the Modems:

4-A) On the washer panel, Press EXTRA RISE and STAIN CYCLE at the same time – then press POWER while holding the other 2 buttons

The Washer display will show "Hcr" for Home Code Clear.

4-B) On the Dryer press WRINKLE CARE and ANTI BACTERIAL at the same time – then press POWER while holding the other 2 buttons

The Dryer display will eventually show "Hcr" for Home Code Clear.

→ Clear the Home Code on the Remotes:

This step must be done one remote at a time.

4-C) Press the button on one of the Remotes 7 times, hold for 3 seconds on 7th press.

You will see "18:88<==>1LP1" flashing on the remote screen.

4-D) Press the button on the remote one more time.

You will see "Test==>ERR" on the remote screen.

4-E) Press the button once on the remote to remove the "ERR" code

Repeat STEP 4-C, 4-D, 4-E for all remaining Remotes.

→ Set the 'Home Code' on ONLY ONE of the Remotes:

4-F) Make sure the remotes and the washer and dryer are all plugged in.

4-G) Press and hold the button on ONLY ONE of the Remotes until it says "SET".

4-H) Check if the remotes are now working by turning on the washer, choose a cycle, and wait for a few seconds, all the remote should light up with information about the wash cycle. Procedure is now complete!