

# MICROWAVE OVEN USER MANUAL

## imagine the possibilities



Thank you for purchasing this Samsung product. Please register your product at [www.samsung.com/register](http://www.samsung.com/register)

If you should experience a problem not covered in TROUBLESHOOTING, please visit our website at [www.samsung.com](http://www.samsung.com) for additional information. [Samsung Contact Center : 1-800-SAMSUNG (726-7864)]

## Microwave Hood Combination Safety

### Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

 <b>WARNING</b>	Hazards or unsafe practices that may result in <b>severe personal injury or death.</b>
 <b>CAUTION</b>	Hazards or unsafe practices that may result in <b>minor personal injury or property damage.</b>

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
  - (1) Door (bent),
  - (2) Hinges and latches (broken or loosened),
  - (3) Door seals and sealing surfaces.
- (d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances basic safety precautions should be followed, including the following:

### **WARNING**

To reduce the risk of burns, electric shock, fire, injury to persons, or exposure to excessive microwave energy:

- Read all instructions before using the microwave oven.
- The microwave oven must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS" found in this section and in the provided Installation Instructions.

- Install or locate the microwave oven only in accordance with the provided Installation Instructions.
- Some products such as whole eggs in the shell and sealed containers – for example, closed glass jars – are able to explode and should not be heated in the microwave oven.
- As with any appliance, close supervision is necessary when used by children.
- When flambeing foods under the hood, turn the fan on.

## SAVE THESE INSTRUCTIONS



This manual is made with 100 % recycled paper.

# IMPORTANT SAFETY INSTRUCTIONS

- Use the microwave oven only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in the microwave oven. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
- Do not operate the microwave oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- The microwave oven should be serviced only by qualified service personnel. Call an authorized service company for examination, repair, or adjustment.
- To reduce the risk of fire in the oven cavity:
  - Do not overcook food. Carefully attend the microwave oven when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
  - Remove wire twist-ties from paper or plastic bags before placing bags in oven.
  - If materials inside the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
  - Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
- Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. **THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.**
- To reduce the risk of injury to persons:
  - Do not overheat the liquid.
  - Stir the liquid both before and halfway through heating it.
  - Do not use straight-sided containers with narrow necks.
  - After heating, allow the container to stand in the microwave oven for a short time before removing the container.
  - Use extreme care when inserting a spoon or other utensil into the container.
- Clean Ventilating Hoods Frequently - Grease should not be allowed to accumulate on hood or filter.
- Use care when cleaning the vent-hood filter. Corrosive cleaning agents, such as lye-based oven cleaners, may damage the filter.
- Do not cover or block any openings on the microwave oven.
- Do not store this microwave oven outdoors. Do not use the microwave oven near water - for example, near a kitchen sink, in a wet basement, or near a swimming pool, or similar locations.
- Do not immerse cord or plug in water.
- Keep cord away from heated surfaces.
- Do not let cord hang over edge of table or counter.
- When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergents applied with a sponge or soft cloth.

## CAUTION

- See door surface cleaning instructions in the “Microwave Oven Care” section.
- Oversized foods or oversized metal utensils should not be inserted in the microwave oven as they may create a fire or risk of electric shock.
- Do not clean with metal scouring pads. Pieces can burn off the pad and touch electrical parts involving a risk of electric shock.
- Suitable for use above both gas and electric cooking equipment.
- Intended to be used above ranges with maximum width of 36” (91.44 cm).
- Do not store any materials, other than manufacturer’s recommended accessories, in this oven when not in use.
- Do not store anything directly on top of the microwave oven when the microwave oven is in operation.
- Do not cover racks or any other part of the oven with metal foil. This will cause overheating of the oven.
- Dishes and containers can become hot. Handle with care.
- Hot foods and steam can cause burns. Carefully remove container coverings, directing steam away from your hands and face.
- Remove lids from baby food before heating. After heating baby food, stir well to distribute the heat evenly. Always test the temperature by tasting before feeding the baby. The glass jar or surface of the food may appear to be cooler than the food in the interior, which can be so hot that it will burn the infant’s mouth.
- Do not put your face or body close to the appliance while cooking or when opening the door just after cooking.
  - Take care that children do not come too close to the appliance.
  - Failing to do so may result in children burning themselves.
- Keep children away from the door when opening or closing it as they may bump themselves on the door or catch their fingers in the door.
- Do not try to preheat the oven or operate it while empty.
- Do not cook without the glass tray in place on the oven floor. Food will not cook properly without the tray.
- Do not use sealed containers. Remove seals and lids before use. Sealed containers can explode due to buildup of pressure even after oven has been turned off.

**SAVE THESE INSTRUCTIONS**

# Electrical Requirements

Observe all governing codes and ordinances.

## Required:

- A 120 Volt, 60 Hz, AC only, 15- or 20-amp electrical supply with a fuse or circuit breaker.

## GROUNDING INSTRUCTIONS

- For all cord connected appliances:  
The microwave oven must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. The microwave oven is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.



### WARNING

Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the microwave oven is properly grounded. Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the microwave oven.

**Plug into a grounded 3 prong outlet.**

**Do not use an adapter.**

## Recommended:

- A time-delay fuse or time-delay circuit breaker.
- A separate circuit serving only this microwave oven.



### WARNING

#### State of California Proposition 65 Warnings:

This product contains chemicals known to the State of California to cause cancer and reproductive toxicity.

# Settings

## Clock

The Clock is a 12- or 24-hour clock. Use Control Setup to change mode, or to turn on or off Daylight Saving Time.

12 hour mode: Touch CLOCK, enter time, touch the Start control, select A.M. or P.M., then touch Start control again.

24 hour mode: Touch CLOCK, enter time, then touch the Start control.

## Kitchen Timer

The kitchen timer can be used independently during any cooking program. Touch the Timer control, enter time, then touch the Start control.

## Control Lock (Available only on some models)

Activate to avoid unintended start. Depending on your model, the padlock graphic on the control panel is next to either the Start control or Cancel control. Touch and hold the appropriate control pad until the signal sounds and the lock indicator appears in the display. Repeat to unlock control.

## Eco Mode (Available only on some models)

**Eco Mode** reduces standby power usage.

When you press the **ECO MODE** button once, the display will go out and the microwave shifts to the mode which minimizes power usage.

To cancel the **ECO MODE**, press **ECO MODE** button once again, or press any other button.

## Vent Fan

Can control speed and on/off. Comes on automatically at the low setting when it senses heat from the cooktop below. When this occurs, the vent fan cannot be turned off. It may stay on for up to 1 hour to cool the microwave oven.

Note : The exhaust fan's speed will reduce when the oven's cooking function is activated.

## Cooktop Light

High, low and off. Low setting may be used as night light.

## My Settings/Options

Settings for the following may be changed: Weight (lbs or kg), Sound (on or off), Clock display (12 or 24 hours), Display scroll speed (slow, normal or fast), Remind end signal (on or off), Demo Mode (on or off) and Daylight Saving Time (on or off).

## Tones

Programming tones and signals which can be turned off or on using the Control Setup (My Settings/Options).

## Demo Mode

Activate to practice using the control without actually turning on the magnetron. Use the Control Setup (My Settings/Options) to activate or deactivate.

## Filter reminder (Available only on some models)

The filter is supposed to be cleaned or replaced once every four months. A message of "Filter" appearing on the display reminds users to clean or replace the filter.

To remove the message, touch the number 0 in standby mode, or access My Settings / Options > Filter.

# Features

## Cooking Rack (Available only on some models)

Use only for 2-level cooking. To avoid damage to the microwave oven, always remove rack after 2-level cooking. To avoid damage to the microwave oven due to soil buildup, clean rack supports often.

## Turntable (Available only on some models)

Turntable may be turned off for manual cooking only. This is helpful when cooking with plates that are bigger than the turntable, or when cooking with plates that are side by side. Turntable cannot be turned off during preset or sensor functions.

# Cookware

## Recommended to use

- Browning plate
- Ceramic, Porcelain, Stoneware
- Disposable polyester cardboard
- Fast-food packaging-polystyrene cups/container
- Glassware-Oven-to-table ware, Fine glassware, Glass jars
- Paper-Plates, cups, napkins, kitchen paper, recycled paper
- Plastic-Containers, Clingfilm
- Wax or Grease-proof paper

To Test Cookware: Place dish on turntable with 1 cup of water beside it. Program 1 minute of cook time at 100 %. If dish becomes hot and the water stays cool, do not use the dish in the microwave oven.

## Do Not Use

- Metal-Dishes, Utensils, Freezer bag twist ties, Metallic objects
- Straw or wicker
- Non-approved meat thermometers, skewers
- Fast food packaging-paper bag or newspaper, Recycled paper, Metal trims
- Aluminum foil (Follow manufacturer recommendations.)
- Freezer bag
- Wood

# Microwave Oven Use

For list of preset programs, see the Cooking Guide label on the front facing of the microwave oven opening, behind the door.

## Manual Cooking/Stage Cooking

Touch number pads to enter time, Touch COOK POWER (if not 100 %), touch number pads to enter power level (10-90), then touch the Start control.

If programming additional stages, enter the cook time and cook power of each before touching the Start control.

## Preset Cooking (Sensor)

Touch COOK, select food item (Beverage, Frozen Dinner, Frozen Breakfast or Chicken Breast – see Cooking Guide label), enter quantity if needed, then touch the Start control.

## Preset Reheating (Sensor)

Touch REHEAT, select food item (Dinner Plate, Casserole or Pasta – see Cooking Guide label), enter quantity if needed, then touch the Start control.

## Preset Defrosting

Unwrap food. Touch AUTO DEFROST, enter weight in pounds (0.1 - 6.0), and touch the Start control.

## Soften/Melt

Touch SOFTEN/MELT, select food item (Melt Chocolate, Soften Cream Cheese, Soften Butter or Melt Butter – see Cooking Guide label), enter quantity if needed, then touch the Start control.

## Snack Menu

Touch SNACK MENU, select food item (Nachos, Chicken Wings, Potato Skins or Cheese Sticks – see Cooking Guide label), enter quantity if needed, then touch the Start control.

## Kids Menu

Touch KIDS MENU, select food item (Chicken Nuggets, Hot Dogs, French Fries or Frozen Sandwich – see Cooking Guide label), enter quantity if needed, then touch the Start control.

## Precise Touch Cooking (Sensor)

Touch control for quick access to the following programs:

- POPCORN: senses 3.0 - 3.5 oz (85 - 99 g) bags
- POTATO: senses 1, 2, 3, 4, 5 or 6 potatoes
- PIZZA: senses 1, 2, 3 or 4 slices
- VEGGIE: 1 for Fresh or 2 for Frozen; senses 1, 2, 3 or 4 servings).

## Sensor Cooking

A sensor in the microwave oven detects moisture released from food as it heats, and adjusts the cooking time accordingly.

Make sure microwave oven has been plugged in for at least 3 minutes. Use microwave-safe dish with loose-fitting lid, or cover microwave-safe dish with plastic wrap, and vent.

## Less and More (Available only on some models)

During cooking, touch number pad “1” to subtract cook time in 10-second increments. Each additional touch of the number pad “1” subtracts 10 seconds more from the cook time. Touch number pad “6” to add cook time in 10-second increments. Each additional touch of the number pad “6” adds 10 seconds more to the cook time.

## Add 30 Seconds (One Minute +)

Touch ADD 30 SEC(One Minute +). to start the microwave oven at 100 % power for 30 seconds(One Minute +), or to add time in 30-second(One Minute +) increments to any manual cooking cycle.

To Test Cookware/Dinnerware: Place dish on turntable with 1 cup (250 mL) of water beside it. Program 1 minute of cook time at 100 %. If dish becomes hot and the water stays cool, do not use the dish in the microwave oven.

## Fit Choice

Touch Fit Choice, select food item (Spinach, Squash, Brown Rice, Oatmeal, Quinoa, Bone-in Chicken Pieces, Fresh Fish Fillet, Fresh Salmon Fillet, Fresh Prawns - see Cooking Guide label), enter quantity if needed, then touch the start control.

# Microwave Oven Care

## General Cleaning

**IMPORTANT:** Before cleaning, make sure all controls are off and the microwave oven is cool. Always follow label instructions on cleaning products.

To avoid damage to the microwave oven caused by arcing due to soil buildup, keep cavity, microwave inlet cover, cooking rack supports, and area where the door touches the frame clean.

Clean with mild soap, water and a soft cloth or sponge, or as indicated below.

- Grease filters: mild soap and water or dishwasher.
- Door and exterior: mild soap and water, or glass cleaner applied to paper towel.
- Control panel: sponge or soft cloth and water.
- Stainless steel (on some models): mild soap and water, then rinse with clean water and dry with soft cloth, or use stainless steel cleaner.
- Turntable: mild soap and water or dishwasher.
- Cooking rack and supports (on some models): mild soap, water and washcloth. Dishwasher cleaning is not recommended.

## Replacing Filters and Light Bulbs

- Grease filters: Remove grease filters from underside of microwave oven, and clean monthly.
- Charcoal filter: The charcoal odor filter is behind the vent grille at the top front of the microwave oven. The charcoal filters cannot be cleaned, and should be replaced about every 6 months.
- Cooktop light: The cooktop light is located on the underside of the microwave oven, and is replaceable.
- Cavity light: The cavity light bulb is located behind the vent grille at the top front of the microwave oven, under the bulb cover, and is replaceable.

Do not use benzene, thinner or alcohol to clean the appliance.

- This may result in discoloration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket and remove food waste from the door and cooking compartment.

- Failing to do so may result in electric shock or fire. Do not clean the appliance with a steam cleaner.
- This may result in corrosion.

## Troubleshooting

Check these solutions if you have a problem with your microwave:

Problem	Solution
The display and/or the oven is not working.	Make sure the plug is properly connected to a grounded outlet. If the wall outlet is controlled by a wall switch, make sure the wall switch is turned on. Remove the plug from the outlet, wait ten seconds, and plug it in again. Reset the circuit breaker or replace any blown fuses. Plug a different appliance into the outlet. If the other appliance doesn't work, call a qualified electrician to repair the wall outlet. Plug the oven into a different outlet.
The display is working, but the power won't come on.	Make sure the door is closed securely. Check if any packaging material or anything else is stuck in the door seal. Check if the door is damaged. Touch Cancel twice and enter all the cooking instructions again.
Is the power going off before the set time has elapsed?	If there was a power outage, the time indicator will display: 88:88. If no power outage occurred, remove the plug from the outlet, wait ten seconds, and plug it in again. Reset the clock and any cooking instructions. Reset the circuit breaker or replace any blown fuses.
Cooks food too slowly.	Make sure the oven has its own 20 amp circuit line. Operating another appliance on the same circuit can cause a voltage drop. If necessary, move the oven to its own circuit.
Has sparks or arcing.	Remove any metallic utensils, cookware, or metal ties. If using foil, use only narrow strips and allow at least one inch between the foil and the interior oven walls.
The turntable makes noise or becomes stuck.	Clean the turntable, roller ring and oven floor. Make sure the turntable and roller ring are positioned correctly.
Causes TV or radio interference.	This is similar to interference caused by other small appliances, such as hair dryers. Move your microwave (or appliance) away from appliances, such as your TV or radio.
Vent Motor suction force is too weak.	Set the vent mode to high. The Vent Fan will only operate in low speed mode while the microwave is working.
Operating noise is too loud.	The MWO makes noise during operation. This is normal. If you hear an abnormal sound continuously, please contact the Samsung Call Center (1-800-726-7864).
Cook top lamp is too dim.	Set the lamp brightness level to high.
Difficult to replace Charcoal Filter.	Please refer to the instructions for replacing the charcoal filter in the user's manual.
Turntable rotates improperly.	Make sure you have not put too much food on the turntable. If the food is too large or too heavy, the turntable may operate improperly.

# Replacement Parts and Cleaning Supplies

Following is a list of available parts and supplies which may be purchased separately. Please refer to the cover for contact and model identification information.

## Replacement Parts

- Glass tray
- Roller guide ring  
(Turntable support and rollers)
- Cooking shelf (On some models)

- Grease filters
- Charcoal filter
- Cooktop light bulb
- Cavity light bulb
- Exhaust adaptor

## Cleaning Supplies

- Heavy Duty Degreaser
- All-Purpose Appliance Cleaner
- Stainless Steel Cleaner and Polish

# WARRANTY

## SAMSUNG OVER-THE-RANGE (OTR) MICROWAVE OVEN Limited warranty to original purchaser

This SAMSUNG brand product, as supplied and distributed by Samsung Electronics America, Inc. (SAMSUNG) and delivered new, in the original carton to the original consumer purchaser, is warranted by SAMSUNG against manufacturing defects in materials and workmanship for a limited warranty period of:

### ONE (1) YEAR PARTS AND LABOR, TEN (10) YEARS PARTS WARRANTY FOR MAGNETRON

Samsung will charge a repair fee for replacing an accessory or repairing a cosmetic defect if the damage to the unit and/or damage to or loss of the accessory was caused by the customer. Items this stipulation covers include:

- A Dented, Scratched, or Broken Door, Handle, Out-Panel, or Control Panel
- A Broken or missing Tray, Guide Roller, Coupler, Filter, or Wire Rack

User Replaceable Parts may be sent to the customer for unit repair. If necessary, a Service Engineer can be dispatched to perform service.

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the United States. To receive warranty service, the purchaser must contact SAMSUNG for problem determination and service procedures. Warranty service can only be performed by a SAMSUNG authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to SAMSUNG or SAMSUNG's authorized service center.

SAMSUNG will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above. All replaced parts and products become the property of SAMSUNG and must be returned to SAMSUNG. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.

In-home service will be provided during the warranty labor period subject to availability within the contiguous United States. In-home service is not available in all areas. To receive in-home service, the product must be unobstructed and accessible to service personnel. If during in-home service repair can not be completed, it may be necessary to remove, repair and return the product. If in-home service is unavailable, SAMSUNG may elect, at our option, to provide for transportation of our choice to and from a SAMSUNG authorized service center. Otherwise, transportation to and from the SAMSUNG authorized service center is the responsibility of the purchaser.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, noncommercial use of this product and shall not apply to the following, including, but not limited to: damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by SAMSUNG which damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; problems caused by pest infestations, and overheating or overcooking by user; glass tray or turntable; reduced magnetron power output related to normal aging. SAMSUNG does not warrant uninterrupted or error-free operation of the product.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG. SAMSUNG SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY SAMSUNG NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF SAMSUNG. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some provinces or territories may or may not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To obtain warranty service, please contact SAMSUNG at:

**1-800-SAMSUNG (726-7864) or  
www.samsung.com**

Please be advised that the Samsung warranty does NOT cover service calls to explain product operation, correct improper installation, or perform normal cleaning or maintenance.



Scan the QR code\* or visit  
[www.samsung.com/spsn](http://www.samsung.com/spsn)  
to view our helpful  
How-to Videos and Live Shows

\*Requires reader to be installed on your smartphone

Scan this with your smartphone

Code No.: DE68-03970A-06