




30" BUILT-IN ELECTRIC DOUBLE OVEN

MODELS:

WOD77EC0HB01 (Black)

WOD77EC0HW01 (White)


CONTROL PANEL PARTS

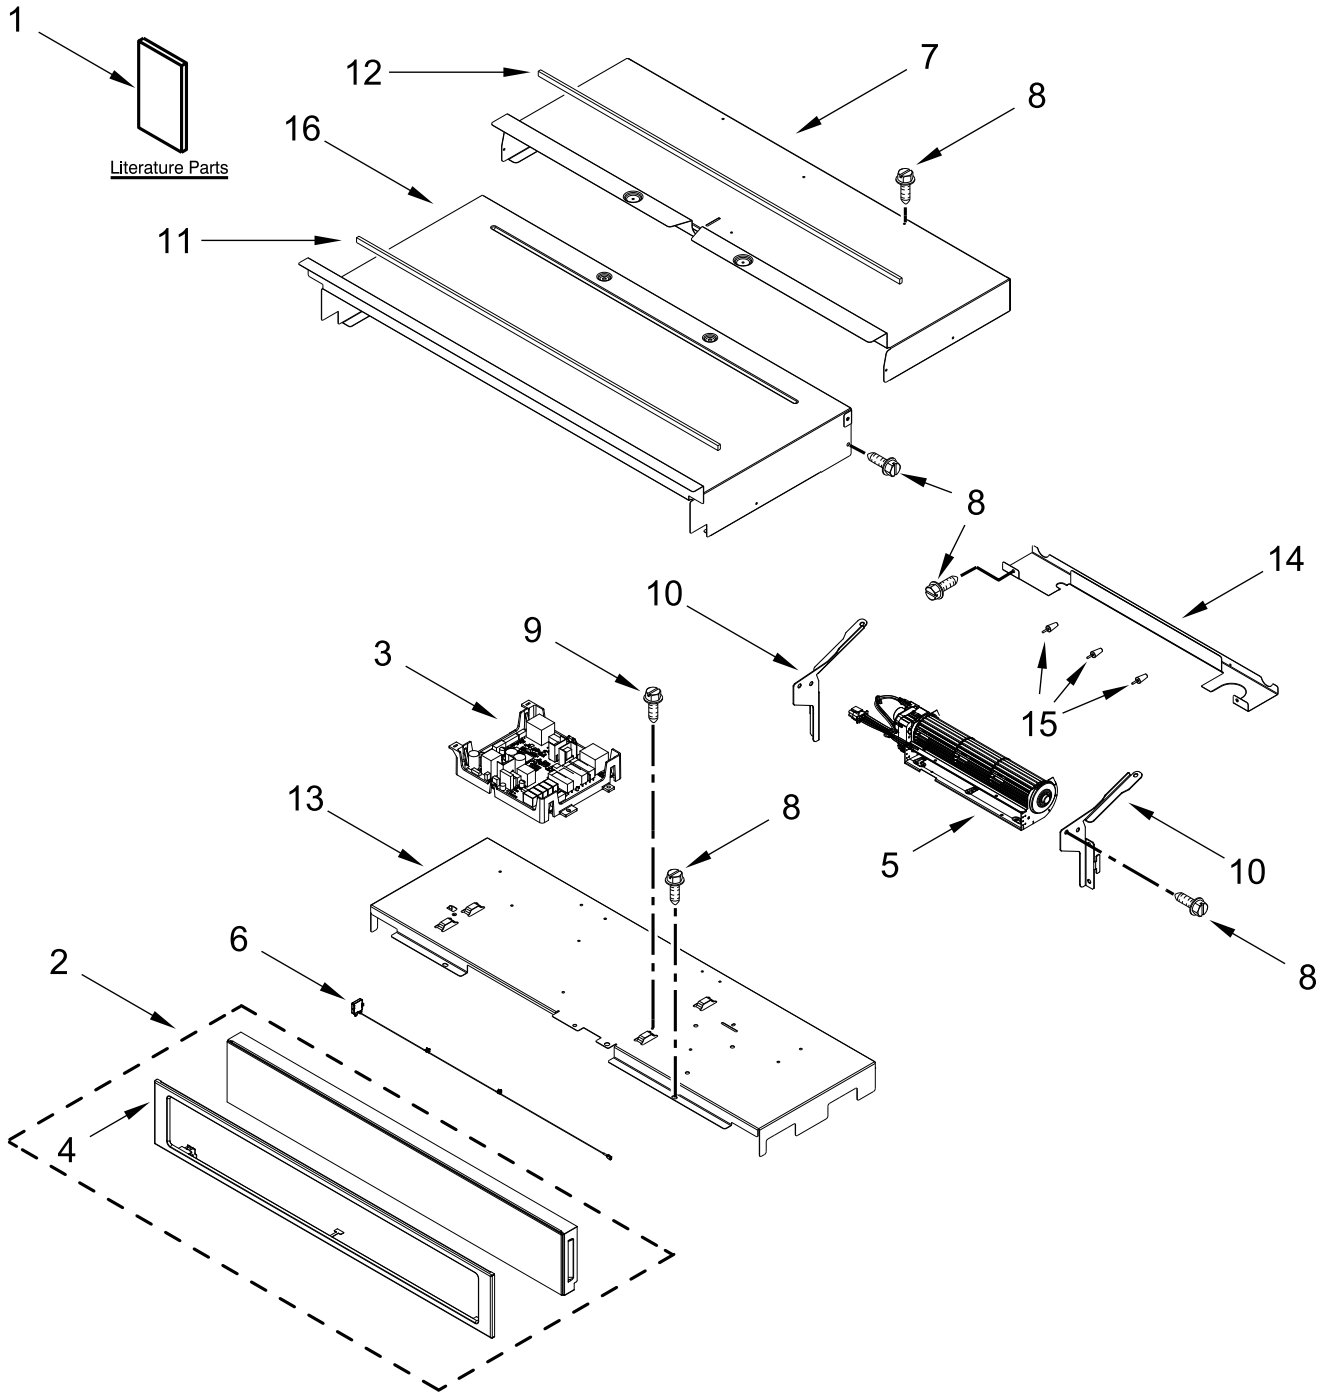

CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4		Skin, Control Panel	16	W10318192	Chassis, Cover Top Front 30"
	W11220323	Guide, Use & Care		W11026970	Black			FOLLOWING PARTS NOT ILLUSTRATED
	W11129956	Instructions, Installation		W11026969	White			
	W11097305	Guide, Internet Connectivity	5	W11200129	Blower		W11225370	Harness, Main
	W11046178	Sheet, Tech	6	W11234541	Antenna		W11132989	Harness, Door Latch
	W11046184	Diagram, Wiring	7	W10904156	Chassis, Cover Top Back 30"		W10562910	Harness, EOL
2		Assembly, Control Panel (Includes Overlay)	8	7101P426-60	Screw		W11177679	Harness, TOD Jumper
	W11107242	Black	9	7101P434-60	Screw		W11233570	Harness, Console
	W11107245	White	10	W10655463	Bracket, Blower (Left)		W11225371	Harness, Signal
3	W11253186	Appliance Manager, Copernicus (With Power Supply)		W10655462	Bracket, Blower (Right)		4448664	Clamp, Conduit
	W11253182	Appliance Manager, Copernicus (Without Power Supply)	11	W11162063	Gasket, Rubber		W10655464	Bracket, Harness
			12	W10728475	Gasket, Rubber		313438	Clip, Harness
			13	W10864102	Tray, Electronic		4450800	Screw, Grounding
			14	W10655465	Chassis, Back Divider		W10487999	Clip, Harness
			15	W10351295	Bumper		4454842	Tie, Cable
							W10431304	Bag, Hardware


OVEN PARTS

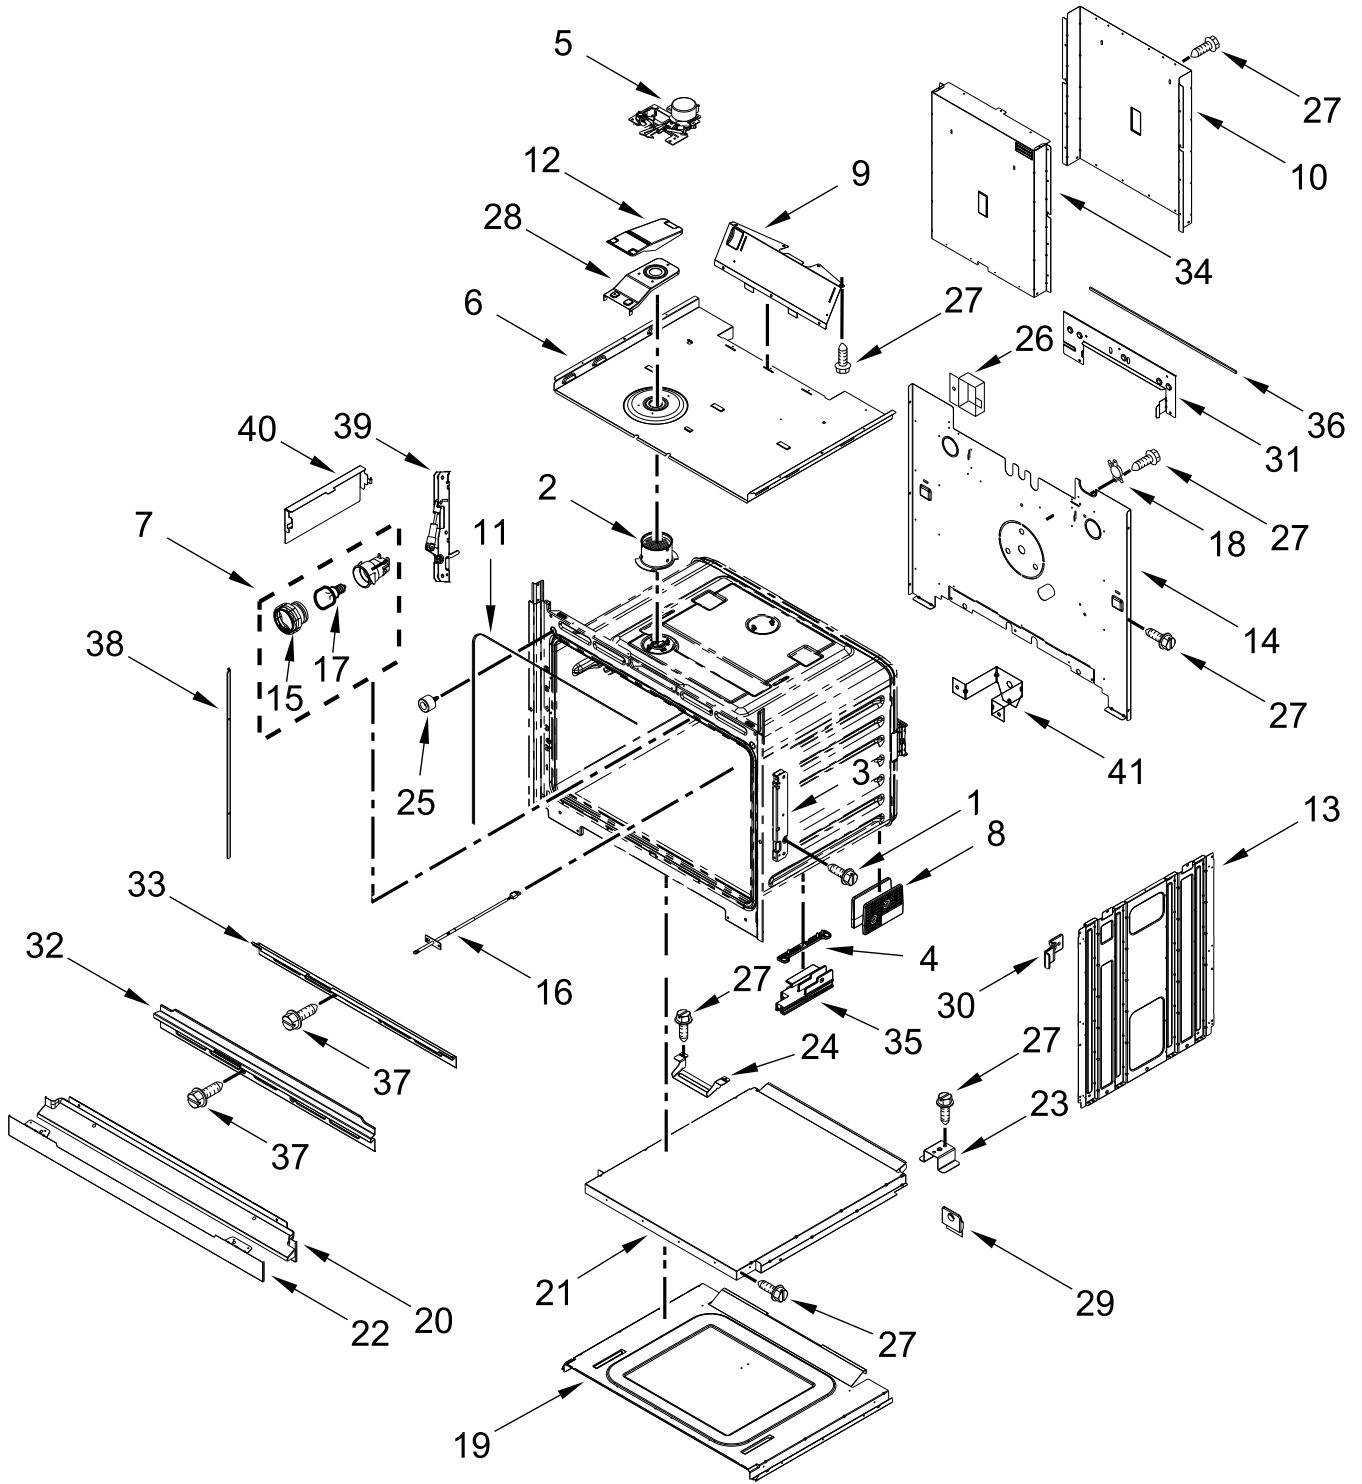

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10254050	Screw	18	4449751	Thermostat (TOD)	33	W10283036	Vent, Top 30"
2	W11085298	Tube, Vent	19	W10834867	Base, Chassis	34	W10318196	Duct, Chassis Back
3	W11044775	Receiver, Hinge	20		Assembly, Bottom Vent			(Upper)
4	W10618102	Spacer, Base		W10327373	Black	35	W10618103	Foot, Front (Left)
5	W10618131	Latch, Motorized		W10506344	White		W10618104	Foot, Front (Right)
6	W10904158	Top, Chassis	21	W10283008	Chassis, Bottom Duct	36	W10728475	Gasket, Rubber
7	W10734063	Assembly, Light	22		Trim, Bottom Vent	37	7101P427-60	Screw
8	W10618101	Foot, Base		W10351236	Black	38	W10327369	Cover, Side Trim (Left)
9	W10904163	Deflector, Blower		W10504026	White		W10327368	Cover, Side Trim (Right)
10	W10542857	Duct, Chassis Back (Lower)	23	W10213759	Support, Air Channel	39	W11045086	Receiver, Slow Close Hinge
11	W10282960	Gasket	24	W10351308	Spacer, Chassis Bottom Duct	40	W11034940	Shield, Slow Close Hinge
12	W10616810	Cover, Vent Exhaust	25	W10351278	Bumper & Screw	41	W11027314	Hat Bracket, Vent
13	W10663556	Side, Chassis (Left)	26	8285593	Cover, Connector			FOLLOWING PARTS NOT ILLUSTRATED
	W10318190	Side, Chassis (Right)	27	7101P426-60	Screw			
14	W10904160	Back, Chassis	28	W10616809	Base, Vent Exhaust		W10520715	Insulation, Wrap
15	W10412722	Lens, Light	29	W10834286	Spacer, Center		W10282944	Insulation, Cavity
16	W10622170	Probe, Sensor	30	W10834501	Spacers, Front		W10464568	Insulation, Control Knob
17	W10412711	Bulb, Light	31	W10904155	Bracket, U-Shape			
			32	W10283040	Vent, Center 30"			


UPPER OVEN DOOR PARTS

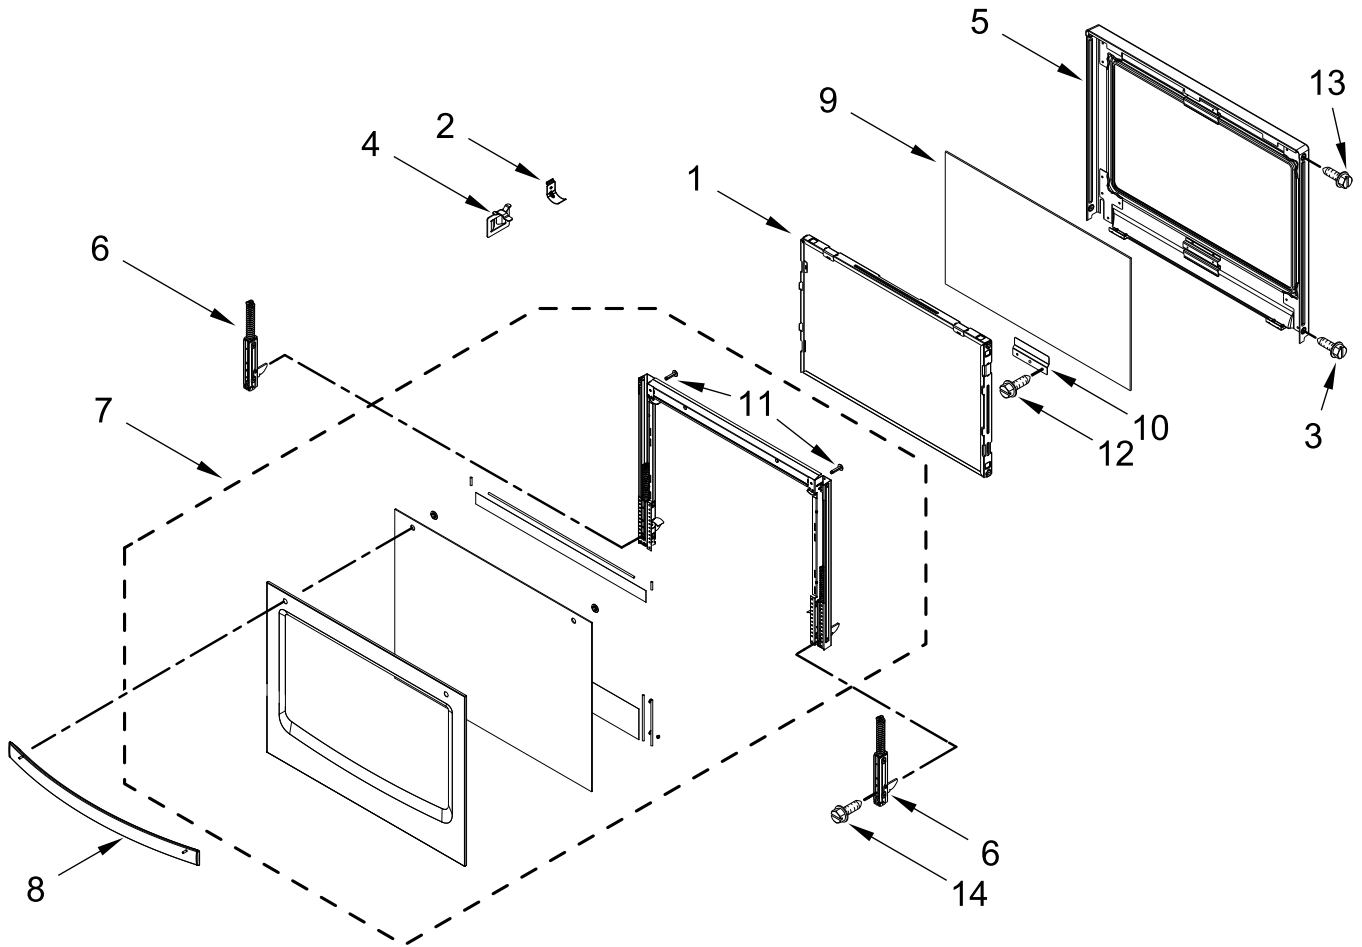

UPPER OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10347596	Assembly, Window Pack	8		Assembly, Door Handle	13	7101P653-60	Screw
2	W10284285	Spring, Door Glass Fixation		W11022638	Black	14	3196183	Screw
				W11022639	White			
3	7101P635-60	Screw (Black)	9	W10678524	Glass, Inner			
4	W10653954	Clip, Spring Metal	10	W10284297	Bracket, Glass			
5	W10709147	Assembly, Liner	11	W10480830	Screw			
6	W11044773	Hinge, Slow Close Door	12	7101P426-60	Screw			
7		Assembly, Door Glass						
	W10866266	Black						
	W10866267	White						


LOWER OVEN DOOR PARTS

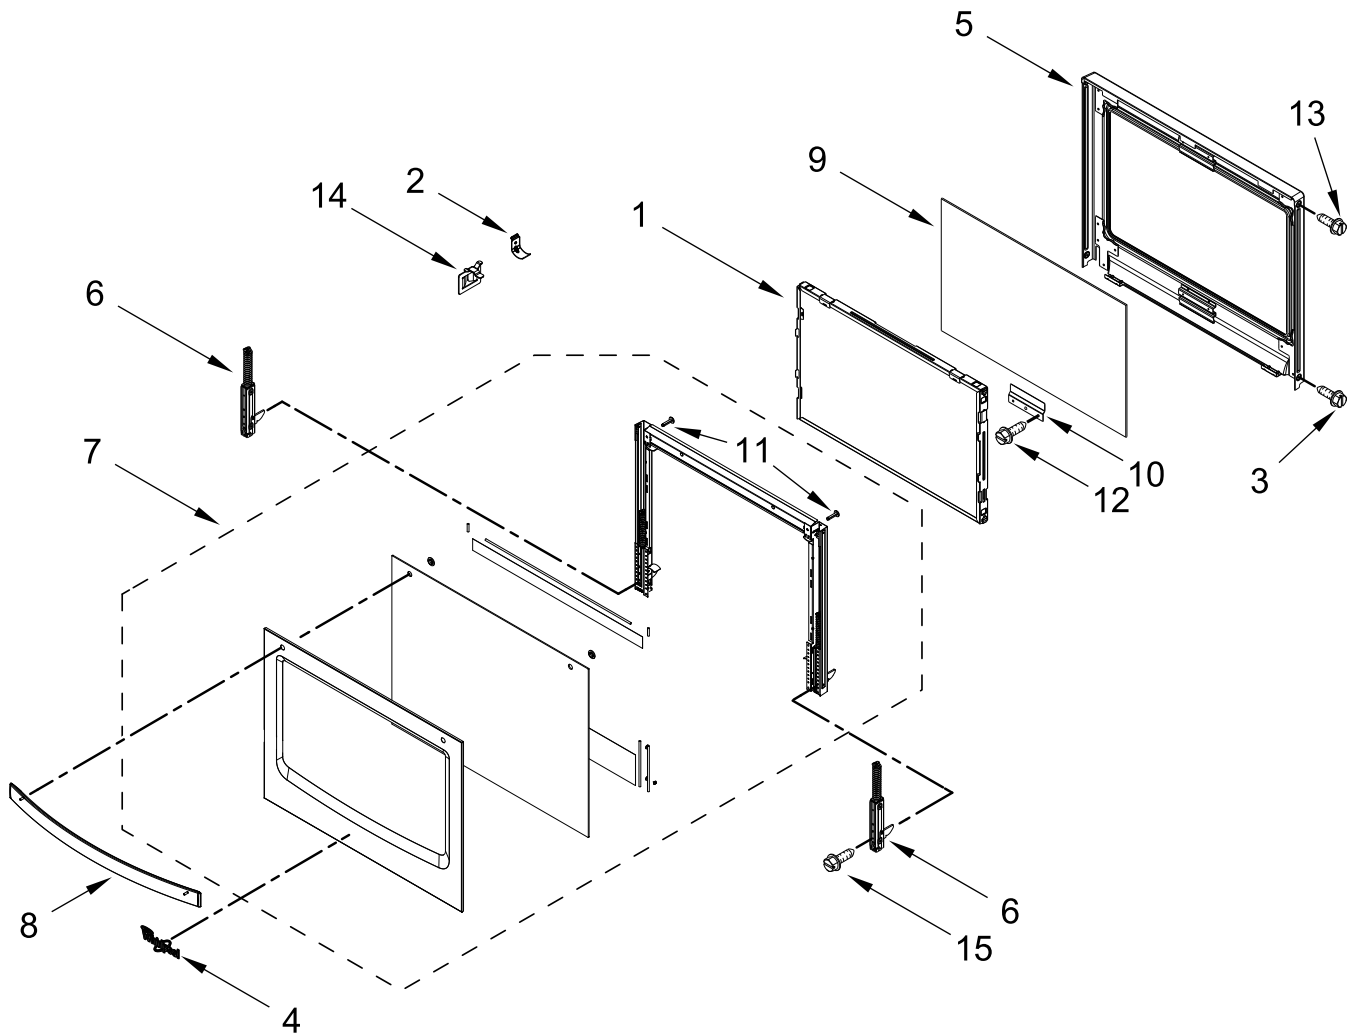

LOWER OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10347596	Assembly, Window Pack	7		Assembly, Door Glass	10	W10284297	Bracket, Glass
2	W10284285	Spring, Door Glass Fixation		W10866266	Black	11	W10480830	Screw
3	7101P635-60	Screw (Black)		W10866267	White	12	7101P426-60	Screw
4	W10884775	Nameplate	8		Assembly, Door Handle	13	7101P653-60	Screw
5	W10709147	Assembly, Liner		W11022638	Black	14	W10653954	Clip, Spring Metal
6	W11044773	Hinge, Slow Close Door		W11022639	White	15	3196183	Screw
			9	W10678524	Glass, Inner			

INTERNAL OVEN PARTS

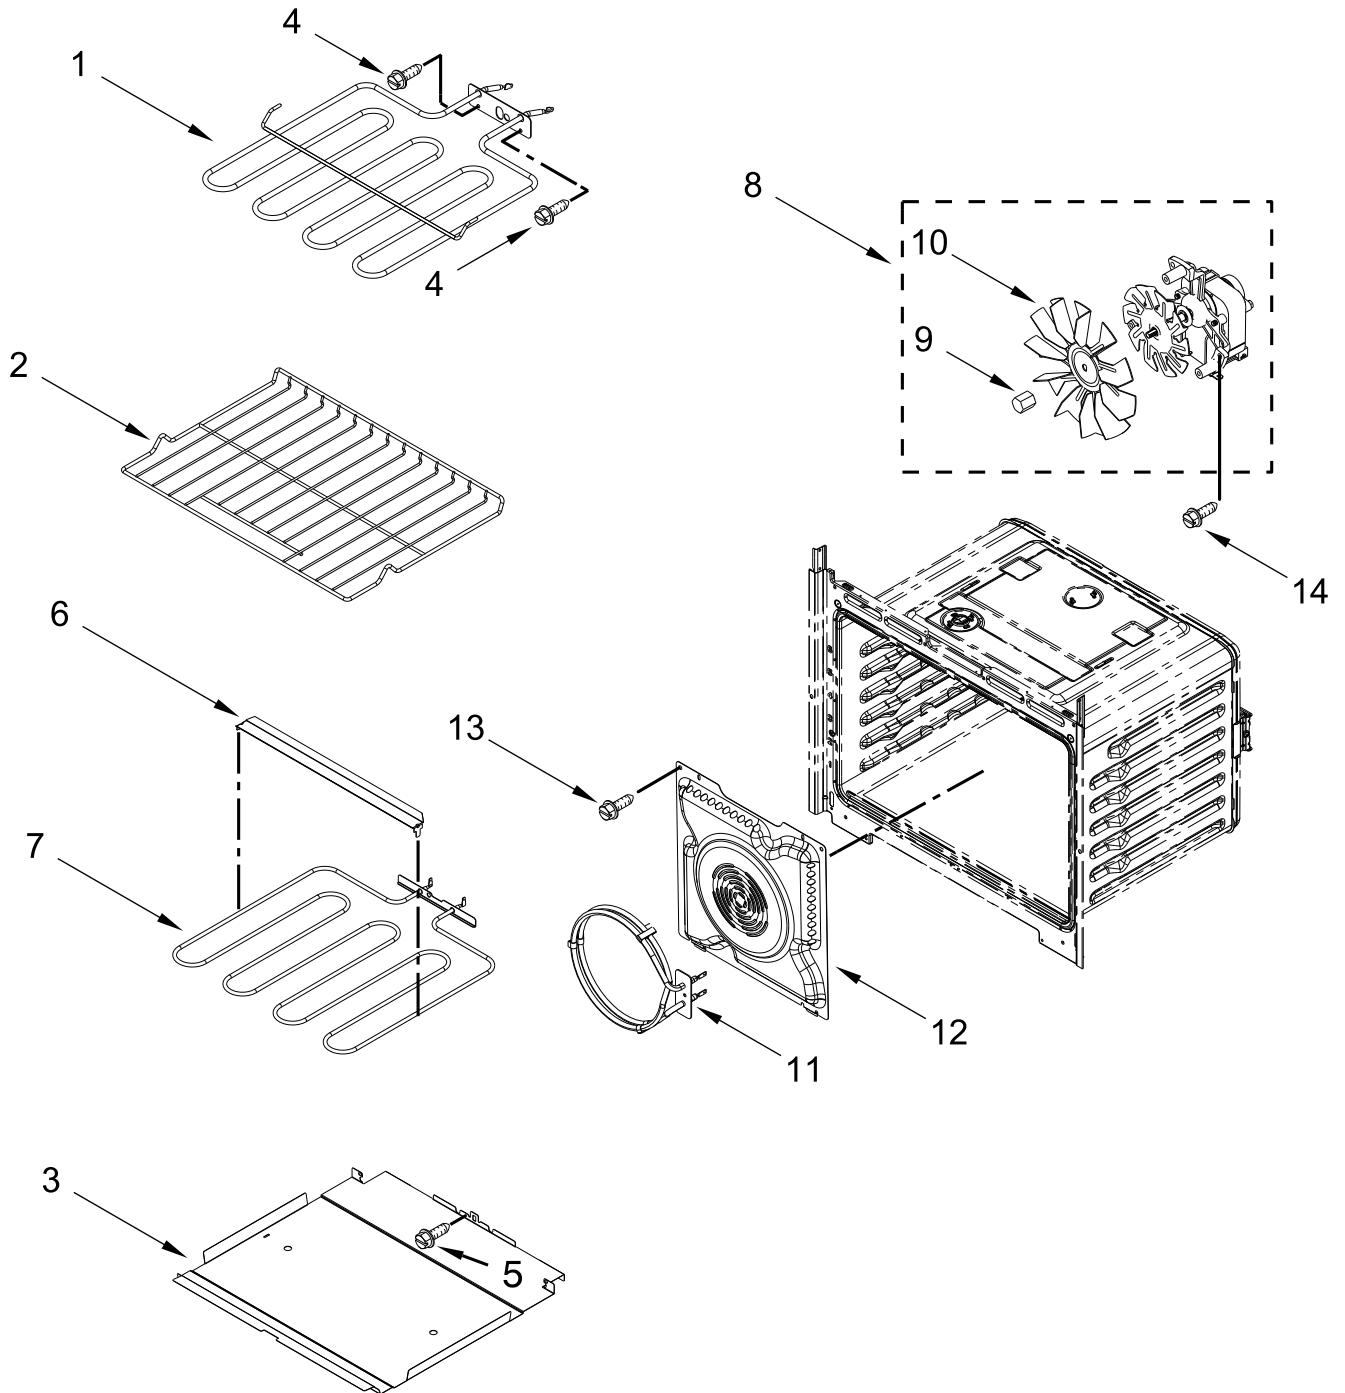

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10260252	Element, Broil	7	W10546517	Element, Bake	13	W10906658	Screw
2	W11122597	Rack, Oven	8	W10722667	Fan, Convection	14	W10720084	Screw
3	W10318198	Tray, Hidden Bake	9	W10631504	Nut, Acorn (LH)			
4	7101P434-60	Screw	10	W10631503	Blade, Fan			
5	7101P426-60	Screw	11	W10260248	Ring, Element			
6	W10282957	Crossbar, Hidden Bake Tray	12	W10359278	Baffle, Convection			

OPTIONAL PARTS (NOT INCLUDED)

PAIN, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black

PAIN, SPRAY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	261900	Citrine White
	830864	Black

ADHESIVE

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	482338	Sealer, Silastic

ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Grid, Broiler Pan and
	W10355016	Cleaner, Stainless Steel
	W10123240	Rack, Broiler Pan & Roasting
	W10275756	Cleaner, Granite
	W10355049	Wipes, Stainless Steel Cleaning
	W10745649	Rack, Sliding