




## **30" BUILT-IN ELECTRIC COMBINATION MICROWAVE WALL OVEN**

### **MODELS:**

WOC75EC0HS01 (Stainless)

WOC75EC0HV01 (Black Stainless)


# CONTROL PANEL PARTS

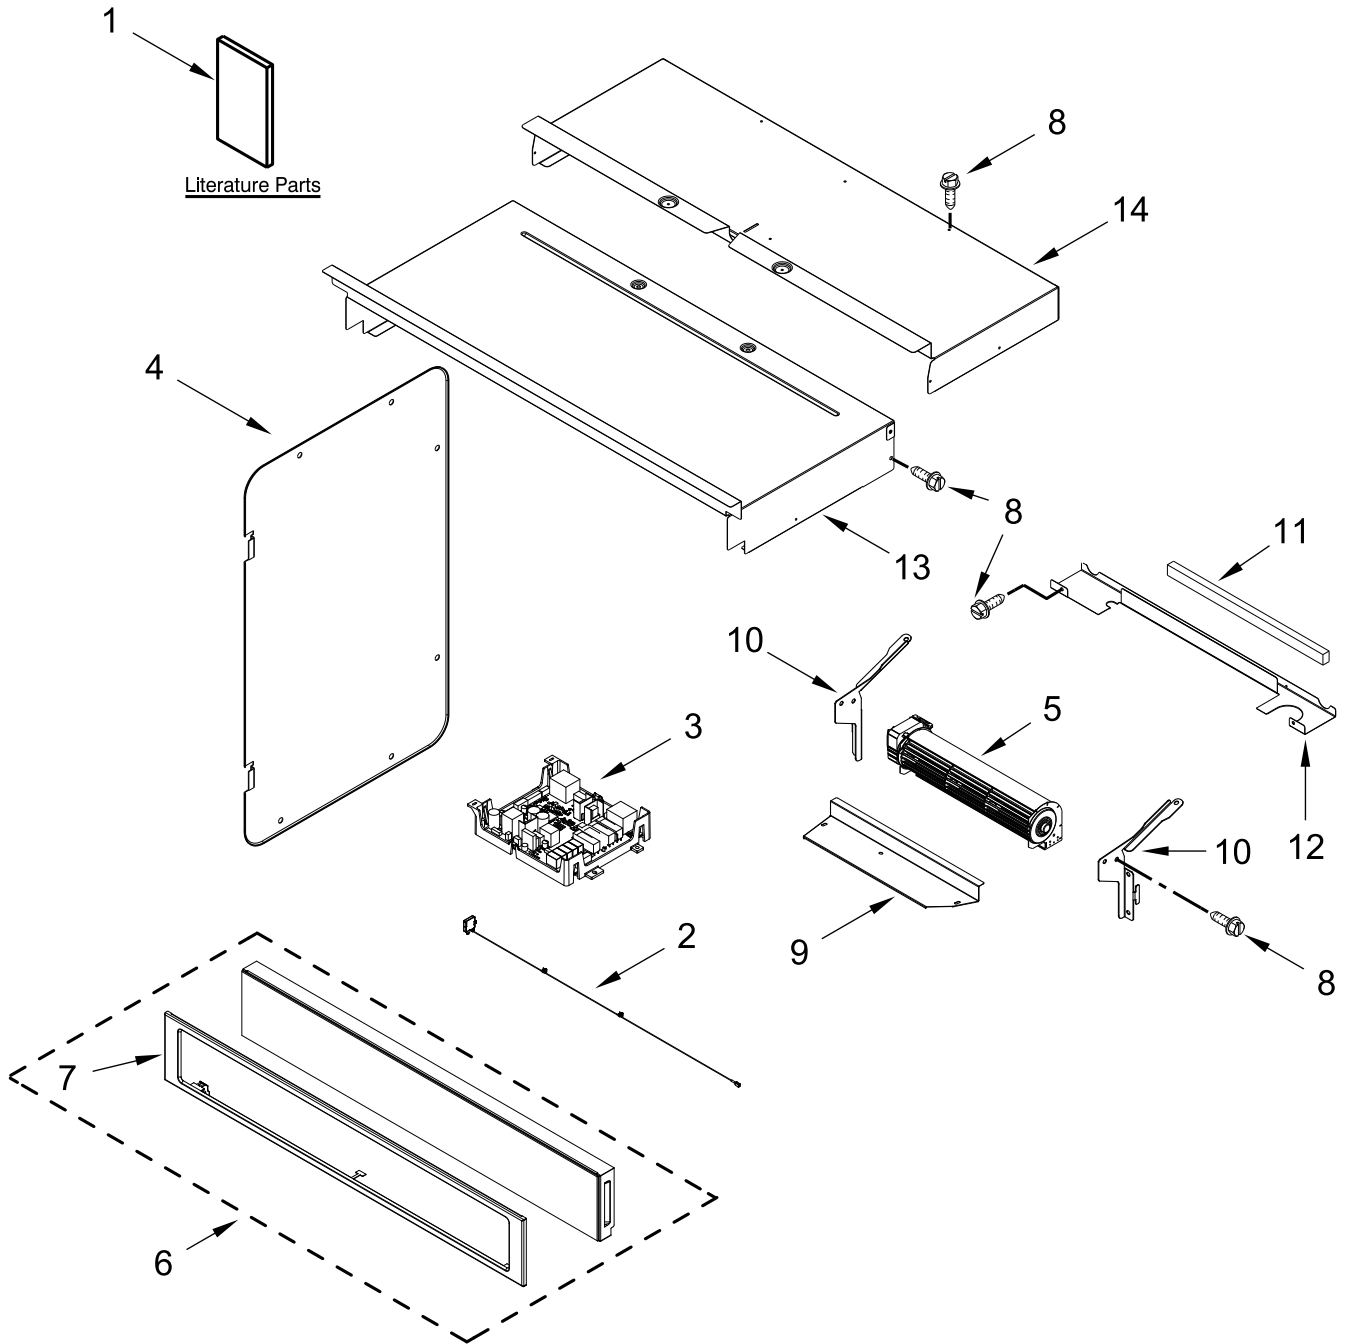

# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8	7101P426-60	Screw	14	W10588732	Chassis, Cover Top Back 30"
	W11220322	Guide, Use & Care (Oven)	9	W10681157	Cover, Combo Blower			
	W11040305	Guide, Use & Care (Microwave Oven)	10	W10655463	Bracket, Blower (Left)			FOLLOWING PARTS NOT ILLUSTRATED
	W11129957	Instructions, Installation		W10655462	Bracket, Blower (Right)	W11225372		Harness, Main
	W11097305	Guide, Internet Connectivity	11	W10728475	Gasket, Rubber	W11225373		Harness, Signal
	W11046177	Sheet, Tech	12	W10655465	Chassis, Back Divider	W10874059		Harness, Fan & Turntable
	W11046183	Diagram, Wiring	13	W10318158	Chassis, Cover Top Front 30"	W10874060		Harness, Inverter
2	W11234541	Antenna				W10709980		Harness, Interlock
3	W11253186	Appliance Manager, Copernicus (With Power Supply)				W11233569		Harness, Ground Console Combo
4	W10655467	Chassis, Combo Side				W11233529		Harness, Communication
5	W11200129	Blower				W11132989		Harness, Door Latch
6		Assembly, Control Panel (Includes Overlay)				W10889134		Harness, Cable Tree Assembly
	W11107241	Stainless				W11233537		Jumper Harness, Communication
	W11107257	Black Stainless				4450800		Screw, Grounding
7		Skin, Control Panel				4448664		Clamp, Conduit
	W10899877	Stainless				313438		Clip, Harness
	W10893985	Black Stainless				4454842		Tie, Cable


# OVEN PARTS

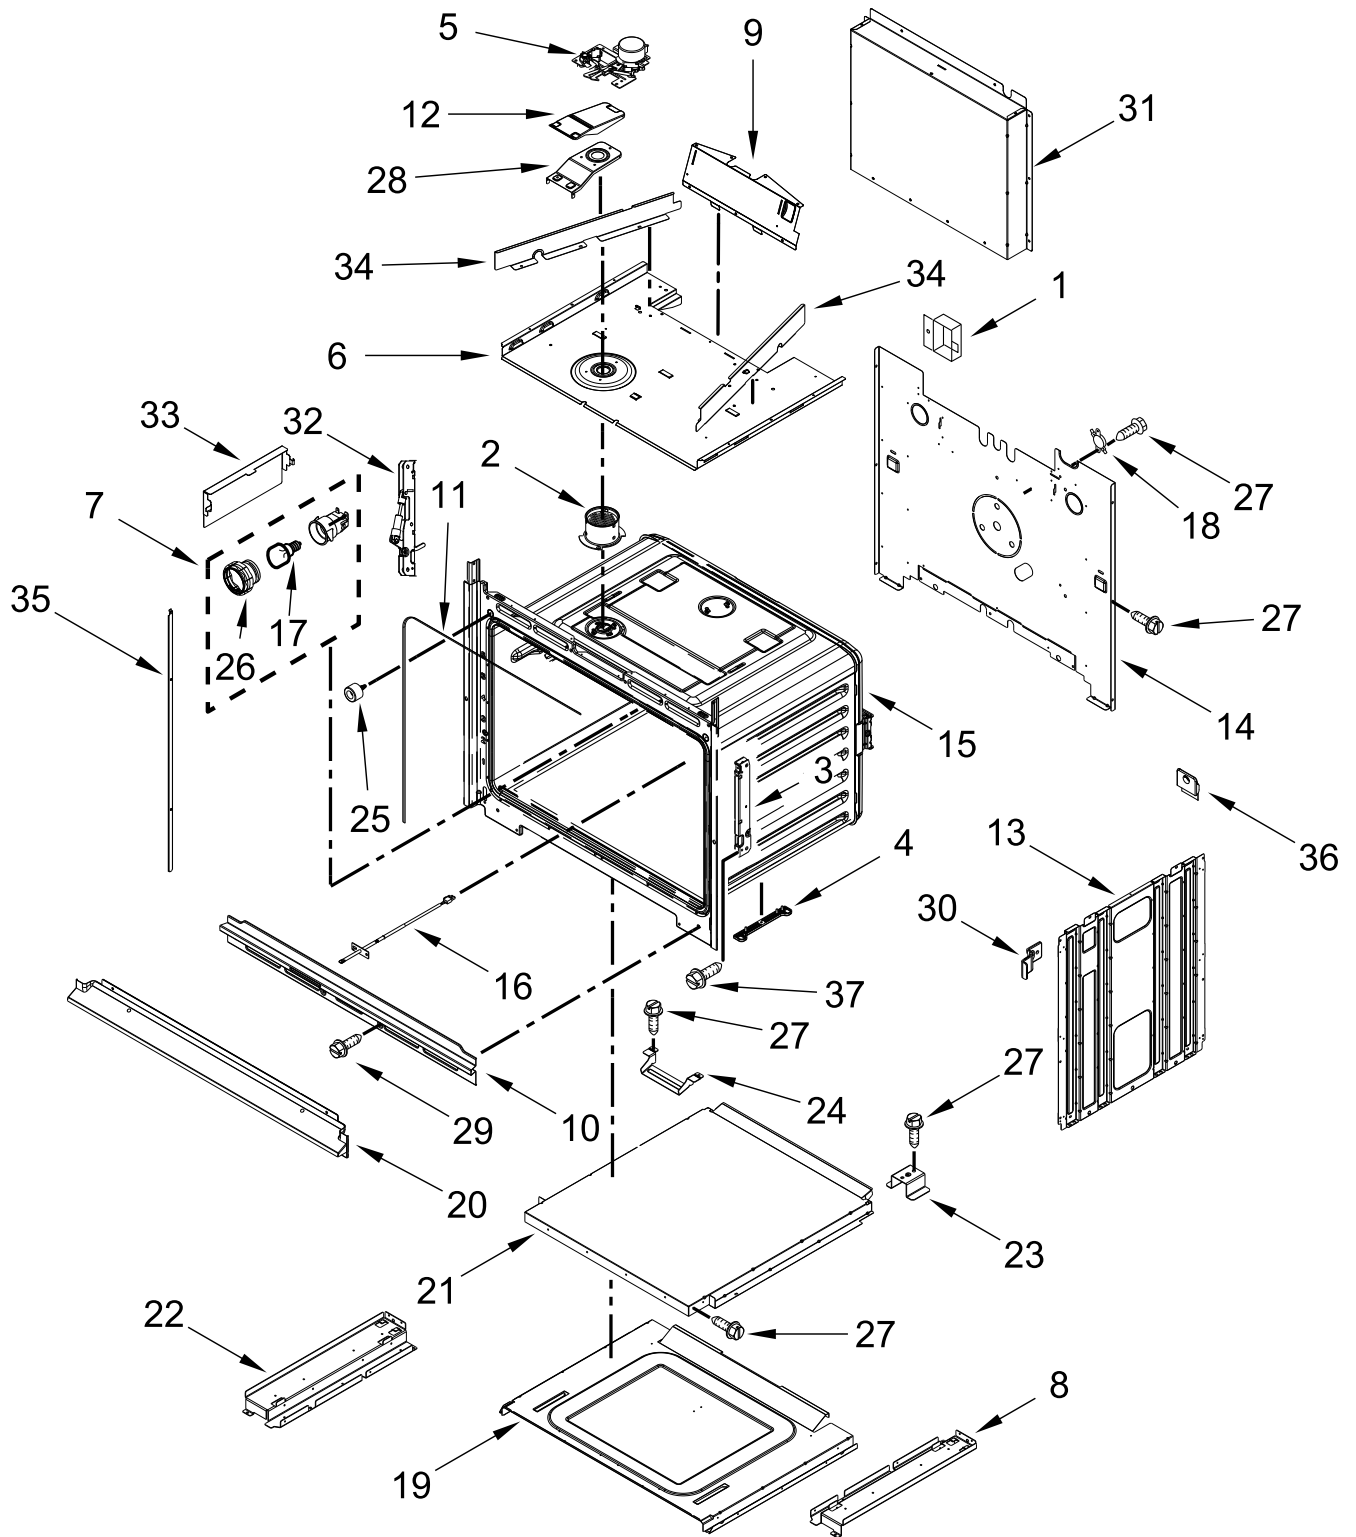

# OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8285593	Cover, Connector	17	W10412711	Bulb, Light	31	W11037653	Cover, Combo Chassis Back Duct (With Hole)
2	W11085298	Tube, Vent	18	4449751	Thermostat (TOD)	32	W11045086	Receiver, Slow Close Hinge
3	W11044775	Receiver, Hinge	19	W10834867	Base, Chassis	33	W11034940	Shield, Slow Close Hinge
4	W10618102	Spacer, Base	20		Assembly, Bottom Vent	34	W10681156	Deflector, Chassis
5	W10618131	Latch, Motorized		W10351279	Stainless	35		Trim, Side
6	W10904158	Top, Chassis		W10723091	Black Stainless		W10344483	Black (Left)
7	W10734063	Assembly, Light		W10283008	Chassis, Bottom Duct		W10344482	Black (Right)
8	W10283021	Support, Base (Right)	21	W10283008	Chassis, Bottom Duct	36	W10834286	Spacer, Center
9	W10904163	Deflector, Blower	22	W10283020	Support, Base (Left)	37	W10254050	Screw
10	W10495154	Vent, Center 30"	23	W10213759	Support, Air Channel			FOLLOWING PARTS NOT ILLUSTRATED
11	W10282960	Gasket	24	W10351308	Spacer, Chassis Bottom Duct		W10520715	Insulation, Wrap
12	W10616810	Cover, Vent Exhaust	25	W10351278	Bumper & Screw		W10282944	Insulation, Cavity
13	W10663556	Side, Chassis (Left)	26	W10412722	Lens, Light		W10464568	Insulation, Control Knob
	W10318190	Side, Chassis (Right)	27	7101P426-60	Screw			
14	W10904160	Back, Chassis	28	W10616809	Base, Vent Exhaust			
15		Liner, Oven (Not Serviceable)	29	7101P427-60	Screw			
16	W10622170	Probe, Sensor	30	W10834501	Spacers, Front			


# OVEN DOOR PARTS

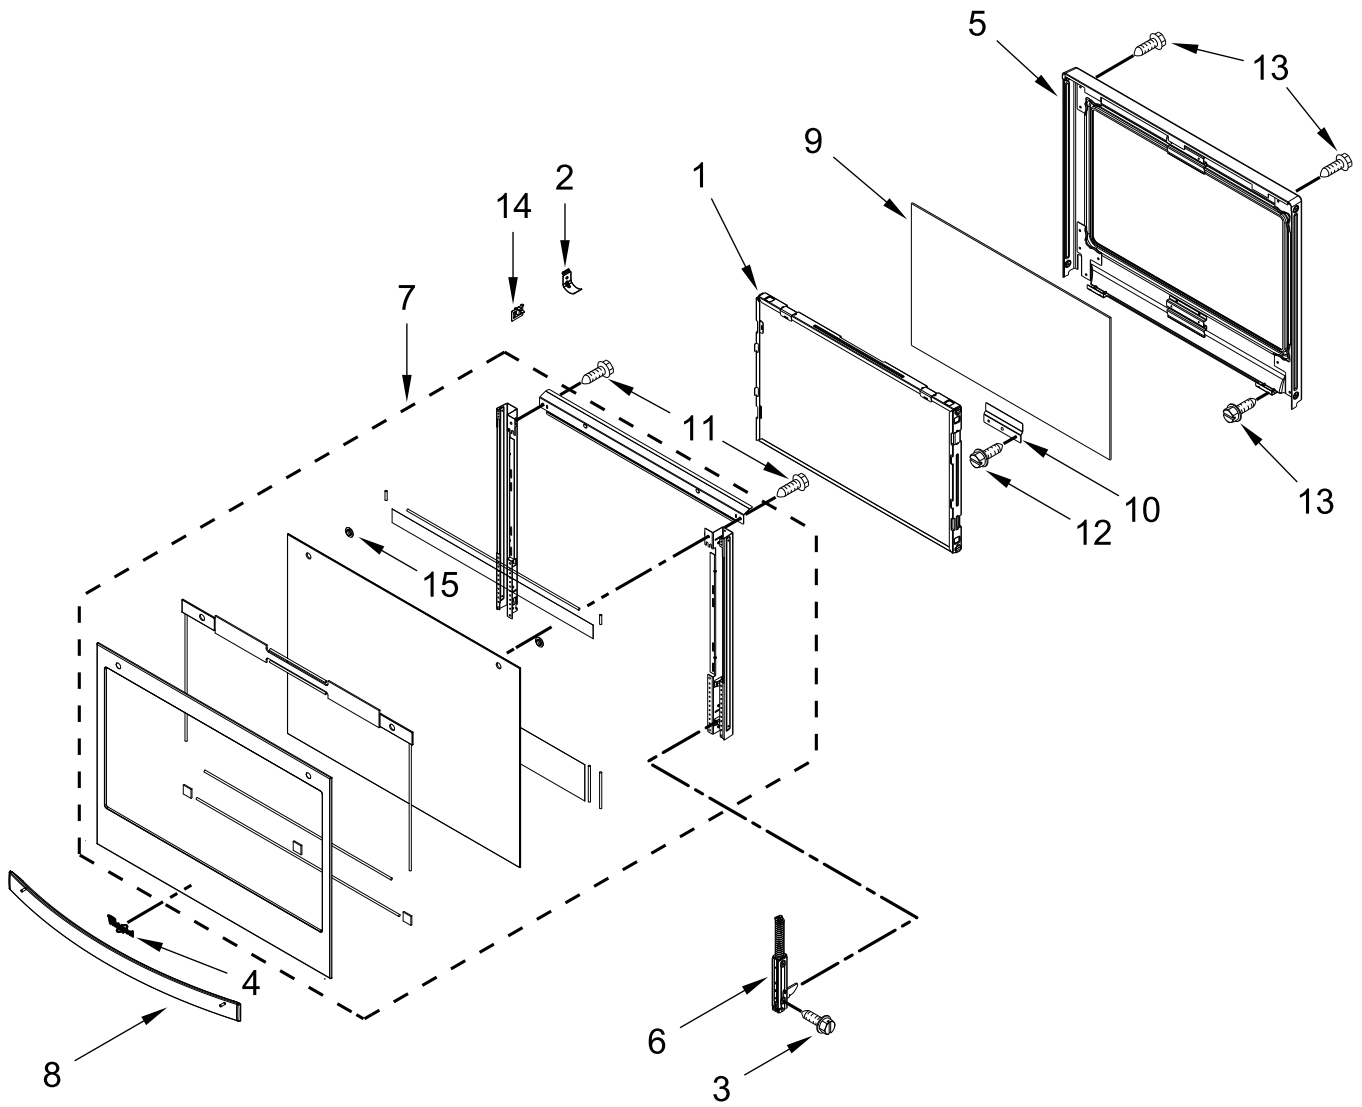

# OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10347596	Assembly, Window Pack	7		Assembly, Door	11	W10480830	Screw
				W10866265	Stainless	12	7101P426-60	Screw
2	W10284285	Spring, Door Glass Fixation		W11028411	Black Stainless	13	7101P633-60	Screw (Black)
			8		Assembly, Handle	14	W10653954	Clip, Spring Metal
3	3196183	Screw		W10875206	Stainless	15	W10319024	Washer, Door
4	W10884775	Nameplate		W10903342	Black Stainless			
5	W10709147	Assembly, Liner	9	W10678524	Glass, Inner			
6	W11044773	Hinge, Slow Close Door	10	W10284297	Bracket, Glass			

# INTERNAL OVEN PARTS

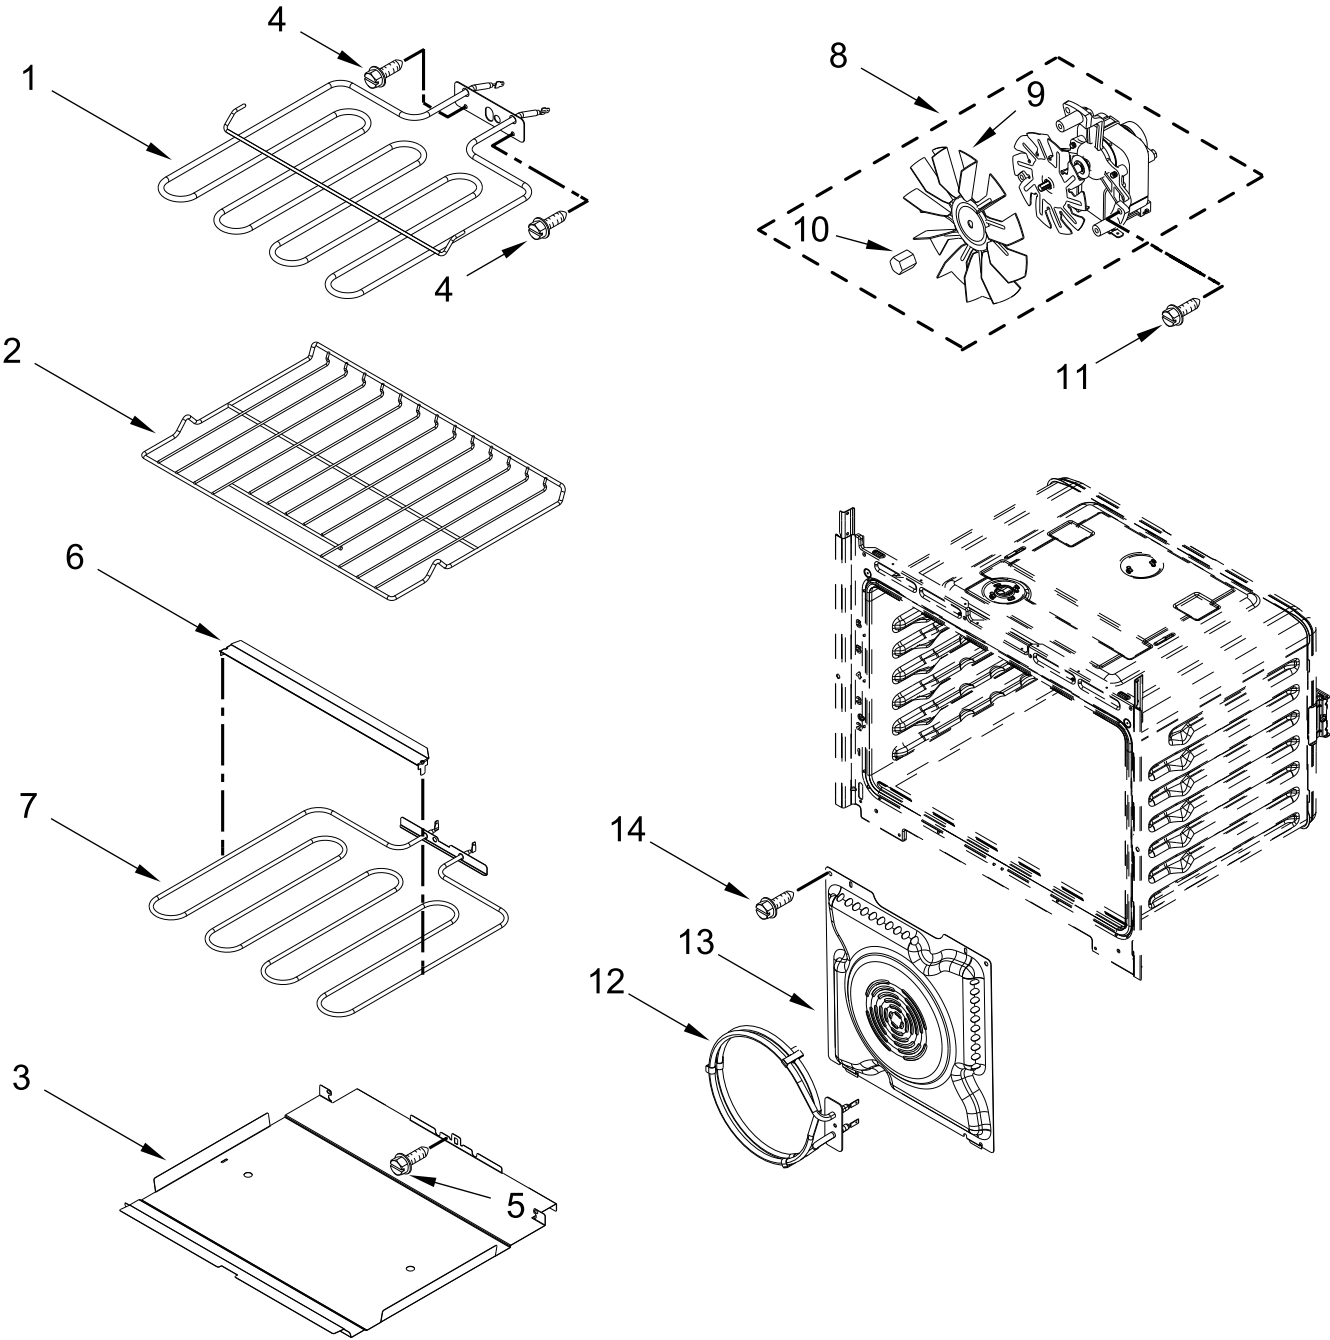




# INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10260252	Element, Broil	7	W10546517	Element, Bake	13	W10359278	Baffle, Convection
2	W11122597	Rack, Oven	8	W10722667	Fan, Convection	14	W10906658	Screw
3	W10318198	Tray, Hidden Bake	9	W10631503	Blade, Fan			
4	7101P434-60	Screw	10	W10631504	Nut, Acorn (LH)			
5	7101P426-60	Screw	11	W10720084	Screw			
6	W10282957	Crossbar, Hidden Bake Tray	12	W10260248	Ring, Element			


# CABINET AND STIRRER PARTS

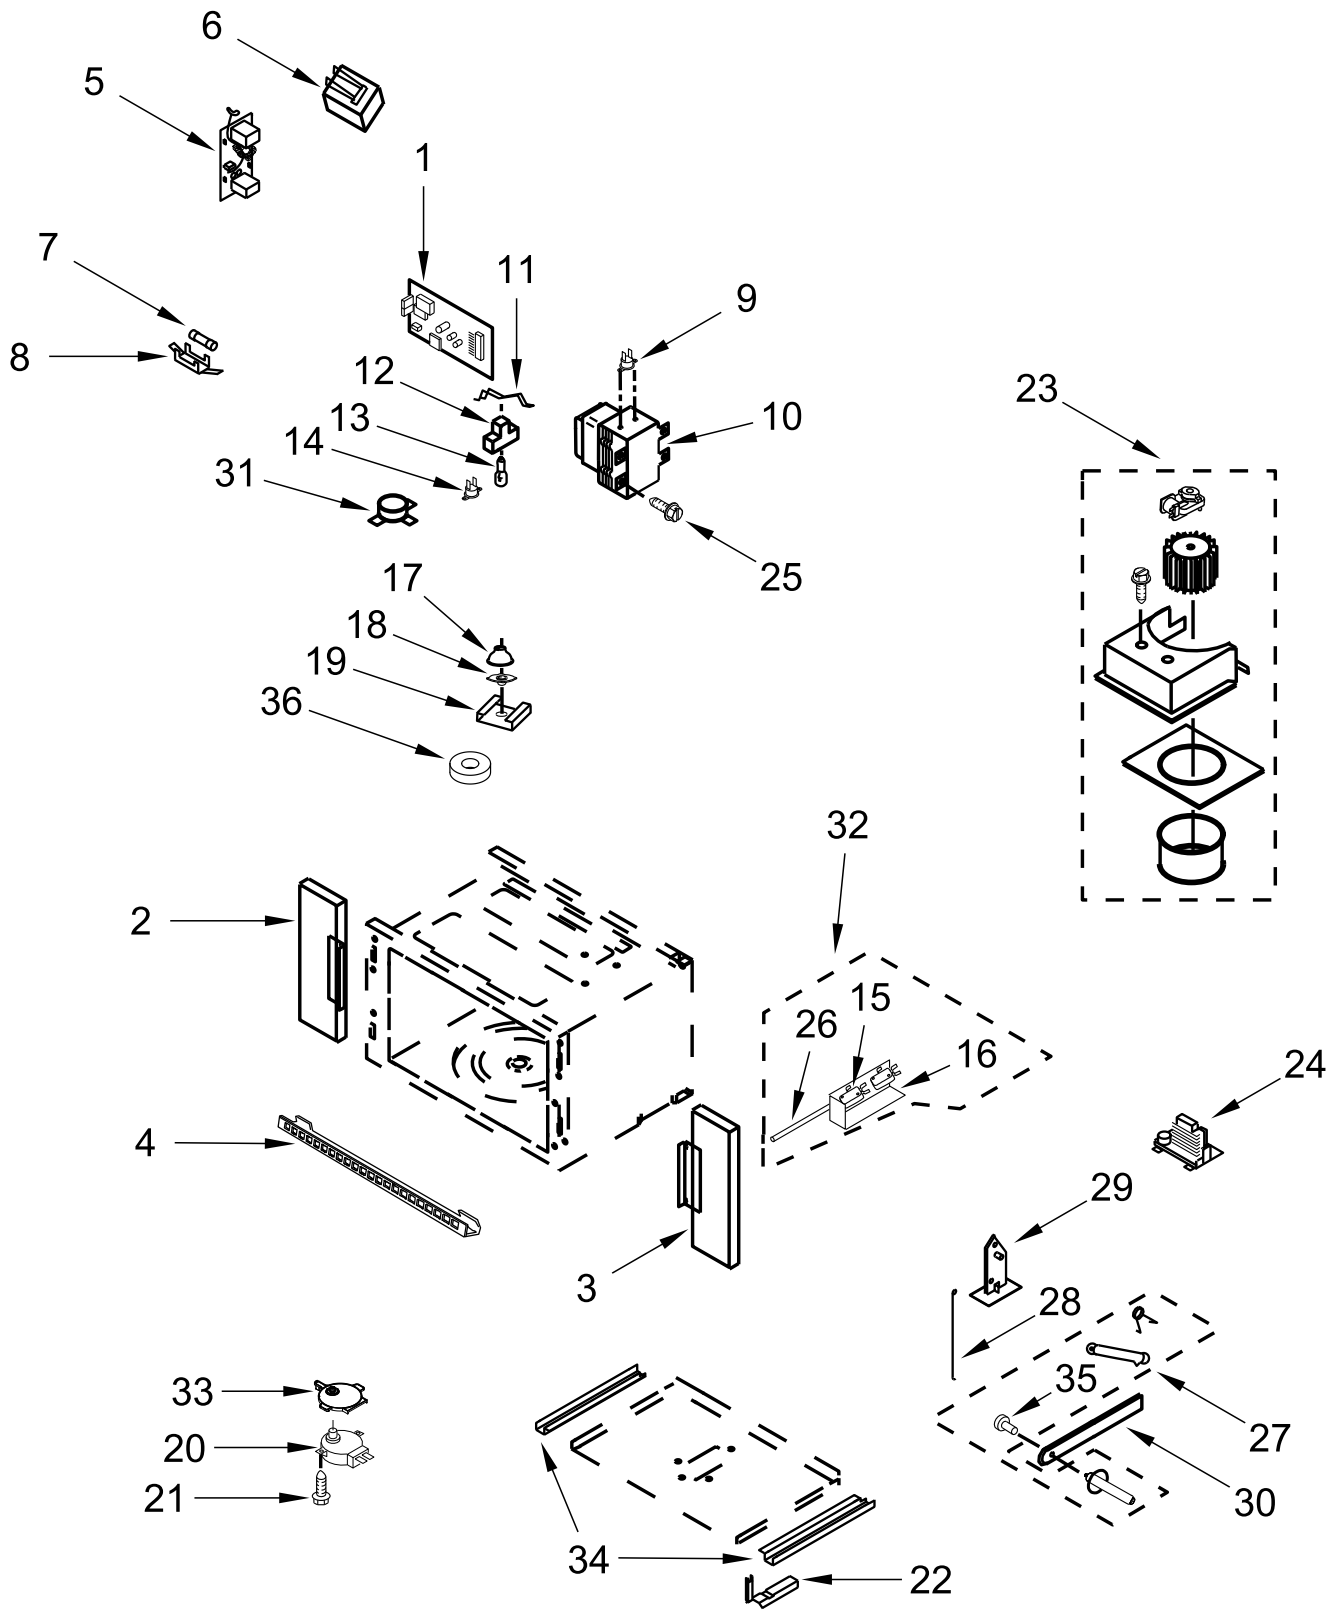

# CABINET AND STIRRER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10913742	Control, Electric	13	W10795595	Lamp, Halogen	27	251968600013	Pin, Damper
2	461967017491	Trim, Side (Left)	14	W10389447	Thermostat	28	461967570351	Spring, Torsion
3	461967017481	Trim, Side (Right)	15	W10330566	Switch	29	461967750494	Support
4	461968973241	Vent, Top Microwave	16	8205683	Holder, Switch	30	461967750483	Arm, Sliding
5	W10692851	Filter, Noise	17	423107022541	Reflector	31	W10460457	Sensor, Humidity
6	461967848621	Transformer, Light (20V)	18	423107720491	Lens, Lamp	32	W10358241	Assembly, Interlock Switch
7	241908600053	Fuse	19	461967010591	Clip, Spring	33	461967753742	Adapter, Turntable Motor
8	4375231	Block, Fuse	20	461967848971	Motor, Turntable	34	461967008461	Support, Bottom
9	461967846741	Thermostat, Magnetron	21	461967825321	Screw	35	461967510191	Bushing
10	461967847321	Magnetron	22	46196897960	Hinge, Door	36	W10769147	Sealing, Lamp
11	W10465869	Spring, Lamp	23	461968969271	Assembly, Cooling Fan			
12	W10490593	Holder, Lamp	24	W10468206	Inverter			
			25	461967825971	Screw			
			26	W10120235	Rod, Release			

# INTERNAL MICROWAVE PARTS

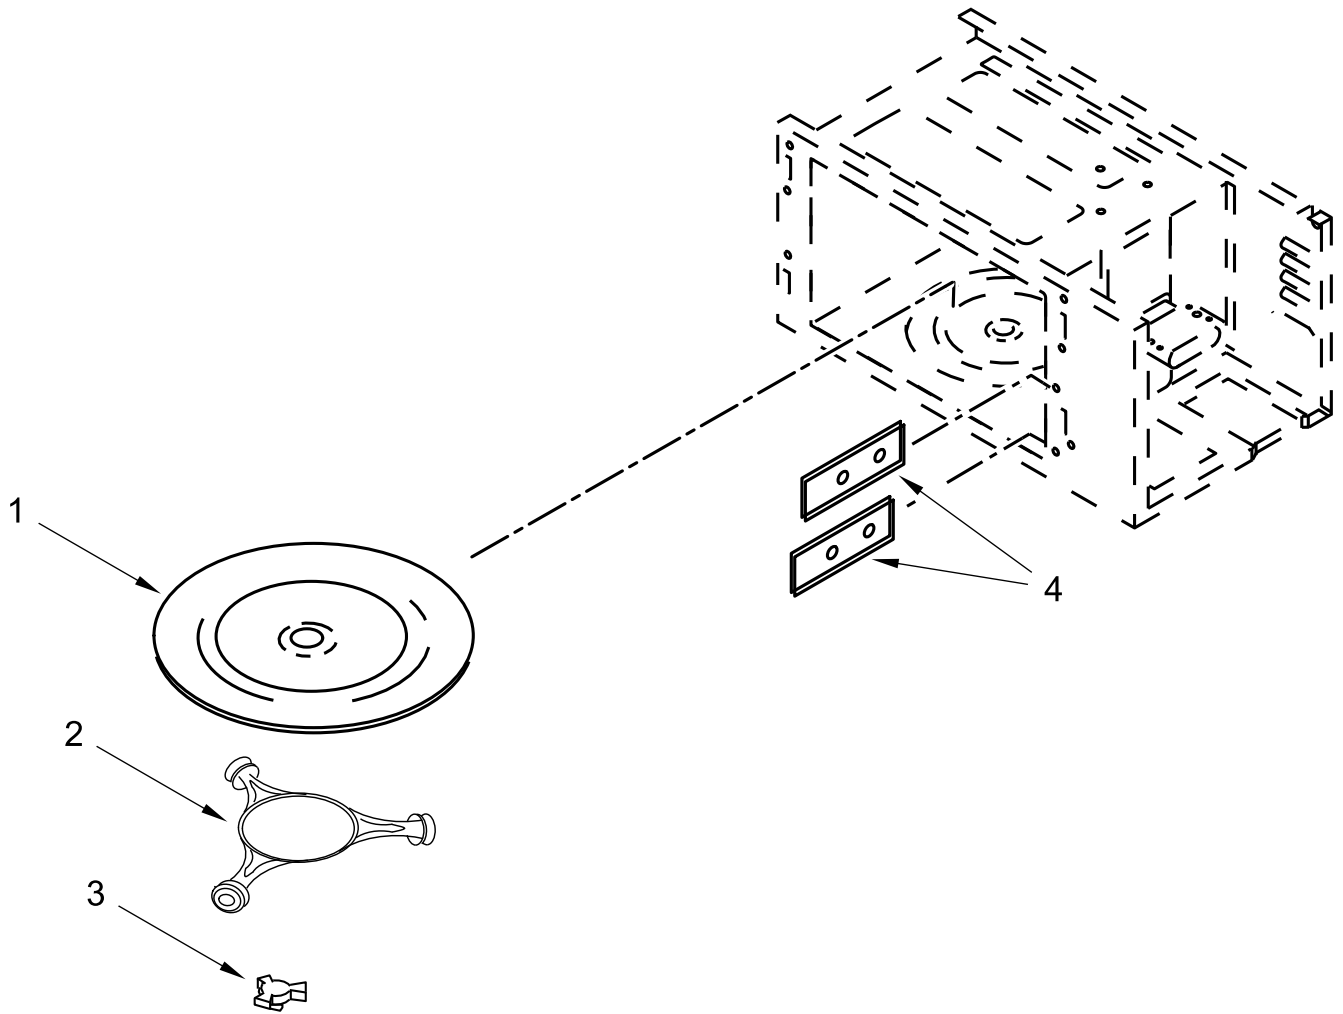


# INTERNAL MICROWAVE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	461967720541	Tray, Cook
2	W10367316	Ring, Turntable

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10545578	Drive, Turntable
4	461967451001	Plate, Cover


# TOP VENTING PARTS

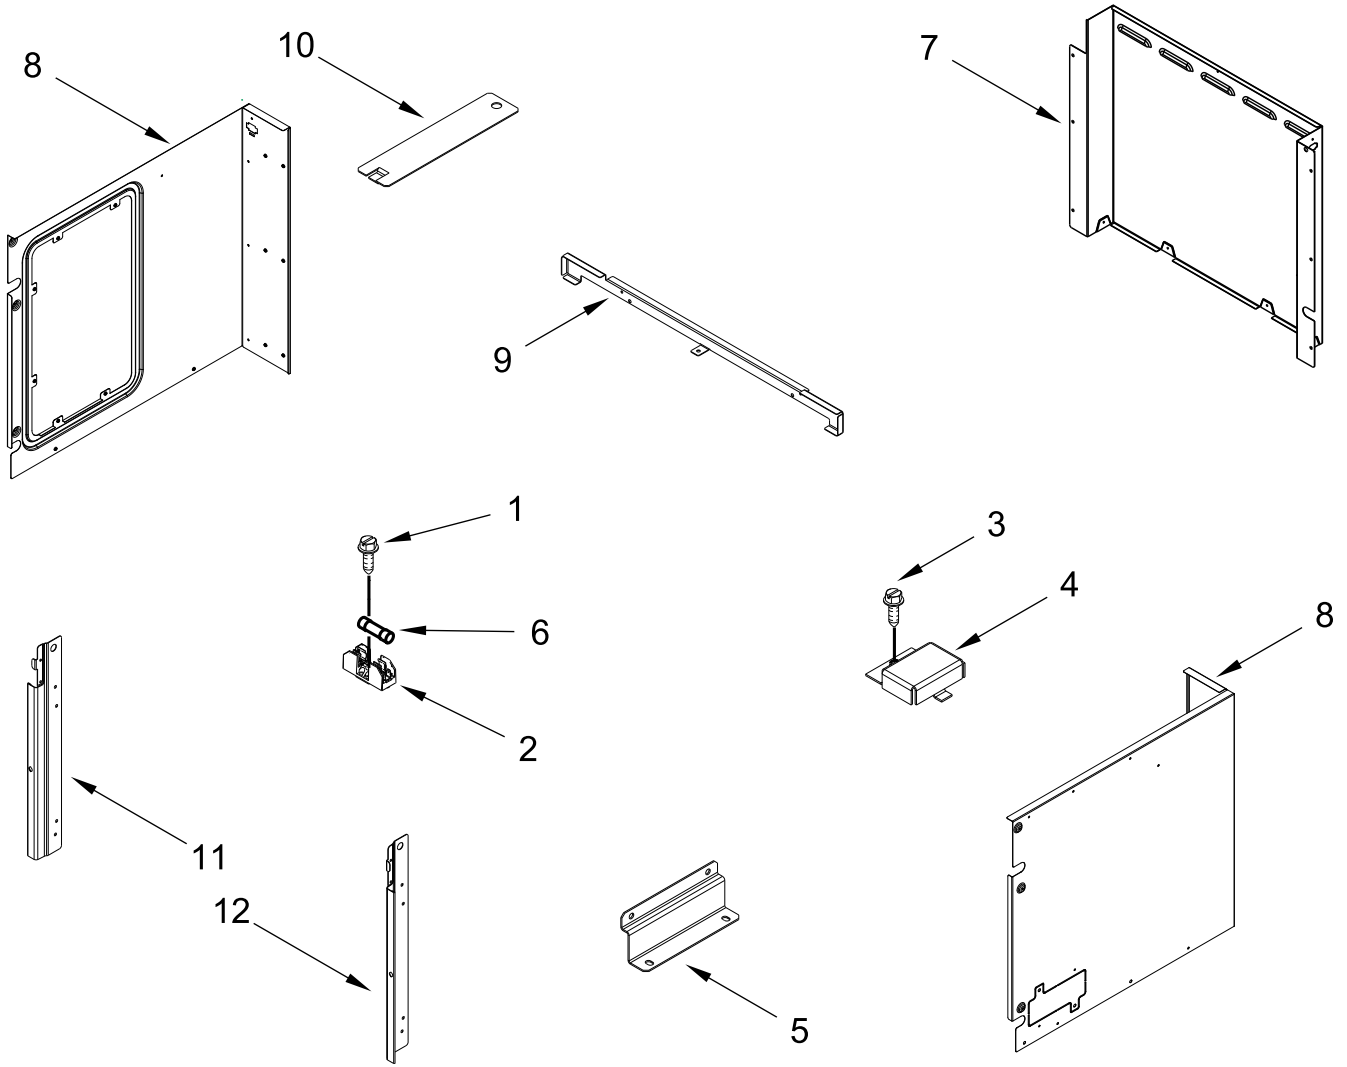

# TOP VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	7101P060-60	Screw	7	W10519707	Cover, Back Duct	10	W10356437	Cover, Slot Module
2	4454949	Holder, Fuse	8	W10655466	Chassis, Combo Side (Left)	11	W10360516	Rail, Side (Left)
3	7101P426-60	Screw		W11037649	Chassis, Combo Side (Right)	12	W10360518	Rail, Side (Right)
4	8285593	Cover, Connector	9	W10283022	Support, Crossbar			
5	W10283024	Side, Bracket						
6	W10017410	Fuse, Time Delay						

# MICROWAVE DOOR PARTS

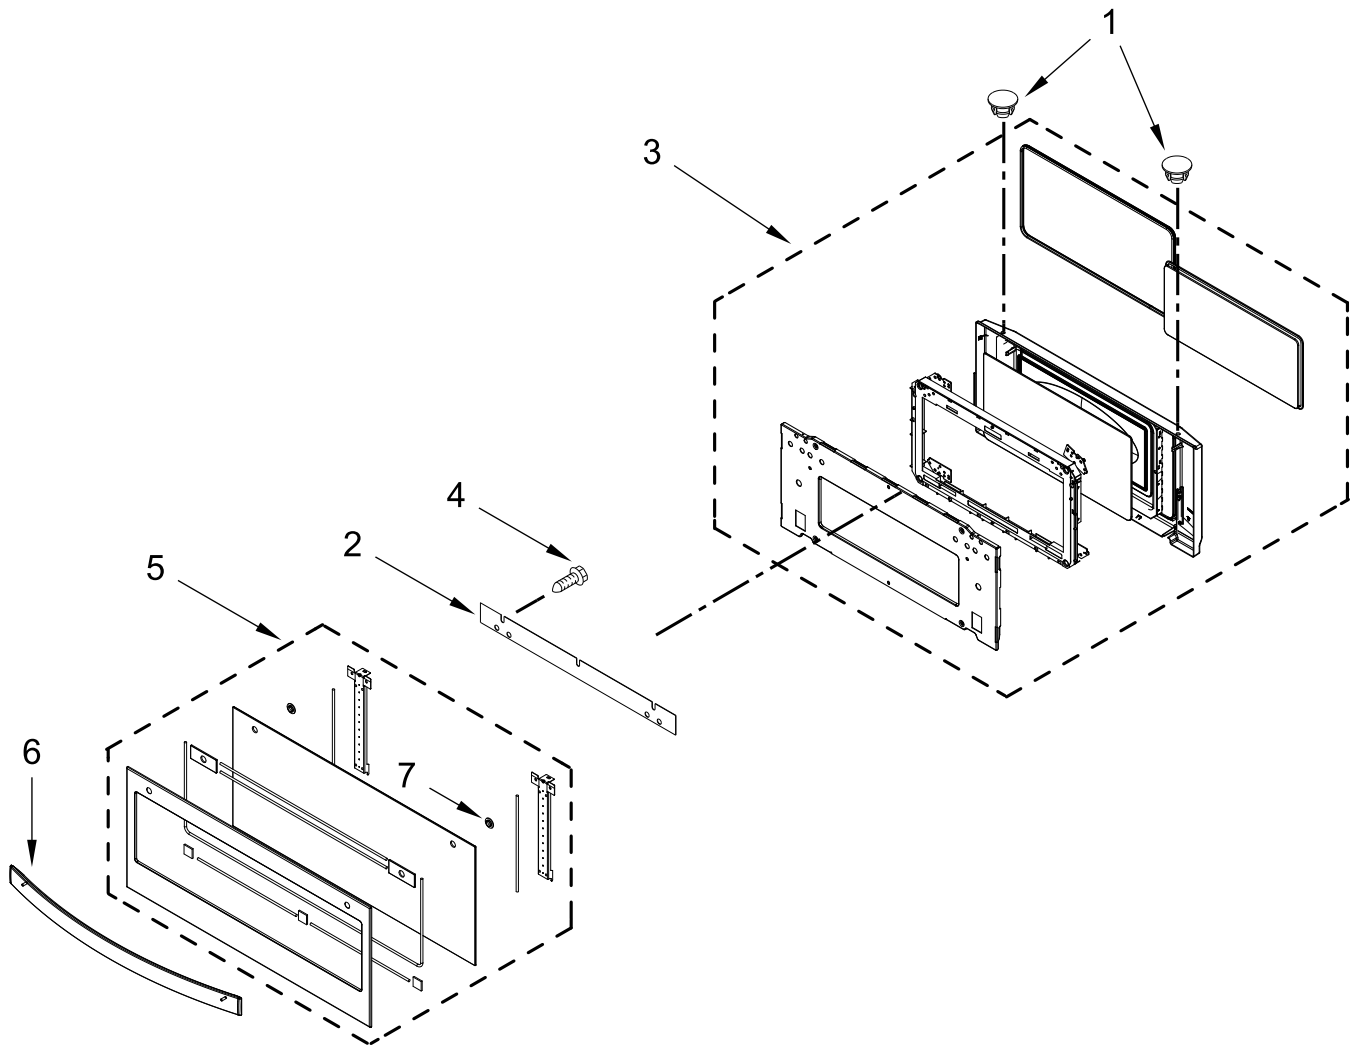



# MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw	5		Assembly, Outer Door	6		Assembly, Handle
2	W10359769	Foam, Door Handle		W10866273	Stainless		W10875206	Stainless
3	W10687342	Assembly, Inner Door		W11028413	Black Stainless		W10903342	Black Stainless
4	W10480830	Screw				7	W10319024	Washer, Door

# OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	482338	Sealer, Silastic
		ACCESSORIES
	W10123240	Rack, Broiler Pan & Roasting
	W10355016	Cleaner, Stainless Steel
	4396923	Grid, Broiler Pan and
	8205262RB	Steamer, Microwave
	W10355049	Wipes, Stainless Steel Cleaning
	W10745649	Rack, Sliding