



## Quick-Connect Plugs

P1 through P10 for oven controls  
P21 through P25 for cooktop

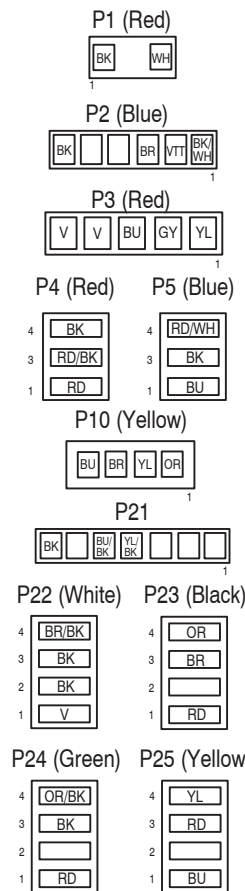


## Oven Control Wiring Diagram

NOTE: Schematic shows oven door open and elements off.

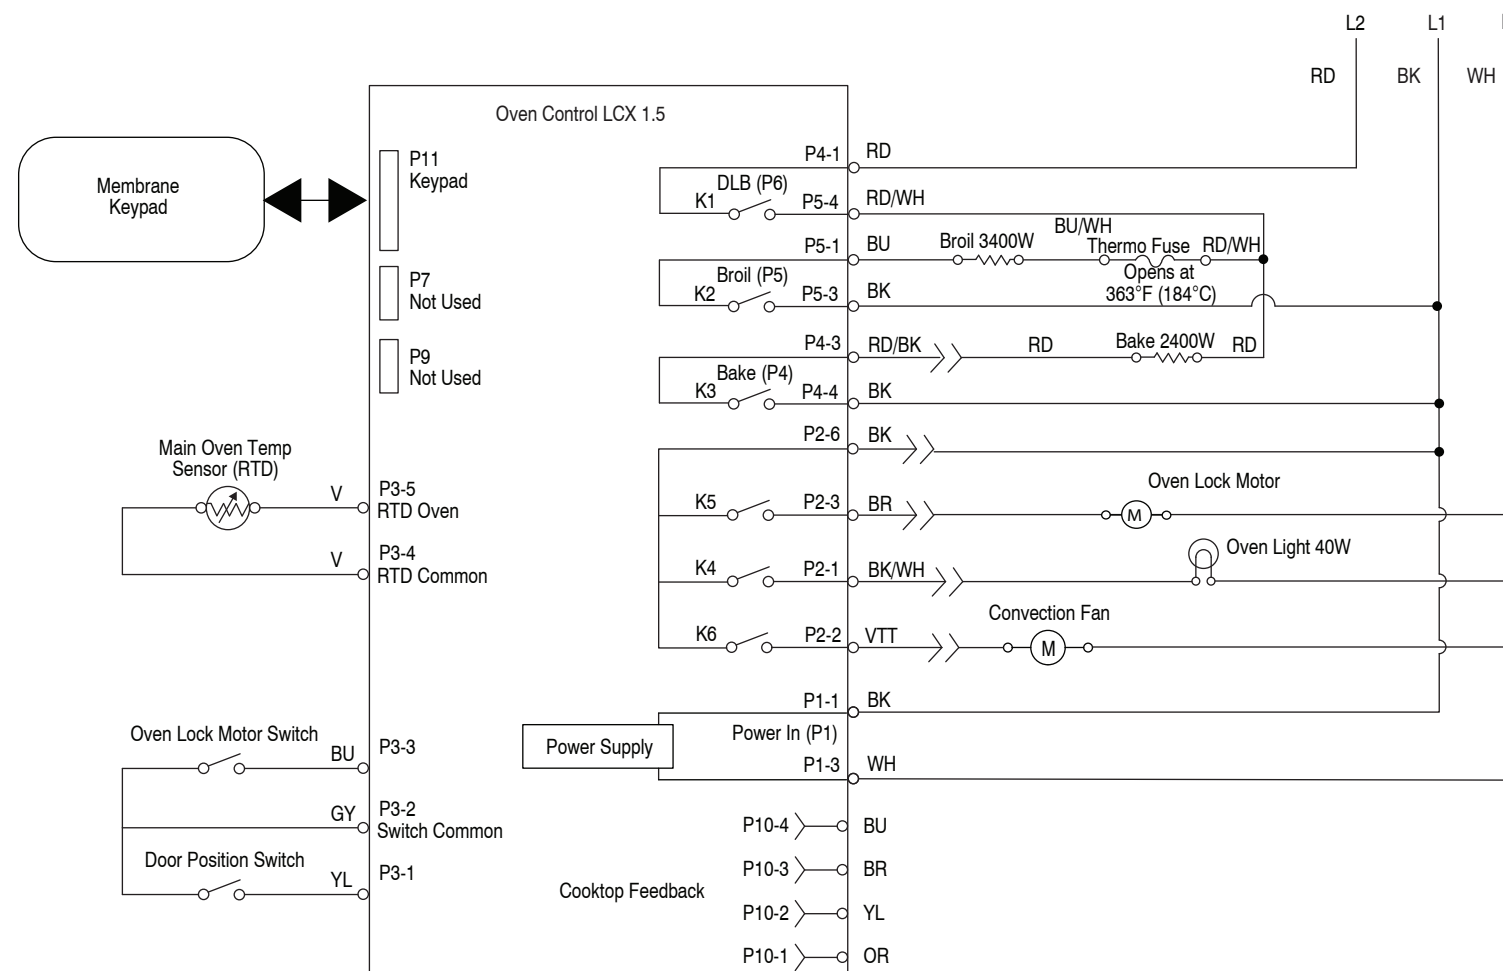

## Cooktop Wiring Diagram

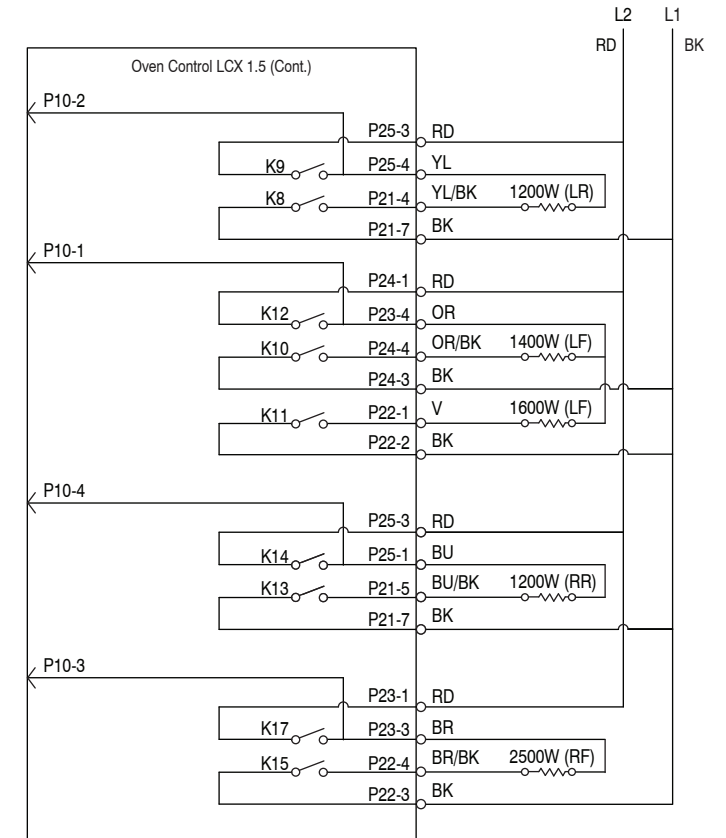

### LEGEND

Connection	No Connection	On Some Models	In Line Connection	Connector P2, Position 1	Circuitry Enclosed Within	Terminals	Single Switch	Thermal Switch (opens on heatrise)	Thermal Switch (closes on heatrise)	Resistor or Element	Motor	Incandescent Light	Non-resettable Fuse	Thermistor	Indicator Light	Triac	Thermo Fuse


# À L'USAGE DU TECHNICIEN DE RÉPARATION UNIQUEMENT

Schéma de câblage

Ne pas enlever ou détruire


## Fiches à connexion rapide

P1 par P10 pour les commandes du four  
 P21 par P25 pour la table de cuisson

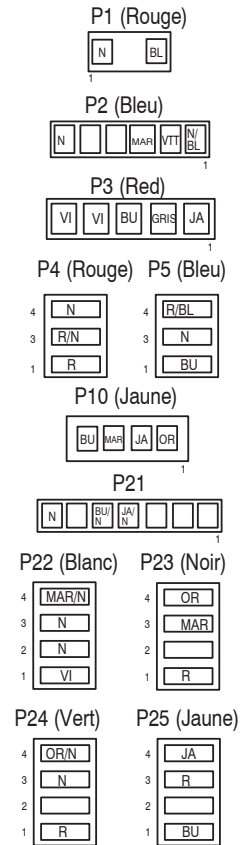


## Schéma de câblage du module de commande du four

REMARQUE : Le schéma représente la porte du four ouverte et les éléments éteints.

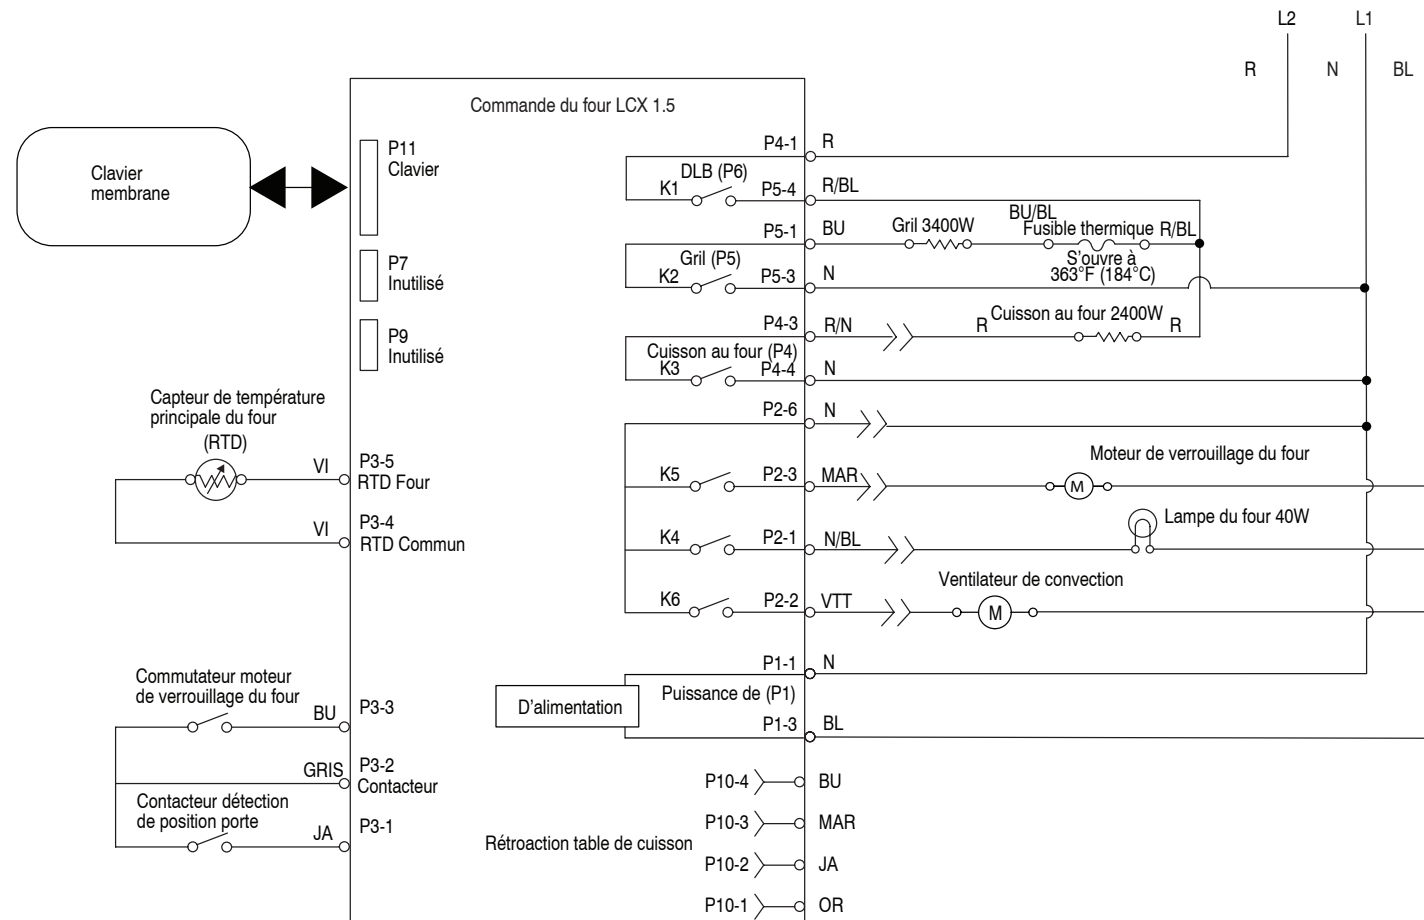

## Schéma de câblage de la table de cuisson

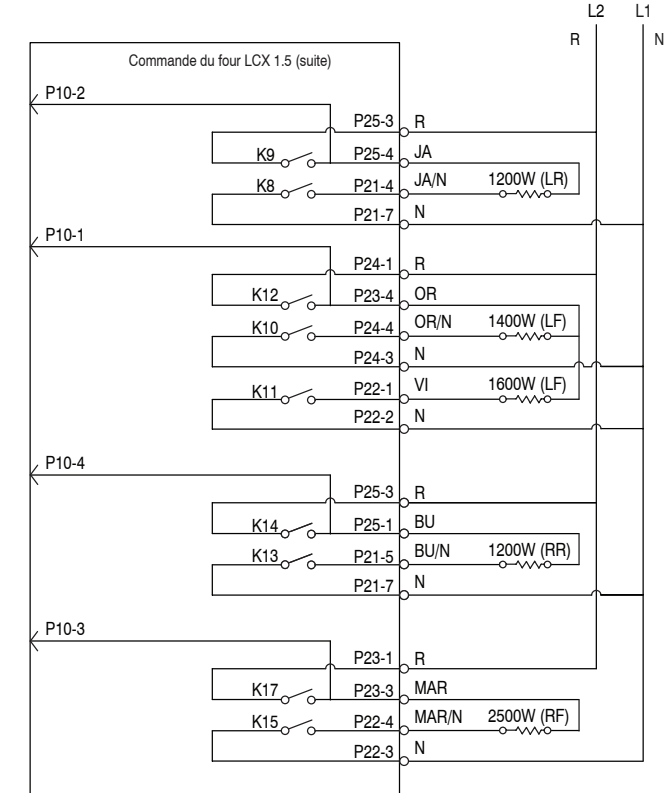

### LÉGENDE

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--