



Connect your dishwasher – to the future.



# Home Connect. One app for everything\*.

Home Connect is the first app that washes and dries, rinses, bakes, makes coffee and looks into your refrigerator for you. No matter how many different appliances or brands from selected European manufacturers – Home Connect can connect them all\* and make them mobile.

For you, this means a vast range of new opportunities to make your life more agreeable. With just a smartphone or tablet PC, you can easily use convenient services, discover clever information and take care of your housework. In short: Welcome to a new way of living.



\*Please check the availability of the Home Connect service, products and features for your country at [www.home-connect.com](http://www.home-connect.com)

# Your new way of living.

## More convenient.

Home Connect lets you control your appliances whenever you want, wherever you want. Simply and intuitively using a smartphone or tablet PC. This saves you bother and waiting around, meaning you will have more time for the things that are truly important to you.

## More simple.

Using the app's cleverly designed touchscreen, you can adjust operating settings such as audible signals or even individual programs. It's simpler and more straightforward than on the appliance itself, plus you have direct access to a range of data, operating manuals and even numerous instructional videos.

## More networked.

Let yourself be inspired! Discover numerous extras that have been tailor-made just for your appliances: recipe collections, tips on using your appliances and much more. Compatible accessories can be ordered at any time with just a few clicks.



## With Home Connect, your dishwasher can do a whole lot more.

You can now control your dishwasher when out and about and so you have more time for the things that are truly important to you! On the following pages, you'll discover how to connect your dishwasher to the pioneering Home Connect App and take advantage of its numerous benefits. You can find everything you need to know about Home Connect at [www.home-connect.com](http://www.home-connect.com)



### What do you need to connect your dishwasher to Home Connect?

- Your smartphone or tablet PC must be running the latest version of the operating system it uses.
- The home network signal (Wi-Fi) must be strong where the dishwasher is fitted.

**Name and password for your home network (Wi-Fi):**

Network name (SSID): \_\_\_\_\_

Password (key): \_\_\_\_\_

- The home network must be connected to the Internet and the Wi-Fi function activated.
- You have unpacked and connected your dishwasher.

# Step 1: Installing the Home Connect App



**A** On your smartphone or tablet PC, go to the App Store (Apple devices) or to the Google Play Store (Android devices).



**B** Enter the term "**Home Connect**" in the store's search field.



**C** Select the Home Connect App and install it on your smartphone or tablet PC.



**D** Start the app and create your Home Connect login details. The app will guide you through the registration process. Don't forget to make a note of your e-mail address and password afterwards.



## Home Connect login details:


E-mail: \_\_\_\_\_

Password: \_\_\_\_\_



Please check availability at [www.home-connect.com](http://www.home-connect.com)

## Step 2 (initial setup): Connecting your dishwasher to your home network (Wi-Fi)

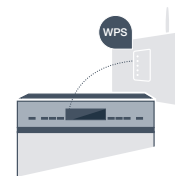


A Switch the dishwasher on.



B Check whether your home network router has a WPS function (automatic connection). You will find information about this in the manual for your router.

C Does your router have a WPS function (automatic connection)?

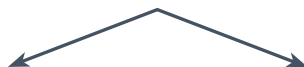


Your router has a WPS function?  
**Then go on to Step 2.1 – Automatic connection (WPS).**

or


Your router does not have a WPS function or you don't know?  
**Then go on to Step 2.2 – Manual connection (professional mode).**



## Step 2.1: Automatic connection of your dishwasher to your home network (Wi-Fi)

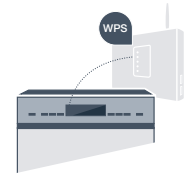


- A** To start the Home Connect Assistant, press the "Remote Start" button on your dishwasher.

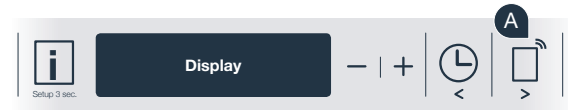

Illustrations are examples.

- B** Follow the instructions on the display of your dishwasher and confirm each one with the "+" button until "**Press WPS button on the router**" appears on the display.

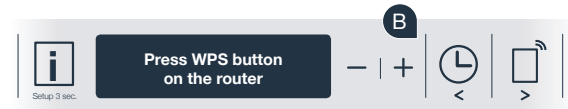


- C** Activate the WPS function on your home network router within the next 2 minutes. (Some routers have a WPS/Wi-Fi button, for example.)

You will find information about this in the manual for your router.)




- D** Once the connection has been established, "**Network login successful**" and "**Connect to App**" will appear on the dishwasher's display.  
**Now go on to Step 3.**

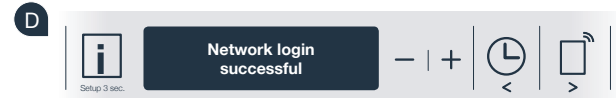

The following message appears on the display: "**Network login failed**".


The connection could not be established within 2 minutes. Check whether your dishwasher is within range of your home network (Wi-Fi) and repeat the process if necessary, or connect manually as described in Step 2.2.

## Step 2.2: Manual connection of your dishwasher to your home network (Wi-Fi)

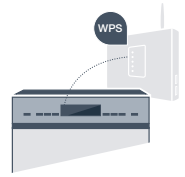


During manual connection, your dishwasher sets up its own Wi-Fi network (access point), which you can log into using your smartphone or tablet PC.

**A** Press and hold the "Info/Setup" button on your dishwasher for 3 seconds.

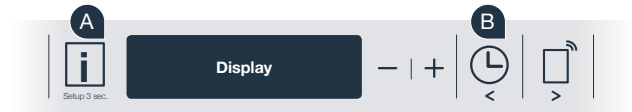


**B** Scroll in the menu using the button "<" or ">" until **"Wi-Fi off"** appears on the display.

**C** Press the button "+" to switch on the Wi-Fi function. **"Wi-Fi on"** will now appear on the display. You will not need to repeat this process again once the Wi-Fi function is activated.

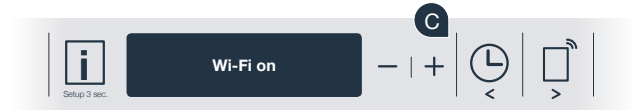


**D** Scroll in the menu using the button "<" or ">" until **"Network login"** appears on the display.

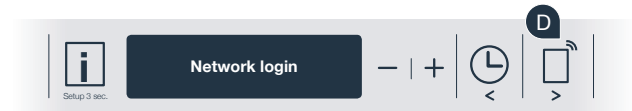

**E** Press the button "-" for manual network login.

**F** **"Connect your mobile unit to the Home Connect network"** appears on the display. Your dishwasher has now set up its own Wi-Fi network (SSID) "HomeConnect", which you can access using your smartphone or tablet PC.

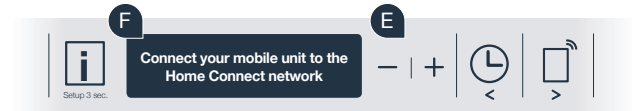



**G** To find this, go to the general settings menu on your smartphone or tablet PC (mobile device) and call up the Wi-Fi settings.



**H** Connect your smartphone or tablet PC to the **"HomeConnect"** Wi-Fi network (SSID) (Wi-Fi password [key] is "HomeConnect"). The connection process may take up to 60 seconds!



**I** Once successfully connected, open the Home Connect App on your smartphone or tablet PC.



**J** The app will now take a few seconds to search for your dishwasher. Once the dishwasher (appliance) has been found, enter the network name (SSID) and password (key) for your home network (Wi-Fi) into the corresponding fields.



**K** Then press **"Transmit to appliance"**.



**L** The display of your dishwasher now shows **"Network connection successful"**.  
**Now go on to Step 3.**




If it was not possible to establish a connection, press and hold the "Start" button on your dishwasher for 3 seconds. Then restart the manual network login on your dishwasher from point **E**

## Step 3: Connecting your dishwasher to the Home Connect App



- A** Press the button "+ " on your dishwasher.  
(This step is omitted if performing an automatic network login.)
- B** The display of your dishwasher will now show **"Connect to App"** or **"Confirm connection to App"**.
- C** Press the button "+ " on your dishwasher to start the process.
- D** As soon as your dishwasher is shown in the Home Connect App, you have 2 minutes to add it to your smartphone or tablet PC.
- E** If the dishwasher is not automatically displayed, press **"Search for appliances"** in the app and then press **"Connect appliance"**.
- F** Follow the final instructions in the app to confirm the connection and complete the process.

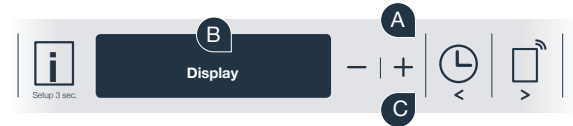

Tip for use: If you would like to start the appliance using the app, press the "Remote Start" button on your dishwasher (see image on the right). A light will now flash above the button when the function is activated.



**YOU HAVE NOW SUCCESSFULLY CONNECTED YOUR DISHWASHER. YOU CAN NOW BENEFIT FROM ALL THE ADVANTAGES OF THE HOME CONNECT APP!**

### Connection failed:

Ensure that your smartphone or tablet PC is within your home network (Wi-Fi). Repeat the processes described in Step 3.



## The future has already begun in your home.

Your new dishwasher with Home Connect function is part of the new generation of networked appliances. Did you know that other appliances come with the Home Connect function too? This means that in future, you will be able to remotely control and operate not only your dishwasher, but also ovens, refrigeration appliances, fully automatic coffee machines, washing machines and clothes dryers from selected European manufacturers. Find out more about the future of housework and about the many advantages that a connected household can offer at: [www.home-connect.com](http://www.home-connect.com)



## Your security is our highest priority.

### **Data security:**

Data transfer is always encrypted. Home Connect fulfills the highest security standards. You can find more information about data protection at [www.home-connect.com](http://www.home-connect.com)

### **Appliance safety:**

To safely operate your appliance with the Home Connect function, please observe the safety instructions in the appliance's instruction manual.



Enjoy the freedom of living life  
your way.



If you have any questions, just visit us at:  
[www.home-connect.com](http://www.home-connect.com).

or call: 1-800-944-2904

**Home Connect is a service of BSH Home Appliances Corporation.**

"Apple App Store" and "iOS" are Apple Inc. trademarks.  
"Google Play Store" and "Android" are Google Inc. trademarks.  
"Wi-Fi" is a trademark of the Wi-Fi Alliance