


# BREDA

EN

## **DETAILED INSTRUCTIONS FOR USE OF A DRYER**


VENTED DRYER  
SP22/1C/1

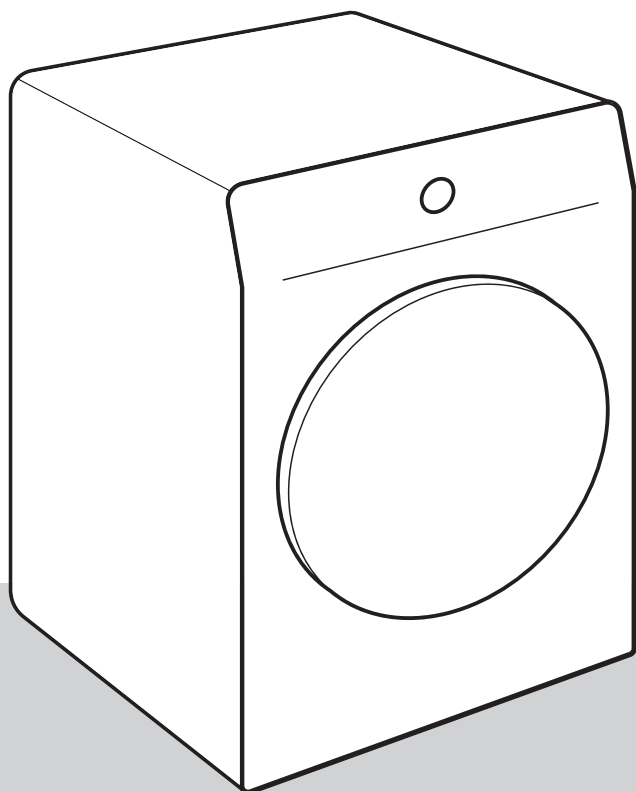


Life is complicated today. Let's make at least laundry care simple! Your new dryer uses innovative technology and the latest achievements in laundry care to help you simplify your daily household chores. The technology offers the gentlest care for any garment, with minimum creasing. Moreover, your new dryer is also friendly to the environment as it uses power in the most economical way possible.

This dryer is intended solely for household use. Please do not use it to dry clothes that are not suitable for machine drying.

The following symbols are used throughout the manual and they have the following meanings:

 **INFORMATION!**  
Information, advice, tip, or recommendation

 **WARNING!**  
Warning – general danger

 **ELECTRIC SHOCK!**  
Warning – danger of electric shock

 **HOT SURFACE!**  
Warning – danger of hot surface

 **DANGER OF FIRE!**  
Warning – danger of fire



It is important that you carefully read the instructions.

# Contents

<b>IMPORTANT SAFETY INSTRUCTIONS</b> .....	<b>5</b>
DANGER OF HOT SURFACE .....	12
SAFETY .....	13
<b>DESCRIPTION OF THE DRYER</b> .....	<b>14</b>
Technical information .....	15
Control unit .....	16
<b>INSTALLATION AND CONNECTION</b> .....	<b>18</b>
Selecting the room .....	19
Dryer placement .....	19
Closet Install- Ventilation Requirements .....	22
Adjusting the dryer feet .....	23
Evacuation of humid air .....	24
Connecting to the power mains .....	26
Electrical installation .....	27
Electrical Connections .....	28
Moving and transport after installation .....	29
<b>BEFORE USING THE APPLIANCE FOR THE FIRST TIME</b> .....	<b>30</b>
<b>DRYING PROCESS, STEP BY STEP (1 - 6)</b> .....	<b>31</b>
1. Step: Heed the labels on the laundry .....	31
2. Step: Preparing for the laundry drying process .....	32
Switching on the dryer .....	32
Loading the dryer .....	33
Step 3: Choosing the drying program .....	34
Program table .....	35
Step 4: Selecting extra functions .....	37
Step 5: Starting the drying program .....	42
Step 6: End of the drying program .....	42
<b>INTERRUPTIONS AND CHANGING THE PROGRAM</b> .....	<b>43</b>
Interruptions .....	43
Changing the program/functions .....	43
Adding laundry after the start of the program .....	43
Saving personal settings .....	43
AdaptTech .....	44
Personal settings menu .....	44
Overview of the number of drying cycles performed .....	44
<b>CLEANING AND MAINTENANCE</b> .....	<b>45</b>
Cleaning the net filter in the door .....	46
Cleaning the exhaust duct .....	47
Cleaning the dryer .....	48
<b>TROUBLESHOOTING</b> .....	<b>49</b>
What to do ...? .....	49
Troubleshooting table .....	49
Sound .....	51
Servicing .....	52

<b>TIPS FOR DRYING AND ECONOMIC USE YOUR DRYER .....</b>	<b>53</b>
Low standby mode .....	53
<b>DISPOSAL .....</b>	<b>54</b>

# IMPORTANT SAFETY INSTRUCTIONS



## **SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE!**

### **⚠ WARNING!**

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

1. Read all instructions before using the appliance.
2. Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they give off vapours that could ignite or explode.
3. Risk of Suffocation and Injury from Entrapment: Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
4. Before the appliance is removed from service or discarded, remove the door to the drying compartment.
5. Do not reach into the appliance if the drum is moving.
6. Do not install or store this appliance where it will be exposed to the weather.
7. Do not tamper with controls.

8. Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
9. Do not use spare parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D printer).
10. Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.
11. Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials.
12. Clean lint screen before or after each load.
13. Keep area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust, and dirt.
14. The interior of the appliance and exhaust duct should be cleaned periodically by qualified service personnel.
15. Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire. To reduce the risk of fire due to contaminated loads, the final part of a tumble dryer cycle occurs without heat (cool down period). Avoid stopping a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
16. **⚠ WARNING:** Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service representative or personnel if you are in doubt as to whether the appliance is properly grounded.

17. **⚠ WARNING:** Keep the ventilation slits on the housing unobstructed.

**Carefully read the instructions for use before using the dryer.**

**Please, do not use the dryer without reading and understanding these instructions for use first.**

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

**These instructions for use of a dryer are supplied with different types or models of dryers. Therefore, they may include descriptions of settings or equipment that are not available in your dryer.**

**Failure to observe the instructions for use or inappropriate use** of the dryer may result in damage to the laundry or the appliance, or injury to the user. Keep the instruction manual handy, near the dryer.

**Your dryer is intended solely for household use.** If the dryer is used for professional, for-profit purpose or purpose exceeding normal use in a household, or if the dryer is used by a person who is not a consumer, the warranty period shall be equal to the shortest warranty period required by relevant legislation.

Follow the instructions for correct installation of the dryer and connection to the power mains (see chapter »INSTALLATION AND CONNECTION«).

All and any repairs or maintenance tasks on the dryer should only be done by trained experts. Unprofessional repair may result in an accident or major malfunction.

To avoid danger, a **damaged power cord** may only be replaced by the manufacturer, a service technician, or an authorized person.

**After installation, the dryer should stand still for two hours before it is connected to the power mains.**

At least two persons are required to install the tumble dryer on top of a washing machine.

 **WARNING!**

The dryer may not be connected to the power mains using an extension cord.

Do not connect the dryer to power mains using an external switching device such as a program timer, or connect it to power mains that is regularly switched on and off by the power supply provider.

 **WARNING!**

In case of a defect, only use approved spare parts by authorized manufacturers.

 **WARNING!**

In case of incorrect dryer connection, incorrect use, or servicing by an unauthorized person, the user shall bear the cost of any damage as such damage shall not be covered by warranty.

Always use the ducts or hoses supplied with the dryer.

**⚠ WARNING!**

As this is an evacuation dryer, it does not have a condensate tank. The handle has solely a decorative purpose and it is fixed; it is not intended for opening. If excessive force is applied, the handle may break.

Install the dryer in a room with adequate ventilation and a temperature between 50°F (10°C) and 77°F (25°C).

Place the dryer on a level and stable solid (concrete) base.

**⚠ WARNING!**

Do not place the dryer behind lockable or sliding door, or door with a hinge on the opposite side of the dryer door hinge. Install the dryer in such way that the door can always be freely opened.

Never block the air exhaust (evacuation opening).

**⚠ WARNING!**

Do not place the dryer on a carpet with long fibres as this may impede air circulation.

Do not connect the dryer to a chimney or a duct that is also used to extract products of combustion of natural gas or other fuels from other appliances.

**Air in the dryer environment should not contain dust particles. The air where the dryer is installed should be thoroughly ventilated** to prevent reverse flow of gases released from the gas appliances with open fire (e.g. a fireplace).

Make sure the fibres do not accumulate around the dryer.

Do not evacuate the air from the dryer through channels or ducts used for appliances or devices that use natural gas or other fuels for their operation.

The appliance may not be in contact with a wall or adjacent furniture.

Do not use the dryer to dry any laundry that has not been washed.

Laundry stained with oil, acetone, alcohol, oil derivatives, stain removers, turpentine, wax, and wax removers should be washed in a washing machine with hot water and detergent before it is dried in the dryer.

Clothing that includes latex, rubber parts, shower and bathing caps, and laundry or covers with rubber foam may not be dried in the dryer.

Use laundry conditioners or similar products in compliance with manufacturer's instructions.

 **DANGER OF FIRE!**

Remove all objects such as lighters and matches from the pockets.

If the dryer is connected to an air exhaust system already used for another appliance, a non-return valve must be installed. Return flow into the dryer could damage the appliance and the non-return valve prevents such flow.

Clean the dryer **filter** after each drying cycle. If you have removed the filter, replace it before the next drying cycle.

**⚠ WARNING!**

**Do not use any solvents or cleaning agents that could damage the dryer** (please observe the recommendations and warnings provided by the manufacturers of the cleaning agents).

**After the drying process, unplug the dryer power cord from the power outlet.**

**The warranty does not cover** consumables, minor deviations in colour, increased noise that results from appliance age and which does not affect the functionality of the dryer, and aesthetic defects on components, which do not affect the dryer's functionality and safety.

**⚠ WARNING!**

**Do not allow children to play with the dryer.**

Prevent your children and pets from entering the dryer drum.

Before closing the dryer door and running the program, make sure there is nothing except laundry in the drum (e.g. if a child climbed into the dryer drum and closed the door from the inside).

**Activate the Child lock.** See chapter »STEP 4: SETTING THE EXTRA FUNCTIONS/Child lock«.

**Do not let children younger than three years to come near the tumble dryer, unless they are under constant supervision.**

**The dryer is made in compliance with all relevant safety standards.**

This dryer may be used by children aged 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, but only if they are supervised during the use of the appliance, if they have been provided relevant instructions regarding safe use of the dryer, and if they understand the hazards of inappropriate use.

Make sure children do not play with the dryer.

Children may not clean the dryer or perform any maintenance tasks without supervision.

## **DANGER OF HOT SURFACE**

### **HOT SURFACE!**

At higher drying temperatures, the door glass will heat up. Be careful to avoid burns. Make sure children do not play near the door glass.

**The back of the dryer may get very hot during operation. Wait for the dryer to cool down completely before touching its back side.**

If you open the dryer door during the drying process, the clothes may be very hot and there is a risk of burning.

Never stop the drying process before it is completed; if you do interrupt the cycle for any reason, be careful when removing the laundry from the drum as it is very hot. Quickly remove the laundry from the drum and spread it to allow it to cool down as quickly as possible.

## SAFETY


### **DANGER OF FIRE!**

If you have cleaned your clothes with industrial cleaners or chemical substances, **do not dry** them in the dryer.

Sušilni stroj je zaščiten z izklopom zaradi pregrevanja. Ta izklopi sušilni stroj, če postane temperatura previsoka.


Če se zamaši mrežni filter, se lahko sproži avtomatski izklop sušilnega stroja ob pregrevanju. Očistite filter, počakajte, da se sušilni stroj ohladi in ga poskusite zagnati. Če se še vedno ne zažene, pokličite servisno službo.

# DESCRIPTION OF THE DRYER

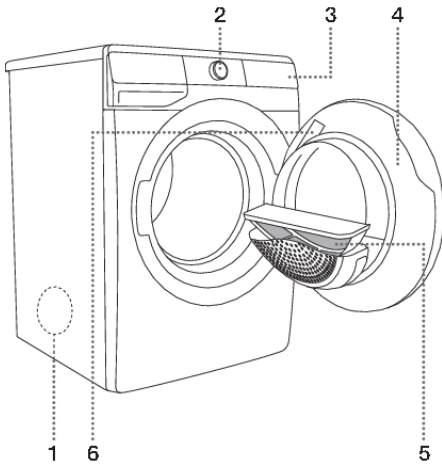

## FRONT

1. Air exhaust opening on the back side
2. Dryer on/off and program selector knob
3. Touch control unit
4. Door
5. Net filter
6. Rating plate

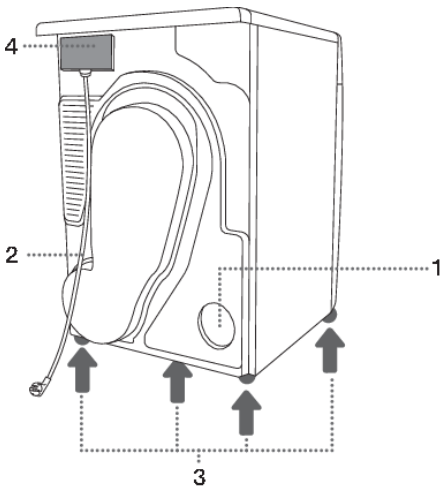

## BACK


1. Air exhaust opening
2. Power cord
3. Adjustable feet
4. Junction box

## Technical information


Rating plate with basic information about the dryer is located on the inner side of the dryer door (see chapter »DESCRIPTION OF THE DRYER«).

<b>Width</b>	23½" (600 mm)
<b>Height</b>	33½" (850 mm)
<b>Dryer depth (a)</b>	24½" (625 mm)
<b>Depth with door closed</b>	25½" (653 mm)
<b>Depth with door open (b)</b>	44½" (1134 mm)
<b>Rated voltage</b>	See rating plate
<b>Fuse</b>	See rating plate
<b>Nominal power</b>	See rating plate
<b>Maximum load</b>	See rating plate


Rating plate

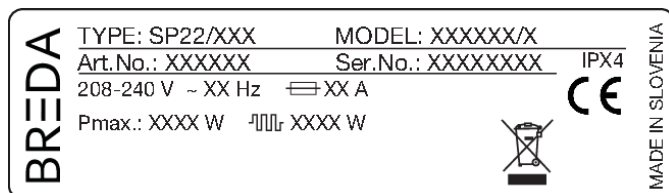

# Control unit

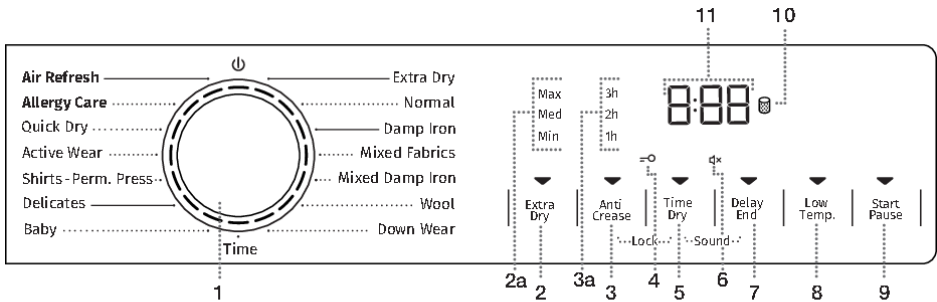

1	<p>Dryer <b>ON/OFF</b>  and <b>PROGRAM SELECTOR KNOB</b>.          To <b>TURN ON</b> the dryer, rotate the program selector knob in either direction.          To <b>TURN OFF</b> the dryer, rotate the program selector knob to position OFF .</p> <p>To <b>SELECT</b> a drying program, rotate the knob in either direction.          The indicator light next to the selected program lights up.</p>
2	<p><b>EXTRA DRY (DRYNESS LEVEL)</b>          Lighting of the symbol when the function is selected.          Extra functions 2a (MAX, MED, MIN) allow selecting a higher dryness level and extend the drying time.</p>
3	<p><b>ANTI CREASE (CREASE PREVENTION)</b>          The selected operating time of the function will light up.</p>
3+5	<p><b>Child lock ON/OFF (Lock)</b>          Press the positions 3+5 and hold them for 3 seconds.</p>
4	<p><b>CHILD LOCK</b> symbol  lighting</p>
5	<p><b>TIME DRY (TIMED DRYING)</b>          Option to set the drying time.</p>
6	<p>Illumination of the <b>SOUND OFF</b> symbol </p>
7	<p><b>DELAY END (DELAYING THE END OF THE DRYING PROGRAM)</b>          Option to set the time when the drying will end.</p>
5+7	<p><b>Sound ON/OFF (Sound)</b>          Press the positions 5+7 and hold them for 3 seconds.</p>
8	<p><b>LOW. TEMP. (LOWER TEMPERATURE)</b>          Option to dry at a lower temperature.</p>
9	<p><b>START/PAUSE BUTTON</b>          The button has 3 functions:</p> <ul style="list-style-type: none"> <li>• <b>START</b> – starting the drying program (start the program with a brief press on the button);</li> <li>• <b>PAUSE</b> – pause the drying program (briefly press the button again to temporarily stop appliance operation);</li> <li>• <b>SAVING PERSONAL SETTINGS</b> (hold the button for 5 seconds).</li> </ul> <p>When the appliance is turned on, the indicator on the button lights up.</p>
10	<p><b>CLEAN THE FILTER</b>  symbol lighting.</p>

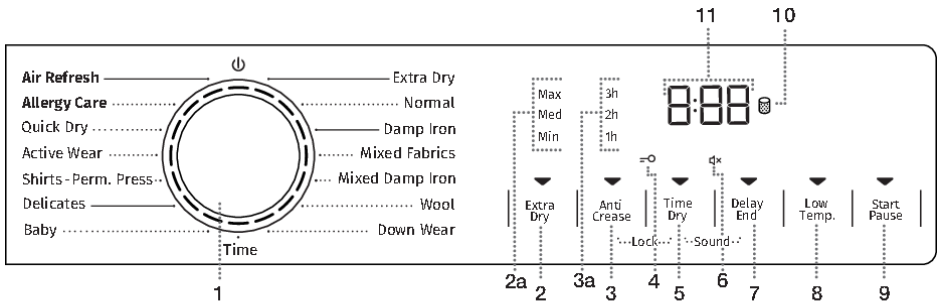

**11** The following is displayed on the **DISPLAY UNIT**:

- Available functions;
- Time remaining to program completion;
- Information for the user.

# INSTALLATION AND CONNECTION



## WARNING:

Install the clothes dryer according to the manufacturer's instructions and local codes.



## WARNING:

Clothes dryer installation must be performed by a qualified installer.



## WARNING:

To reduce the risk of severe injury or death, follow all installation instructions.



## WARNING:

Do not install a clothes dryer with flexible plastic venting materials. If flexible metal (foil type) duct is installed, it must be of a specific type identified by the appliance manufacturer as suitable for use with clothes dryers. Flexible venting materials are known to collapse, be easily crushed, and trap lint. These conditions will obstruct clothes dryer airflow and increase the risk of fire.



## WARNING:

The appliance shall not be exhausted into a chimney, a wall, a ceiling, an attic, a crawl space, or a concealed space of a building.

Only rigid or flexible metal duct shall be used for exhausting.

Maximum duct length shall be 2.4 m (8 feet) and maximum number of bends shall be 4.

The total length of flexible metal duct shall not exceed 2.4 m (8 feet).

The duct shall not be assembled with screws or other fastening means that extend into the duct and catch lint.



## WARNING:


Save these instructions.



### INFORMATION!

Remove all packaging. When removing the packaging, make sure not to damage the dryer with a sharp object.

## Selecting the room

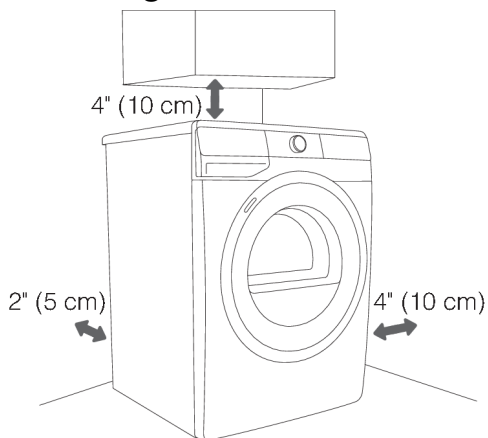

### **INFORMATION!**

The dryer may not be in contact with a wall or adjacent furniture. For optimum dryer operation, we recommend observing the clearance from the walls as indicated in the figure. In case of failure to heed the required minimum clearance, the dryer may overheat.

### **INFORMATION!**

Vents on the appliance back wall, and humid air exhaust opening on the side or back wall may not be obstructed.

Place the appliance in a thoroughly ventilated room with a window or ventilation fan.

Connect the exhaust duct to the air exhaust opening. Do not connect the exhaust to a duct that is also used for evacuation of combustion gases from other appliances or gases from appliances that use other combustible substances for their operation.

The dryer emits heat. Therefore, do not place it in a very small room, as the drying process may take longer due to limited amount of available air.

Lighting in the room should be sufficient to allow reading the information on the display unit on the control panel.

# Dryer placement


If you also have a dryer of corresponding (same) dimensions, it can be placed on top of the washing machine; in this case, vacuum feet must be used. Alternatively, the dryer can be placed next to the washing machine (figures 1 and 3).

If your washing machine is smaller (minimum depth 21½" (545 mm)) than your dryer, then the dryer support has to be purchased extra (figure 2). The supplied vacuum feet must be used; they are designed to prevent the dryer from slipping. It is essential to use the vacuum feet!

Additional equipment (dryer support (a), vacuum feet (b) and wall fixing bracket (c)) can be purchased at the service centre.

The surface on which the appliance is placed should be clean and level.

Washing machine onto which you intend to place the dryer should be able to hold the weight of the dryer (see chapter »DESCRIPTION OF THE DRYER/Technical information«).

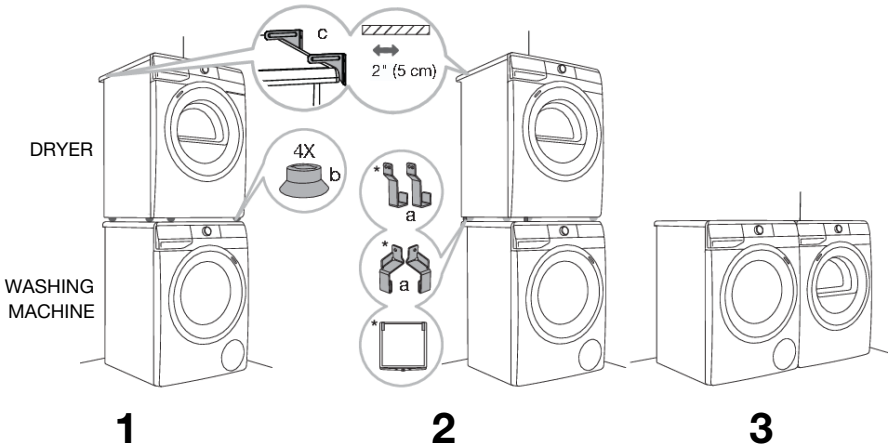


\* depending on the model



## INFORMATION!

At least two persons are required to install the tumble dryer on top of a washing machine.

## Opening the dryer door (bird's-eye view)

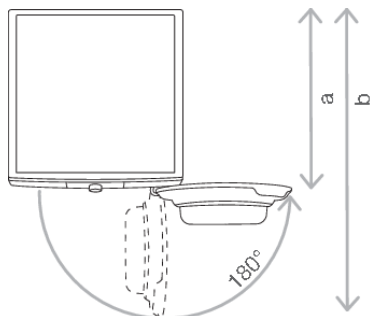

See chapter »DESCRIPTION OF THE DRYER/Technical information«.

a = 24½" (625 mm)

b = 44½" (1134 mm)



### **WARNING!**

Do not place the dryer behind lockable or sliding door, or door with a hinge on the opposite side of the dryer door hinge. Install the dryer in such way that the door can always be freely opened.



### **WARNING!**

Do not place the dryer on a carpet with long fibres as this may impede air circulation.


# Closet Install- Ventilation Requirements

BREDA front panel controls make it possible to install the washers and dryers in a closet.

Make sure there is a 1" (25 mm) minimum clearance between units and cabinet or wall and a 1" (25 mm) minimum clearance between the rear edge of the machine top panel and the cabinet or wall.

To ensure proper ventilation, we recommend louvered doors. Otherwise there must be ventilation openings in the door.

See illustration for minimum ventilation openings below (gray boxes):

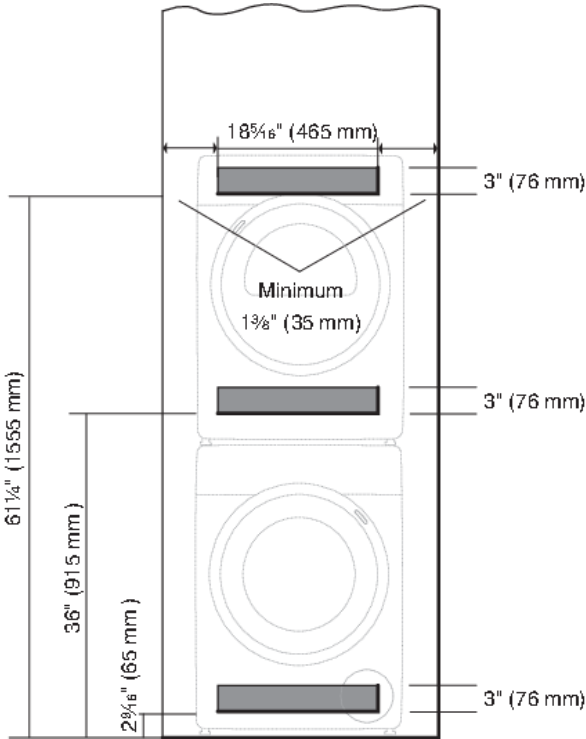

## INFORMATION!

Ensure the washing machine door can be opened without hindrance after installation.




## INFORMATION!

The cool air intake panel at the front of the washing machine must not be blocked or covered. Doing so could cause an error.

## Adjusting the dryer feet

Level the dryer in longitudinal and traverse direction by rotating the adjustable feet which allow levelling by  $\pm 1/2$ " ( $\pm 1$  cm). Use a spirit level and spanner No. 22.

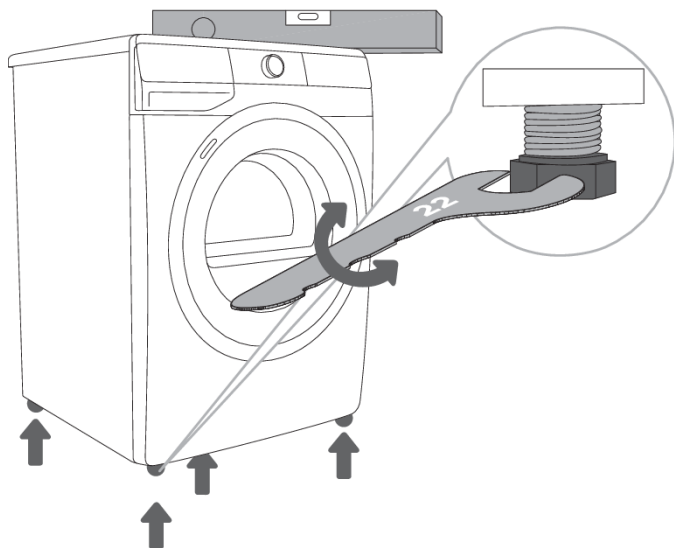

### INFORMATION!

Floor on which the dryer is placed must have a concrete base. It should be clean and dry; otherwise, the dryer may slide. Also clean the adjustable feet.



### INFORMATION!

The dryer must stand level and stable on a solid base.



### INFORMATION!

Incorrect levelling of the dryer with the adjustable legs may cause vibration, appliance sliding across the room, and loud operation. Incorrect levelling of the dryer shall not be subject to warranty.




### INFORMATION!

Sometimes, unusual or louder noise may appear during appliance operation; these are mostly the result of improper installation.

## Evacuation of humid air

The dryer has humid air exhaust opening on the back side. Connect the air exhaust duct to the exhaust opening.

**Air exhaust duct is not supplied with the dryer!**

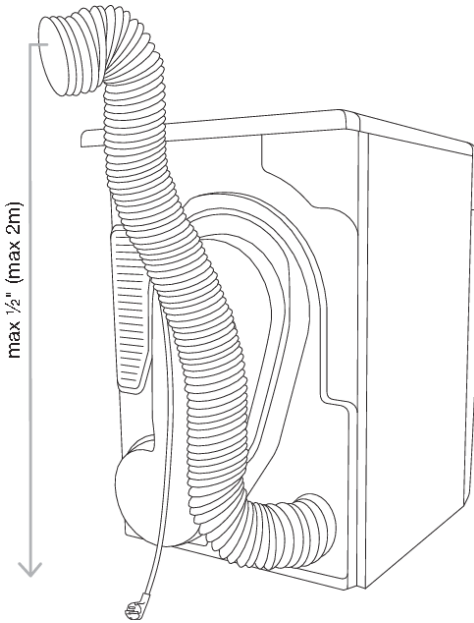

### **INFORMATION!**

Maximum duct length of 60 feet. A maximum of 4 elbows may be used, but 4 feet of duct must be subtracted from the total vent length for every 90° elbow used.


### **INFORMATION!**

The distance between the dryer and the air evacuation opening (ventilation opening, window) may not exceed 1/2" (2 meters). Otherwise, moisture could accumulate in the air exhaust duct.

### **INFORMATION!**

Do not evacuate the air from the dryer through channels used for appliances or devices that use natural gas or other fuels for their operation.

## Examples of correct and incorrect installations

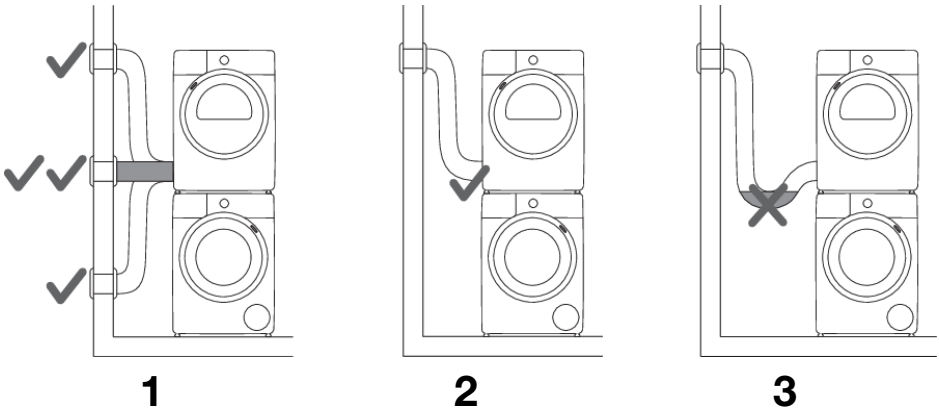

### **INFORMATION!**

1. Correct installation: The exhaust duct is positioned to ensure proper airflow, with no obstructions.
2. Correct installation: The exhaust duct is correctly installed without sharp bends or kinks, allowing unimpeded airflow.
3. Incorrect installation: The exhaust duct is kinked, causing water to accumulate and obstruct or completely block the airflow, leading to operational issues with the dryer.





## **WARNING:**

### **Risk of fire.**

Do not install a booster fan in the exhaust duct.  
Note: The booster fan warning does not apply to clothes dryers intended to be installed in a multiple clothes dryer system, with an engineered exhaust duct system that is installed per the clothes dryer manufacturer's guidelines.

## Connecting to the power mains

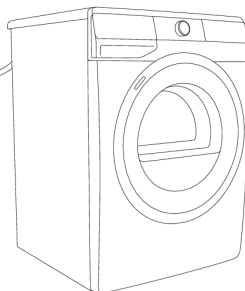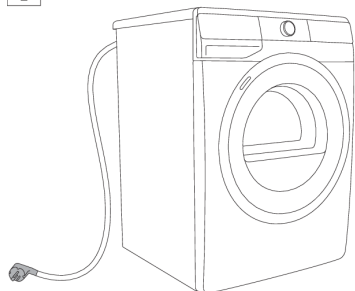

### **ELECTRIC SHOCK!**

**After installation, the dryer should stand still for two hours before it is connected to the power mains; this allows the dryer to stabilize.**

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Do not modify the plug provided with the appliance: if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

Connect the dryer to a grounded power outlet. After installation, the wall outlet should be freely accessible. The outlet should be fitted with an earth contact (in compliance with the relevant regulations).

Information on your dryer is indicated on the rating plate (see chapter »DESCRIPTION OF THE DRYER/Technical information«).



### **ELECTRIC SHOCK!**

**We recommend using over-voltage protection to protect the appliance in case of a lightning strike.**



### **WARNING!**

The dryer may not be connected to the power mains using an extension cord.



### **INFORMATION!**

Any repair and maintenance pertaining to safety or performance should be done by trained experts.



### **INFORMATION!**

A damaged power cord may only be replaced by a person authorized by the manufacturer.

## Electrical installation



### **ELECTRIC SHOCK!**

The receptacle on the rear of the machine is designed to accommodate washers **ONLY BREDA** (rated 208–240 V.) To use this receptacle, you must use the ready-fitted plug supplied with the washing machine or an equivalent. BREDA washers rated 208–240 V have two internal fuses of 15 A each. The machine should only be connected to a grounded wall socket.



### **ELECTRIC SHOCK!**


This appliance must be properly grounded. Refer to the »Important Safety Instructions« for grounding instructions. The power supply cord must be grounded. If the machine is to be used in a wet area, the supply must be protected by a residual current device. Connection to a permanently wired supply point must be made only by a qualified electrician.

As supplied: 208–240 V, 60 Hz, 2300 W heater rating 30 A circuit required.



### **INFORMATION!**

Do not connect the machine to the mains electricity supply by an extension lead.

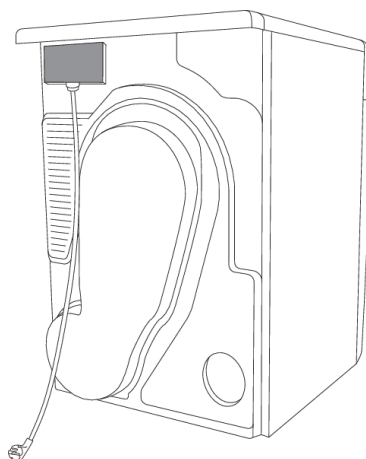

# Electrical Connections



## **INFORMATION!**

Read the Electrical requirements and grounding instructions before connecting the tumble dryer.

Electric models of the dryer are manufactured for a 3-wire connection system. The dryer frame is grounded by a link to the neutral conductor on the dryer terminal block. If local codes do not permit grounding through the neutral, the grounding link from the terminal block must be removed and a separate ground wire must be used.

Only a 4-conductor cord shall be used when the appliance is installed in a location where grounding through the neutral conductor is prohibited. Grounding through the neutral conductor is prohibited for new branch-circuit installations, mobile homes, recreational vehicles, and areas where local codes prohibit grounding through the neutral conductors. The grounding link on the dryer must be removed for all 4-wire installations.

These Electrical Connection instructions provide for installing the dryer in the following situations:

3-wire connections where local codes permit grounding through the neutral, 3-wire connections with a separate grounding connector where local codes do not permit grounding through the neutral, and 4-wire connections.

Each of the above connections can be made with an approved power supply cord or by direct wiring. Each connection instruction identifies the appropriate Power Supply Cord and covers requirements for direct wiring.



## **INFORMATION!**

In Canada, the dryer is delivered ready-fitted with a four-prong plug intended for connection to a single-phase supply.

## Moving and transport after installation

After every drying cycle, a small amount of condensed water will remain in the dryer. Switch on the dryer and choose one of the programs, then let the appliance operate for approximately half a minute. This will pump out the remaining water and prevent damage to the dryer during transport.



### **ELECTRIC SHOCK!**

**After transport, the dryer should be left to stand still for at least two hours before it is connected to the power mains. The appliance should be installed and connected by a trained technician.**



### **INFORMATION!**

If the appliance was not transported in compliance with the instructions, the dryer should be left to stand still at least 2 hours before it is reconnected to the power mains.



### **ELECTRIC SHOCK!**

**Carefully read the instructions for use before connecting the dryer. Repair or any warranty claim resulting from incorrect connection or use of the dryer shall not be covered by the warranty.**




### **INFORMATION!**

The belt may only be replaced by a service technician authorized by the manufacturer, who can supply the original spare part with the code 907722 BELT POLY-V 7PH 1971 HUTCHINSON; 883647 BELT POLY-V 7PHE 1942 HUTCHINSON (depending on the model).


# BEFORE USING THE APPLIANCE FOR THE FIRST TIME

Make sure the dryer is disconnected from the power mains; then, open the door by pulling the left side of the door towards you (figures 1 and 2).


Before using the dryer for the first time, clean the dryer drum using a soft damp cotton cloth and water (figure 3).

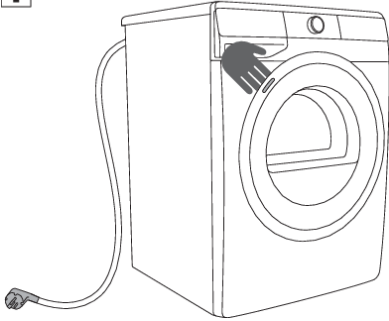

1

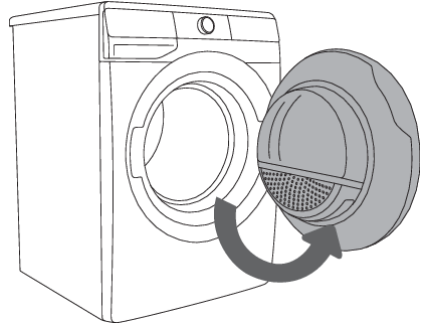

2

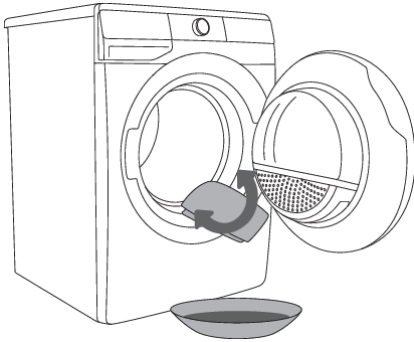

3
















 







## WARNING!

Do not use any solvents or cleaning agents that could damage the dryer (please observe the recommendations and warnings provided by the manufacturers of the cleaning agents).


# DRYING PROCESS, STEP BY STEP (1 - 6)

## 1. Step: Heed the labels on the laundry

<b>Cotton Normal wash; Sensitive laundry</b>					
	Max. washing temperature HOT+ (EXTRA HOT)		Max. washing temperature WARM		Do not wash
	Max. washing temperature HOT		Hand wash only		
<b>Bleaching</b>					
	Bleaching in cool water		Bleaching not allowed		
<b>Dry cleaning</b>					
	Dry cleaning with all agents		Petroleum solvent R11, R113		
	Dry cleaning in kerosene, pure alcohol, and in R113		Dry cleaning not allowed		
<b>Ironing</b>					
	Hot ironing, max. HIGH temperature		Hot ironing, max. LOW temperature		
	Hot ironing, max. MEDIUM temperature		Ironing not allowed		
<b>Drying</b>					
	Dry flat (place on a flat surface)		High temperature		
	Drip dry		Low temperature		
	Line dry		Do not tumble dry		

## 2. Step: Preparing for the laundry drying process

1. Sort the laundry by type and thickness of the fabric (see PROGRAM TABLE).
2. Close the buttons and zips, tie any ribbons, and turn the pockets inside out.
3. Place very sensitive clothes in a special-purpose laundry bag.  
(The special-purpose laundry bag is available as an optional accessory.)

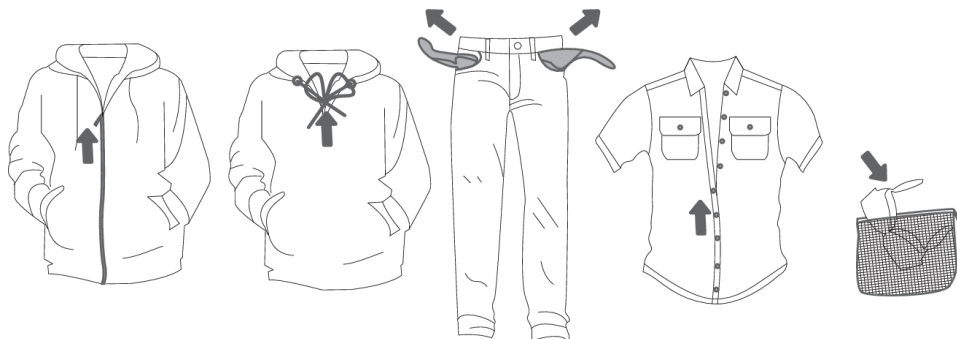


Drying laundry made of particularly delicate fabrics that may be deformed is not recommended. The following types of laundry may not be dried in the dryer as this may cause your garments to deform:

- leather garments and other leather products;
- garments that are waxed or treated in any other way;
- garments with major wooden, plastic, or metal parts;
- garments with spangles;
- garments with metal parts subject to rusting.

## Switching on the dryer

Connect the dryer to the power mains by plugging in the power cord.

To turn on the dryer, rotate the program selector knob (1) to any position (figure 1).

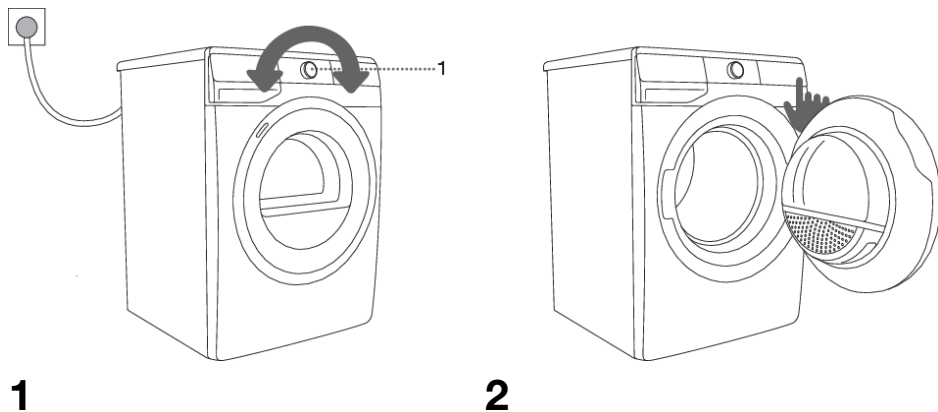


## Loading the dryer


Open the dryer door by pulling the left side of the door towards you (figure 1).

Insert the laundry into the drum (after making sure the drum is empty) (figure 2).


Close the dryer door (figure 3).

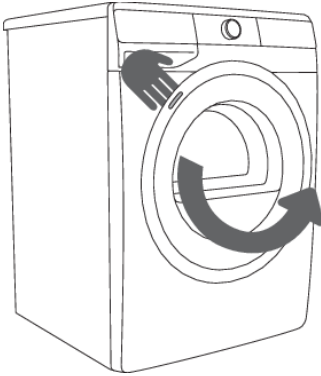

1

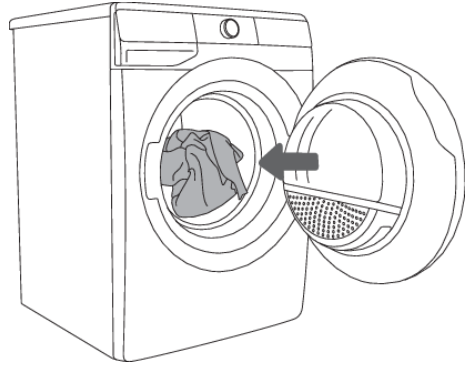

2

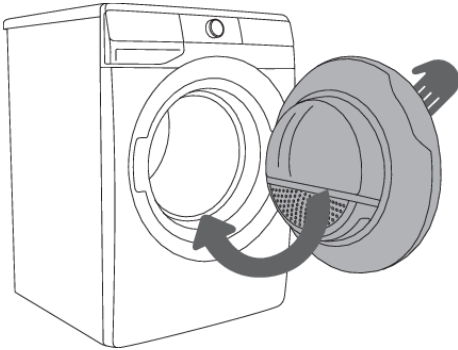

3



### INFORMATION!

Do not insert laundry into the dryer if it has not been wrung or spun (recommended minimum spinning cycle: 800 rpm).

Do not overload the drum! See PROGRAM TABLE and observe your nominal load as indicated on the rating plate.

If the dryer drum is overloaded, the laundry will be more wrinkled and perhaps unevenly dried.




### INFORMATION!

When drying larger items (bedding, towels, tablecloths etc.), loosen them and then insert them into the dryer drum.

### Step 3: Choosing the drying program

Choose the **program** by rotating the program selector knob (1) to the left or to the right (depending on the type of laundry and the desired level of dryness). See PROGRAM TABLE.

The signal light next to the selected program lights up.

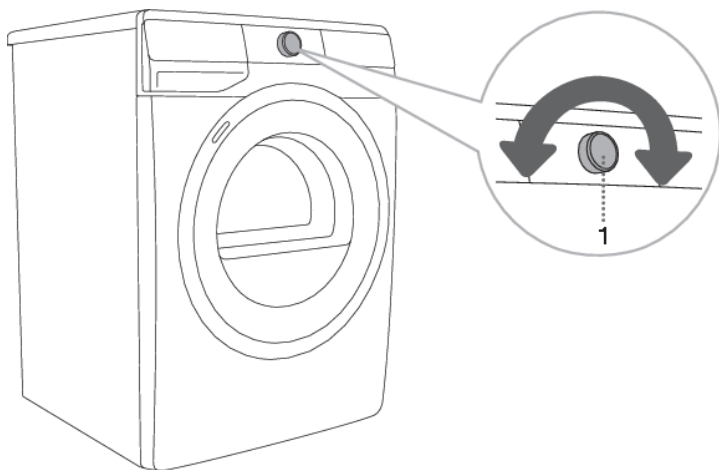

#### **INFORMATION!**

The program selector knob (1) will not rotate automatically during operation.

## Program table

Program Dryness levels	Max. load	Program description
<b>Extra Dry</b> (Cupboard dry)	Full load	Use this program for thicker non-sensitive cotton laundry. After drying, it will be dry and ready to be stored in the cupboard.
<b>Normal</b>	Full load	Use this program for thicker non-sensitive cotton laundry of approximately the same thickness. After drying, it will be dry.  <i>The program is intended for drying wet cotton laundry. It is the most energy-efficient program for drying cotton laundry. The energy usage data is determined using the program cycle setting and medium dryness setting per CAN/CSA-C361-16 Standard and DOE test procedure methods specified at 10 CFR 430, Subpart B, Appendix D2.</i>
<b>Damp Iron</b> (Moist for ironing)	Full load	Use this program for non-sensitive cotton laundry. After drying, it will be ready for ironing.
<b>Mixed Fabrics</b>	1/2 load	Use this program for non-sensitive cotton laundry. After drying, it will be ready for ironing. <b>LOW. TEMP.</b> drying at a lower temperature that is friendlier to your laundry.
<b>Mixed Damp Iron</b>	1/2 load	The program is used for drying delicate laundry made of synthetics fibres.
<b>Wool</b>	1/4 load	This short program is intended for softening or fluffing of clothes made of wool and silk, which have to be dried thoroughly according to manufacturer s instructions.
<b>Down Wear</b>	1/4 load	Use this program to dry textiles stuffed or padded with down (pillows, duvets, jackets etc.). Dry large items separately and use the EXTRA DRY function if necessary.
<b>Time</b> (Timed drying program)	1/2 load	Use this program for non-sensitive laundry that is still slightly moist and has to be thoroughly dried. In the time program, remaining moisture is not detected automatically. If the laundry is still damp after the program is complete, repeat the program; if it is too dry and therefore creased and rough to touch, the drying time you selected was too long.
<b>Baby</b> (Baby clothes)	1/2 load	Use this program to dry baby clothes. Clothes dried with this program are usually normally dry. <b>LOW. TEMP.</b> drying at a lower temperature that is friendlier to your laundry.
<b>Delicates</b>	1/4 load	Use this program to dry highly delicate laundry made of synthetic fibres, which may be slightly moist after the drying process. We recommend using a special-purpose laundry bag. <b>LOW. TEMP.</b> drying at a lower temperature that is friendlier to your laundry.
<b>Shirts - Perm. Press</b>	1/4 load	Use this program to dry shirts and blouses. Adjusted drum rotation prevents the laundry from creasing. <b>LOW. TEMP.</b> drying at a lower temperature that is friendlier to your laundry.

<b>Program Dryness levels</b>	<b>Max. load</b>	<b>Program description</b>
<b>Active Wear</b> (Sportswear)	1/4 load	Use this program for clothing with a membrane, for sportswear made of mixed materials, and breathable fabrics. <b>LOW. TEMP.</b> drying at a lower temperature that is friendlier to your laundry.
<b>Quick Dry</b>	1/2 load	The program is suitable for smaller amounts of laundry that you wish to dry quickly and efficiently.
<b>Allergy Care</b>	1/2 load	Longer drying program duration and overheating of the fabric results in higher drying temperature (above 60 °C), which reduces the amount of microbes and allergens on the garments. This drying program should not be used for delicate items and items that are not suitable for machine drying.
<b>Air Refresh</b>	1/4 load	In this program, the heater is switched off. The program is suitable for refreshing your laundry.

If your laundry is not dried to the desired dryness level, use extra functions or use a more suitable program.

## Step 4: Selecting extra functions



### INFORMATION!

Activate/deactivate the function by pressing the desired position (before pressing the (9) START/PAUSE button).



Adjust the settings by pressing the relevant function button (before pressing the (9) START/PAUSE button).

Functions that can be changed or adjusted with the selected drying program are partly lit (dimmed).

Certain settings cannot be selected with some programs. Such settings will not be lit, and the button will flash when pressed (see FUNCTION TABLE).

Description of lighting of functions for the selected drying program:


- **Lit** (Basic/preset setting);
- **Dimmed** (Functions that can be adjusted) and
- **Unlit** (Functions that cannot be selected).

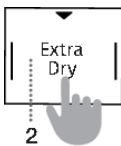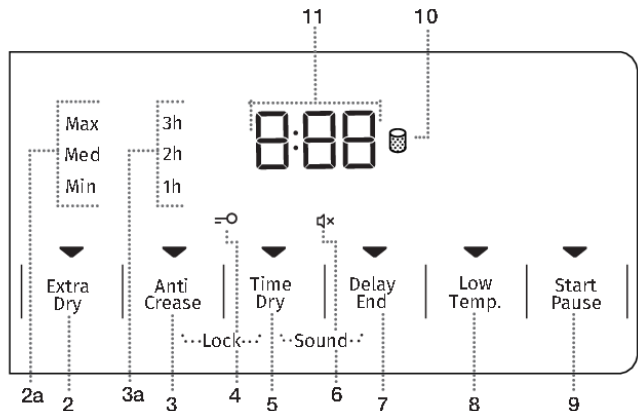

### EXTRA DRY (DRYNESS LEVEL)


Press the (2) **EXTRA DRY** (DRYNESS LEVEL) position to adjust (increase) the dryness level and drying duration. This setting can be adjusted before the start of the drying process. After the drying program is completed, this function is not stored unless the same program with the same settings has been used 3 times in a row (in such case, the **ADAPTECH** function is activated).

Three higher dryness levels and drying times are available. The extra functions (2a) (MAX, MED, MIN) allow selecting a higher dryness level while extending the drying time. The light on the selected drying mode will be lit up.

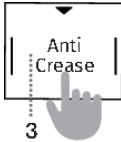

### ANTI CREASE (CREASE PREVENTION)


If you do not intend or cannot remove the laundry from the dryer immediately after the completion of the drying program, we recommend using the (3) **ANTI CREASE (CREASE PREVENTION)** function which has to be selected before the start of the drying process. Press on the position (3) **ANTI CREASE (CREASE PREVENTION)** to choose between 1h, 2h, and 3h (3a) or deactivating this function. When you open the dryer door after the completion of the drying program, the function is automatically deactivated. The function is also deactivated if you press the (9) **START/PAUSE** button after the completion of the program.

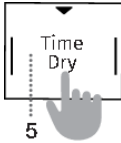

### TIME DRY (TIMED DRYING)

In the program Time (Timed program), you can press the position (5) **TIME DRY (TIMED DRYING)** to set the drying time. The light under the selected function's icon will light up. Initial time is 0:30; with every press, the drying time is increased by 15 minutes. The longest possible drying time is 4:00 h.

To reset (stop) the set drying time, press the position (5) **TIME DRY DRY (TIMED DRYING)** and hold it for three seconds.

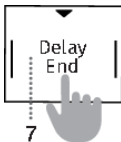

### DELAY END (DELAYING THE END OF THE DRYING PROGRAM)

(depending on the model)


By pressing or holding position (7) **DELAY END (DELAYING THE END OF THE DRYING PROGRAM)**, it is possible to set the end of the drying period to be up to 24h.

If you press any button (except **DELAY END** and **START/PAUSE**) while setting the **DELAY END (DELAYING THE END OF THE DRYING PROGRAM)** function, then **DELAY END** will be reset. Therefore, before setting the **DELAY END**, all other desired functions have to be set first.

Settings procedure:

- Select the desired program and extra functions.
- Press or hold position (7) **DELAY END (DELAYING THE END OF THE DRYING PROGRAM)** to set the desired drying end delay period. It can be selected in 30-minute increments up to 6 hours, and then in 1 hour increments up to 24 hours.
- The function is activated when the (9) **START/PAUSE**.

The dryer starts counting down the time. When the countdown reaches the drying program duration (e.g. 2:30), the drying program starts automatically.


To stop or change the drying end delay, rotate the drying program selector knob (1) to position **OFF**  for at least 1 second.

When the dryer is turned on the next time, you can set a new drying completion delay time.

To quickly cancel the program completion delay, press the position (7) **DELAY END** (DELAYING THE END OF THE DRYING PROGRAM) and hold it for 3 seconds. The drying program will resume.

Example of function setting:

If you wish the drying program end at 6:00 in the morning and it is now 21:00, then set the **DELAY END** (DELAYING THE END OF THE DRYING PROGRAM) to 9 hours.

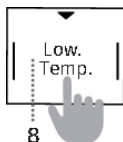

### **LOW. TEMP.** (LOWER TEMPERATURE)

Press on the (8) **LOW. TEMP.** (LOWER TEMPERATURE) position to choose drying at a lower temperature that is friendlier to your laundry.



Drying laundry at a lower temperature than normal in order to reduce the possibility of shrinkage. During the drying process, the temperature is decreased by means of accurate control of heat pump operation and an additional temperature sensor. Therefore, shrinkage of clothes with this program can be up to 50% lower than with normal drying at a normal drying temperature (depending on the garments and type of fabric). The program is intended for garments that may be dried in a dryer.



### **INFORMATION!**

Some functions are not available and cannot be selected with certain programs; an acoustic signal and a flashing light will indicate such cases (see EXTRA FUNCTION TABLE).


## SETTINGS USING A COMBINATION OF TWO BUTTONS PRESSED SIMULTANEOUSLY

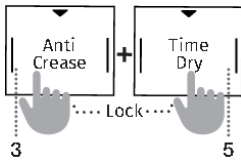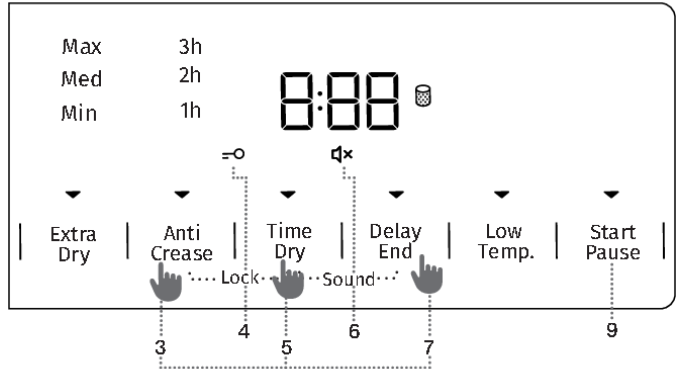

### LOCK (CHILD LOCK)

To activate or deactivate the child lock, press the positions (3) **ANTI CREASE** (CREASE PREVENTION) and (5) **TIME DRY** (TIMED DRYING) simultaneously and hold them for at least 3 seconds until the symbol  $\text{=O}$  (4) lights up or goes off, respectively.

If the child lock is activated, program or additional functions cannot be changed. The child lock remains active after the dryer is switched off. Therefore, it has to be deactivated before a new program can be selected. It can also be switched off during the drying process.

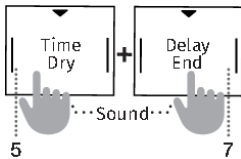

### SOUND (SOUND OFF)

To switch off, or mute, the appliance sounds, simultaneously press the positions (5) **TIME DRY** (TIMED DRYING) and (7) **DELAY END** (DELAYING THE END OF THE DRYING PROGRAM) and hold them for at least 3 seconds until the symbol  $\text{Qx}$  (6) lights up or goes off, respectively.

To reactivate the sound, simultaneously press the positions (5) and (7) and hold them for at least 3 seconds. If you turn off the sound, then there is no audible signal at the end of a drying program.

### INFORMATION!

After disconnecting the dryer from the power mains, all settings will be reset to their default factory values, except for the acoustic signal loudness, anti-crease, and child lock setting.

### INFORMATION!

The functions **LOCK** (CHILD LOCK) and **SOUND** (SOUND OFF) cannot be activated or deactivated 10 seconds after turning on.

## Extra function table


Program	EXTRA DRY (DRYNESS LEVEL)	ANTI CREASE (CREASE PREVENTION)	TIME DRY (TIMED DRYING)	DELAY END (DELAYING THE END OF THE DRYING PROGRAM)	LOW. TEMP. (LOWER TEMPERATURE)
<b>Extra Dry</b> (Cupboard dry)	•	•		•	•
<b>Normal</b>	•	•		•	
<b>Damp Iron</b> (Moist for ironing)	•	•		•	•
<b>Mixed Fabrics</b>	•	•		•	•
<b>Mixed Damp Iron</b>	•	•		•	•
<b>Wool</b>					
<b>Down Wear</b>	•	•		•	•
<b>Time</b> (Timed drying program)		•	•		•
<b>Baby</b> (Baby clothes)	•	•		•	•
<b>Delicates</b>	•	•		•	•
<b>Shirts - Perm. Press</b>	•	•		•	•
<b>Active Wear</b> (Sportswear)	•	•		•	•
<b>Quick Dry</b>		•		•	
<b>Allergy Care</b>	•	•			
<b>Air Refresh</b>					

- Extra functions can be used

If your laundry is not dried to the desired dryness level, use extra functions or use a more suitable program.

## Step 5: Starting the drying program

Press the (9) **START/PAUSE**.

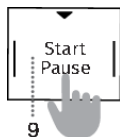

TIME REMAINING TO PROGRAM COMPLETION or **DELAY END** (DELAYING THE END OF THE DRYING PROGRAM) time (if set) will appear on the display. Symbols will be lit on the selected functions.

If the TIME REMAINING UNTIL PROGRAM COMPLETION flashes three times on the display unit, and there is an audible signal, this means that the dryer door is open or not closed tightly. Close the dryer door and press the button (9) **START/PAUSE** again to resume the drying program.

## Step 6: End of the drying program

At the end of the drying program, **End** »(End)« will appear on the display unit, the two red indicator lights will light up, the (9) **START/PAUSE** button light will flash, and the light for the selected time of **ANTI CREASE** (CREASE PREVENTION) (3a) function, if activated or selected, will flash.



1. Open the dryer door.
2. Clean the filter (see section »CLEANING« ...).
3. Take the laundry from the drum.
4. Close the door!
5. Switch off the dryer (rotate the program selector knob (1) to the **OFF** ⏻ position).
6. Unplug the power cord from the outlet.



### **INFORMATION!**

After the end of the drying program, immediately remove the laundry from the dryer to prevent it from creasing again.



### **WARNING!**

The final drying cycle includes a cooling down stage without heater operation. It makes sure the laundry is of suitable temperature at the end of the program and that it can be taken from the dryer without risk of touch hot clothes.

# INTERRUPTIONS AND CHANGING THE PROGRAM

## Interruptions

### Interrupting the program process

Press the (9) START/PAUSE button to pause/resume a program.

To stop and cancel the drying program, press the (9) START/PAUSE button and hold it for 3 seconds. The selected program will stop, and the dryer will start to cool down. Cooling down time depends on the selected program. After this process, the drying program can be selected again.

### Open door

If the dryer door is opened during the drying process, the drying cycle will be interrupted.

When the door is closed and the (9) START/PAUSE button is pressed, the drying will resume from the point at which it was interrupted.



### HOT SURFACE!


**The dryer door will heat up during the drying process. Make sure you do not burn yourself when opening the dryer door.**

### Power supply failure

When power supply is resumed, **PF** will appear on the display unit; the signal light on the (9) START/PAUSE button will flash.

To resume the drying process, press the (9) START/PAUSE button.

## Changing the program/functions

Turn off the dryer by rotating the program selector knob (1) to position **OFF** . Turn it back on again by rotating the program selector knob (1) to any program.

Select another program/function and press the (9) START/PAUSE button again.

## Adding laundry after the start of the program

Open the dryer door and press the (9) START/PAUSE button. Insert the laundry and press the button (9) START/PAUSE.

Drying time may be extended.



### HOT SURFACE!

**When loading the laundry, make sure you do not burn yourself when you open the dryer door.**

## Saving personal settings

Initial settings may be changed.

When the program and additional functions are selected, you may store such combination by pressing the (9) START/PAUSE button and holding it for (9) seconds. A signal light on the (9) START/PAUSE button and an acoustic signal will confirm your selection. Indication **»saved«** **»(saved)«** will be appear briefly on the display unit (11).

Press the (9) START/PAUSE button to start the drying process.


The changed combination will appear every time you switch on the dryer.

Follow the same procedure to change a previously saved combination.

## AdaptTech

When a drying program setting is used three times in a row, this setting is stored as default and will always be suggested when you select that drying program – this is called the **ADAPTECH** function. If you manually store the settings of a drying program, the **ADAPTECH** function on this program is deactivated.

## Personal settings menu

To turn on the dryer, rotate the program selector knob (1) to any position. To open the personal settings menu, simultaneously press on the positions (2) **EXTRA DRY** (DRYNESS LEVEL) and (5) **TIME DRY** (TIMED DRYING) and hold them for 3 seconds. The symbols (3) **ANTI CREASE** (CREASE PREVENTION), (10) and **CLEAN THE FILTER**  will light up on the display unit.

Number 1 will appear on the display unit, indicating the settings function. Rotate the program selector knob (1) to in either direction to choose the function to change. Number 1 indicates sound settings and number 2 indicates resetting of Personal program settings to factory defaults. If the desired settings are not selected in 20 seconds, the program will automatically return to main menu.

Press on the position (3) **ANTI CREASE** (CREASE PREVENTION) to confirm the desired functions and their relevant settings. Press on the position (2) **EXTRA DRY** (DRYNESS LEVEL) to go back one step.

Acoustic signal volume can be set at four levels (0 means the sound is off; 1 means that the button sound is activated; 2 means low volume, and 3 means high volume). Choose the volume level by rotating the program selector knob (1) to the left or to the right. The lowest setting means that the acoustic signal is switched off.

## Overview of the number of drying cycles performed

The number of drying cycles performed will appear on the display for 3 seconds if you unplug the power cord, wait 10 seconds and then plug the power cord back in. After 3 seconds, the appliance enters standby mode.


# CLEANING AND MAINTENANCE



## ELECTRIC SHOCK!

Before cleaning, make sure to switch off the dryer and disconnect it from the power mains (unplug the power cord from the outlet).

The dryer is fitted with a **filtering system** consisting of one filter.

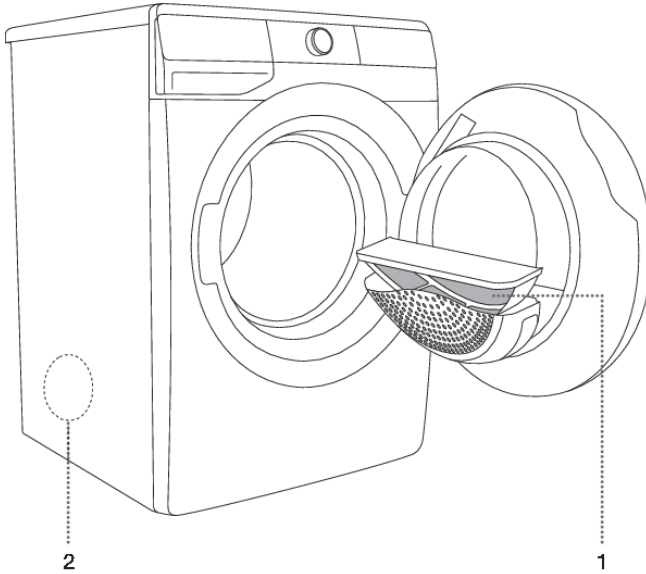

**1** Net filter

**2** Air exhaust opening on the back side



## WARNING!

As this is an evacuation dryer, it does not have a condensate tank. The handle has solely a decorative purpose and it is fixed; it is not intended for opening. If excessive force is applied, the handle may break.



## INFORMATION!


The dryer may never be operated without the filter in place, or with damaged filter, as excessive amount of accumulated fibres from the fabric could cause malfunction or failure of the dryer.

# Cleaning the net filter in the door



## INFORMATION!

Clean the net filter after each drying cycle.

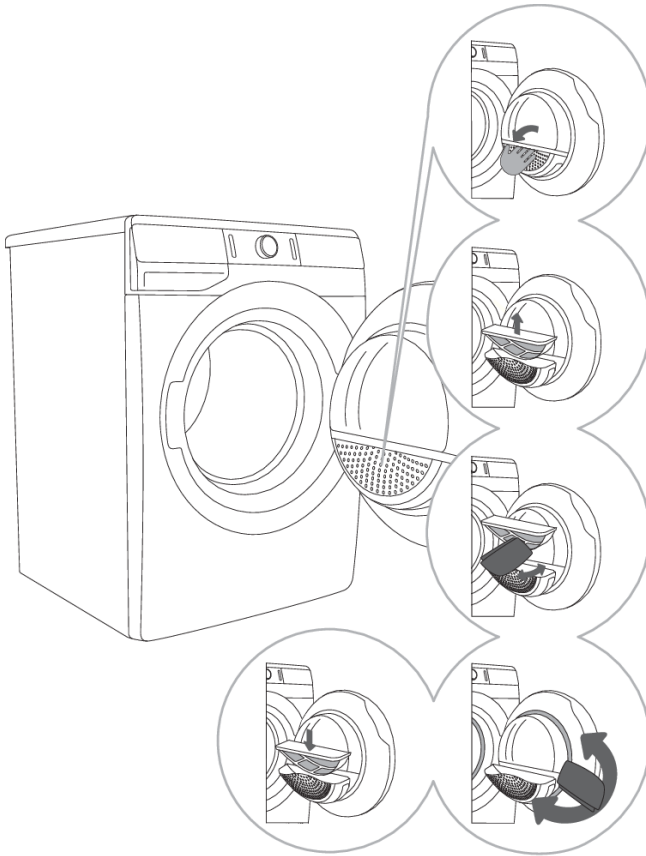

**1** Open the filter housing.

**2** Pull out the net filter.

**3** Gently scrape the filter to remove the lint, i.e. the lining of fibres and threads, with your hand or with a cloth.

**4** If necessary, clean the filter housing and door gasket as well.

**5** Insert the net filter and close the filter housing.




## INFORMATION!

Make sure you do not pinch your fingers with the filter cover.

## Cleaning the exhaust duct

Occasionally clean (vacuum) the interior of the air exhaust opening and the air exhaust duct.

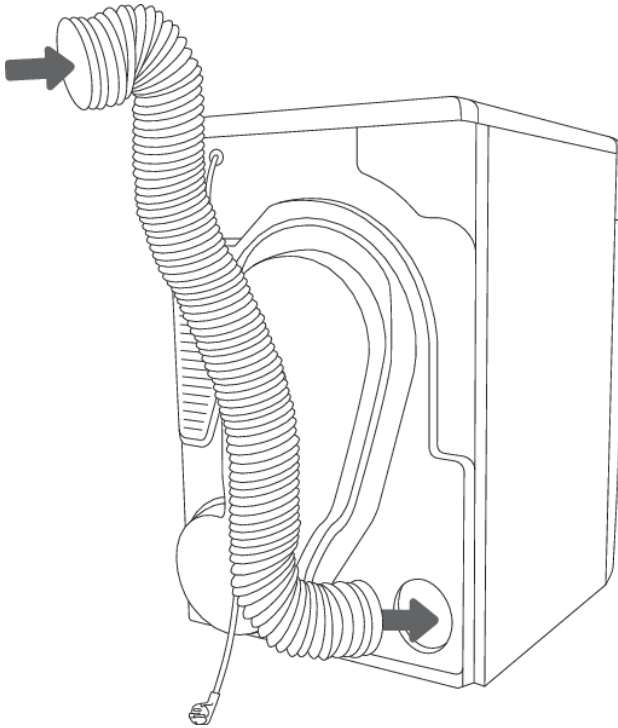

# Cleaning the dryer



## **ELECTRIC SHOCK!**

**Always disconnect the dryer from the power mains before cleaning.**

Clean the dryer exterior using a soft damp cotton cloth.



## **WARNING!**


Do not use any solvents or cleaning agents that could damage the dryer (please observe the recommendations and warnings provided by the manufacturers of the cleaning agents).

Wipe all parts of the dryer with a soft cloth until dry.



## **INFORMATION!**

Do not clean the dryer with a jet of water!

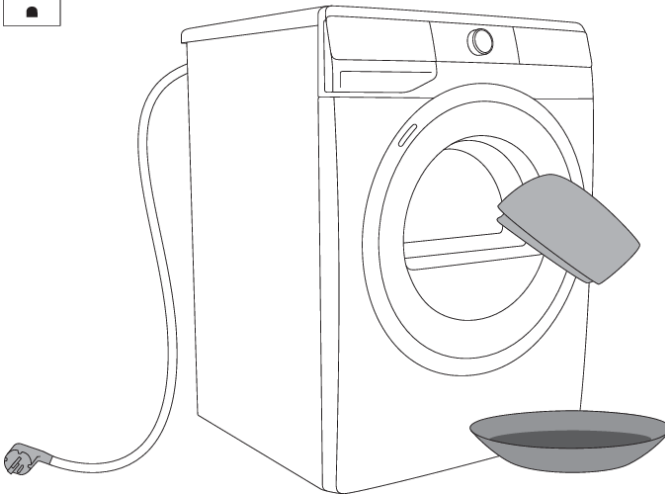

# TROUBLESHOOTING

## What to do ...?

Disturbances from the environment (e.g. the power grid) may result in various error reports (see TROUBLESHOOTING TABLE). In such case:




- Switch off the dryer and wait at least one minute.
- Switch on the dryer and repeat the drying program.
- Most errors during operation can be resolved by the user (see TROUBLESHOOTING TABLE).
- If the error persists, call an authorized service unit.
- Repairs may only be carried out by an adequately trained person.
- Repair or any warranty claim resulting from incorrect connection or use of the dryer shall not be covered by the warranty. In such cases, the costs of repair shall be charged to the user.



## Troubleshooting table

Problem/Error	Cause	What to do?
<b>The machine will not start.</b>	<ul style="list-style-type: none"> <li>• The main switch is not switched on.</li> </ul>	<ul style="list-style-type: none"> <li>• Check whether the main switch is on.</li> </ul>
	<ul style="list-style-type: none"> <li>• There is no voltage in the power outlet.</li> </ul>	<ul style="list-style-type: none"> <li>• Check the fuse.</li> <li>• Check if the power cord plug is correctly inserted into the power outlet.</li> </ul>
<b>There is voltage in the outlet, but the drum does not spin and the appliance does not work.</b>	<ul style="list-style-type: none"> <li>• Open the door.</li> </ul>	<ul style="list-style-type: none"> <li>• Check if the door is closed properly.</li> </ul>
	<ul style="list-style-type: none"> <li>• Perhaps the <b>DELAY END</b> function was set.</li> <li>• Program was not started in accordance with the instructions.</li> </ul>	<ul style="list-style-type: none"> <li>• To deactivate the start delay option, press the position (9) <b>DELAY END</b> and hold for 3 seconds.</li> <li>• Re-read the instructions for use again.</li> </ul>
<b>The appliance stops heating completely during a program.</b>	<ul style="list-style-type: none"> <li>• The net filter may be clogged. As a result, the temperature in the dryer rises, which in turn causes overheating, and therefore heating is switched off.</li> </ul>	<ul style="list-style-type: none"> <li>• Clean the net filter (see chapter »CLEANING AND MAINTENANCE/Cleaning the net filter in the door«).</li> <li>• Wait for the appliance to cool down, and try running it again. If the dryer still fails to start, call a service technician.</li> </ul>
<b>A slight hitting noise appears.</b>	<ul style="list-style-type: none"> <li>• If the dryer is out of use for a long period of time, the support elements are under stress at the same point.</li> </ul>	<ul style="list-style-type: none"> <li>• The noise will subside without any intervention..</li> </ul>
<b>The door opens during drying.</b>	<ul style="list-style-type: none"> <li>• Excessive load on the door (too much laundry in the drum).</li> </ul>	<ul style="list-style-type: none"> <li>• Reduce the amount of laundry.</li> </ul>




<b>Problem/Error</b>	<b>Cause</b>	<b>What to do?</b>
<b>Unevenly dried laundry.</b>	<ul style="list-style-type: none"> <li>Laundry of varying types and thickness, or excessive amount of laundry.</li> </ul>	<ul style="list-style-type: none"> <li>Make sure you have sorted the laundry by type and thickness, whether you have added a suitable amount of laundry to the drum, and whether you have selected a suitable program (see PROGRAM TABLE).</li> </ul>
<b>Laundry not dried or drying takes too long.</b>	<ul style="list-style-type: none"> <li>Filter is not cleaned.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the filter (see chapter »CLEANING AND MAINTENANCE/Cleaning the net filter in the door«).</li> </ul>
	<ul style="list-style-type: none"> <li>Dryer is placed in a closed room; room that is too cold; or room that is too small and the air overheats as a result.</li> </ul>	<ul style="list-style-type: none"> <li>Make sure there is adequate supply of fresh air to the dryer; for example, open the door and/or window.</li> <li>Check if the temperature in the room where the dryer is installed is too high or too low.</li> </ul>
	<ul style="list-style-type: none"> <li>Laundry was not sufficiently wrung or spun.</li> </ul>	<ul style="list-style-type: none"> <li>If the laundry is still wet after the drying cycle, repeat the drying and select an appropriate drying program (after cleaning the filter).</li> </ul>
	<ul style="list-style-type: none"> <li>Amount of laundry dried in the appliance is too large or insufficient.</li> </ul>	<ul style="list-style-type: none"> <li>Use a suitable program or extra functions.</li> </ul>
	<ul style="list-style-type: none"> <li>Laundry (such as bedding) gets tangled into large balls.</li> </ul>	<ul style="list-style-type: none"> <li>Close the buttons or zippers on the laundry before drying.</li> <li>After the drying process, loosen the laundry and select an additional drying program (e.g. Time (Timed drying program)).</li> </ul>

Errors indicated on the display unit may include the following:

<b>Problem/Error</b>	<b>Indication on the display unit and description of error</b>	<b>What to do?</b>
	<b>Control unit failure</b>	Call service centre.
	<b>Temperature sensor failure</b>	Call service centre.
	<b>Communication error</b>	Call service centre.

Problem/Error	Indication on the display unit and description of error	What to do?
 	<b>Control unit failure</b>	Disconnect the tumble dryer from the power supply. Call service centre.

Warnings indicated on the display unit may include the following:

Warning	Indication on the display unit and description of warning	What to do?
	<b>Power supply failure warning</b>	Drying interrupted due to power supply failure. Press the (9) START/PAUSE button to restart or resume the drying program.
	At the end of the drying program, <b>End</b> (End) will appear on the display unit. Red symbols  will light up. This is not a fault; it is just a warning that the filter need to be cleaned after drying.	Clean the filter.

Write down the error code (e.g. E0, E1), switch off the dryer, and call the nearest authorized service (call centre).

## Sound


**Rumbling or rattling noise:** during drying when the laundry also includes hard parts (such as buttons, zippers etc.)

# Servicing

## Before calling a service technician

When you contact a service centre, please state your dryer's type (1), code/ID (2), model number (3), and serial number (4).

Type, code/ID, model, and serial number are indicated on the rating (type) plate located on the front side of the dryer door opening.

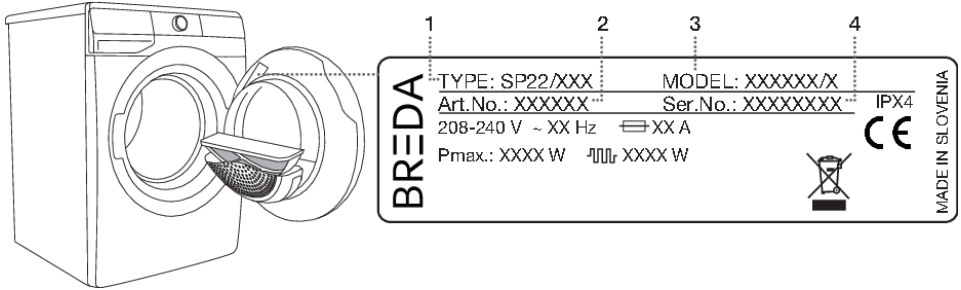

### WARNING!

In case of a failure, only use approved spare parts by authorized manufacturers.



### WARNING!

Repair or any warranty claim resulting from incorrect connection or use of the dryer shall not be covered by the warranty. In such cases, the costs of repair shall be charged to the user.



### INFORMATION!

The warranty does not cover the errors or failures resulting from disturbances from the environment (lightning strike, power grid failures, natural disasters etc.).

# TIPS FOR DRYING AND ECONOMIC USE YOUR DRYER

The most economical way of drying is to dry the recommended amount of laundry in each batch (see PROGRAM TABLE).

Drying laundry made of particularly delicate fabrics that may be deformed is not recommended.

Use of conditioner in the washing cycle is not necessary as the laundry is soft and smooth after drying in the dryer. Drying time will be shorter and power consumption will be lower if the garments are thoroughly wrung or spun before drying. By selecting the appropriate drying program, you will avoid over-drying your laundry and problems with ironing or shrinkage of fabric.

Regular cleaning of the filters will lead to optimum drying time and minimum power consumption.

When drying smaller amounts of laundry or individual garments, the sensor may not perceive the actual level of moisture in the laundry. In such cases, it is recommended to dry smaller items or amounts with programs for dryer laundry or with the timed program.

## Low standby mode

If you do not run any program or choose any settings after switching on the dryer (program selector knob (1)), the display unit will be switched off after 5 minutes and switched to stand-by mode in order to save energy.

The display unit can be reactivated by rotating the program selector knob. If you do not do anything for 5 minutes after the end of a program, the display unit will be switched off to save power.

$P_o$ = weighted power when off [W]	< 0,5
$P_I$ = weighted power when in standby [W]	< 0,5
$T_I$ = standby time [min]	5,00

### INFORMATION!

Low mains voltage and different drying loads may affect the drying time; the remaining time displayed is adjusted accordingly during the drying process.

# DISPOSAL




**Packaging** is made of environmentally friendly materials that can be recycled, disposed of, or destroyed without any hazard to the environment. To this end, packaging materials are labelled appropriately.

**The symbol** on the product or its packaging indicates that the product should not be treated as normal household waste. Take the product to an authorized collection centre for waste electric and electronic equipment processing.

When **disposing** of the dryer at the end of its useful life, remove all power cords, and destroy the door latch and switch to prevent the door from locking or latching (child safety).

Correct **disposal** of the product will help prevent any negative effects on the environment and health of people, which could occur in case of incorrect product removal. For detailed information on removal and processing of the product, please contact the relevant municipal body in charge of waste management, your waste disposal service, or the store where you bought the product.

# North America Service and Parts Contact 2022

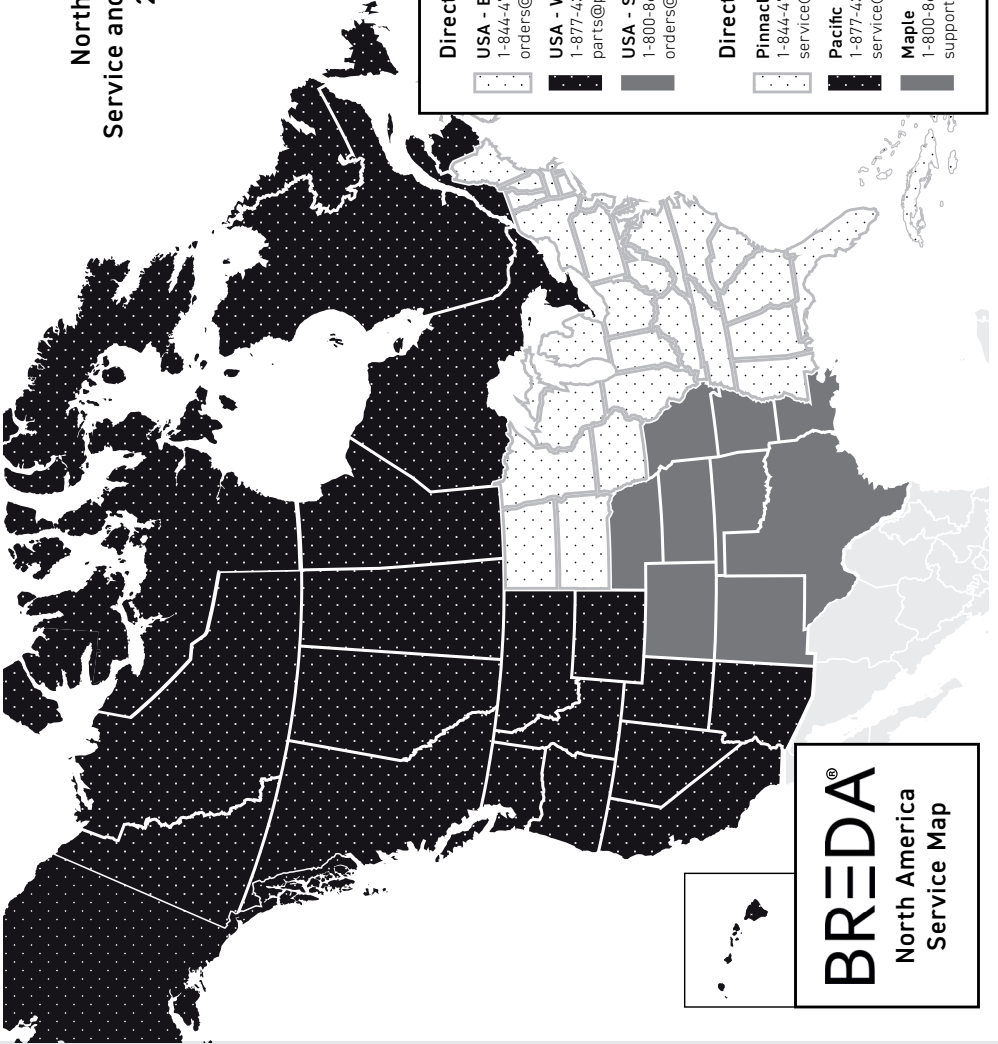

### Direct Parts Contacts

**USA - East/South/Midwest**

1-844-477-4832  
orders@pinnaclesalesgroup.com

**USA - West and All Canada**

1-877-430-5253 x127  
parts@pacificspecialtybrands.com

**USA - South Central**

1-800-866-4774  
orders@mapledistributing.com

### Direct Service Contacts

**Pinnacle Sales Group**

1-844-477-4832  
service@pinnaclesalesgroup.com

**Pacific Specialty Brands**

1-877-430-5253 x106  
service@pacificspecialtybrands.com

**Maple**

1-800-866-4774  
support@mapledistributing.com

**BREDA<sup>®</sup>**  
North America  
Service Map



924607-a10DRAFT

