

8. Installation

Ventilation

To easily dissipate heat and to increase the efficiency of refrigeration and power consumption, a space should be left around the refrigerator. Please keep 100 mm of space at the back of the refrigerator, 200mm on both sides of the refrigerator and 300mm above the refrigerator. Enough space should be left so that the door can open 160 degrees.

Power supply

The refrigerator will only operate with 110V power. Use an individual socket and do not share with other electric refrigerators for best performance.

Power supply cord

Do not extend or fold the power cord. Keep the power cord away from the compressor because the temperature of the compressor surface rises during operation. If the cord comes into contact with excessive heat, the power cord insulation can be weakened, and current leakage can occur.

Protection from moisture

Do not locate the refrigerator in a moist environment to avoid corrosion of metal parts.

Adjustable feet

The feet can be adjusted to level the fridge. When your refrigerator is moved to a new location, twist the feet to adjust the refrigerator height. Use a level to make sure the height is even on all sides.

