

## A Quick Guide to Getting Started



### Before you begin

- Double check that all shipping materials are removed from your new Laundry Tower™.
- Read your Use & Care Manual to familiarize yourself with your new Laundry Tower™.
- Run the washer through a complete cycle and check for water leaks and proper operation.



### Getting Started



\* Your model may look slightly different. See your Use & Care Manual for more information on each cycle, setting & option.



#### Turn on Your Unit

Press **POWER** to turn on the washer or dryer.



#### Select a Cycle

Press up or down on the cycle selector to scroll to the desired cycle.



#### Select Cycle Setting

##### Washer

Once you select your cycle you can make adjustments to the water temperature, soil and spin settings. Please note that the water temperature is determined by the cycle you choose. Press **TEMP** to change the temperature setting; however not all temperatures are available with every cycle. Press **SOIL** to adjust the wash time based on the soil level of the load. Press **SPIN** to adjust the spin speed. Increasing the spin speed will extract more water, decrease drying time, and conserve energy. See the Use & Care Manual for a Cycle Settings Chart.

##### Dryer

Once you select your cycle you can make adjustments to the temperature, dryness level and cycle time settings. Please note that the dryer temperature is determined by the cycle you choose. Press **TEMP** to change the temperature setting; however not all temperatures are available with every cycle. Press **DRY LEVEL** to adjust the dryness level based on the type of clothing in or size of the load. Press **DRY TIME** to adjust the drying time. See the Use & Care Manual for a Cycle Settings Chart.



#### Select Options

Press the button for the option you want to select. The LEDs indicate each active selected option. Refer to the Options section for more information.



#### Start Load

Close the door and press the  Start/Resume button to start your cycle.

### Learn More

We recommend familiarizing yourself with product features and terminology in your Use & Care Manual.



### Sustainability together

The Laundry Tower™ always defaults to the energy efficient Normal cycle with the leaf icon displayed. These settings use less water and heat to wash and dry your laundry.



# Options



## Washer Options

Press the button on the washer control panel next to the option you want to select. The LEDs indicate each active selected option. See the Use & Care Manual for more information.

### STAIN TREAT/STAINSOAK

Select this option to add an initial wash period to available cycles using detergent boosters or enzyme products in the stain soak/treat compartment.

### EXTRA RINSE/PURE RINSE

Use a rinse option when you desire additional rinsing to remove excess dirt or detergent residues and fragrances that can irritate skin.

### EXTENDED REFRESH

Available on 7300 series, select if you will be unable to remove the load right after the cycle is complete. The washer will do a rinse and spin to keep the load fresh for up to 12 hours. Press **POWER** to end the cycle and open the door.

### ALLERGEN

Available on 7600 series, select this option to remove dust mites and dander from household objects. This setting increases the wash temperature.

### PODS®

Select the PODS® option when using the detergent pack compartment. This option will remain active until you press PODS® again to deselect it.

### CONTROL LOCK

To lock the controls between cycles, scroll to the CONTROL LOCK option and press **SELECT**. The control lock icon will show on the LED display.

### DELAY TIME

Use delay time to delay the start of the washing cycle from 30 minutes to 12 hours.

## Dryer Options

On the dryer control panel, press the button next to the option you want to select to activate. The LED comes on to indicate each active selected option. See the Use & Care Manual for more information.

### PERFECT STEAM™

Available on 7600 series, injects steam prior to cool down to reduce wrinkles and static.

### WRINKLE RELEASE

Select to help prevent wrinkles and tangling by tumbling the dry load without heat for 5 minutes out of every 10 minutes.

### EXTENDED TUMBLE

Select to extend tumble time for 30 minutes without heat if the dried load won't be promptly removed at cycle end.

### DRUM LIGHT

Select to enable or disable the drum light.

### DRY BOOST

Shortens drying time and increases effectiveness vs. NORMAL cycle, especially for heavier fabrics or bulky loads, by increasing the drying temperature (varies based on cycle selection).

### CONTROL LOCK

Select to lock the controls between cycles.

### DELAY TIME

Use delay time to delay the start of the drying cycle to a time convenient to your schedule or during off-peak energy hours.




## Frequently asked questions

### • How do I use my detergent dispenser?


Take care not to fill any compartment in your dispenser beyond the maximum line. Add liquid bleach, fabric softener, and stain treating additives to the labeled compartments as needed, taking care not to use more than 2 detergent packs in the compartment.

### • Can I open the Laundry Tower™ doors during a cycle?

If you need to add a forgotten item to the washer, press  Start/Pause and wait for the door to unlock. Add your item, close the door and press Start/Pause to resume the cycle. To add an item to the dryer, press Start/Pause on the dryer controls, add the item, then close the door and press Start/Pause again to resume the cycle.

### • What can I do to optimize the drying performance?

The dryer is equipped with a clamshell style lint filter which must be opened to remove collected lint. Press the Open button and clean the lint filter after every load. See your Use & Care Manual for complete instructions on how to clean the filter. Check to make sure the cycle and settings selected are the right ones for your load type. Avoid overloading your dryer as items need room to tumble freely and use the DRY BOOST option to increase the drying temperature for select drying cycles.

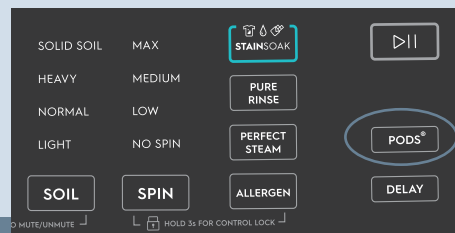

Remember to select PODS® on the display options when using detergent packs.

See [electrolux.com](http://electrolux.com) for more FAQs



### Peace of Mind & Protection

Unlock exclusive benefits by registering your product with us. Review your registration card for all the ways to register or visit us online directly.

[electrolux.com](http://electrolux.com)

(877) 435-3287

10200 David Taylor Drive  
Charlotte, NC 28262

[electrolux.ca](http://electrolux.ca)

(800) 265-8352

5855 Terry Fox Way  
Mississauga, ON L5V 3E4