

## A Quick Guide to Getting Started



### Before you begin

 


1. Remove all packaging material and tape.
2. Make sure your oven racks are in place and your burner caps are centered on the burners.
3. Place the right and left side cooktop grates first, then position the middle grate in place. Refer to your Use & Care Manual for detailed instructions.
4. Set your clock:
  - Press in the OVEN TEMP/TIMER knob
  - Turn the knob right or left to set the correct time
  - Push the knob in to confirm the selection
5. Prepare your range for first time use by setting Bake at 350°F / 175°C for about 30 minutes. It's normal to experience some smoke and noises during this time.




### Gas Cooktop Basics

#### BURNER KNOB POSITIONS:


   Burner outer ring flame setting

   Burner inner ring flame setting

 Burner electric ignition

**OFF** position

#### OPERATING THE BURNERS

1. Place your cookware on the burner.
2. Push in and turn the cooktop knob to the  position to ignite the burner.
3. Check the burner to make sure it has a steady flame.
4. Once the burner is lit, keep the knob pressed in for a few seconds. If the burner goes out, wait a few moments and try again.
5. Turn the burner knob to adjust the flame size.

 
**NOTE:** A clicking sound will occur on all the burners when a control knob is pushed in.

Don't cook with the knob in the  position.

#### SETTING YOUR FLAME SIZE

The color of the flame is the key to proper burner adjustment.

A good flame is clear, blue and hardly visible. Adjust or clean the burner if flame is yellow-orange.


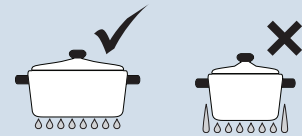


Start on the highest setting and lower the setting as needed for general cooking needs.

Use a medium or low flame when thickening sauces or to maintain a slow boil.



#### USING THE INNER AND OUTER RINGS

  Once the burner is lit, it will be on the highest setting.

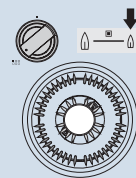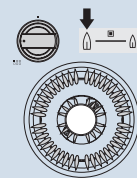

To lower the outer ring setting, turn the knob to left

  To turn off the outer ring, continue to turn the knob left.

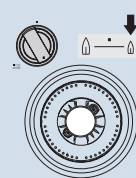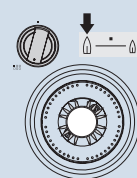

To control only the inner ring, push the cooktop knob in and turn left.

Continue to turn the knob left to decrease the inner ring setting.



## Oven Modes

**DELAY** allows a delayed starting time only for Bake, Conv Bake, Conv Roast and Steam Clean.

**BROIL** is for broiling and grilling foods under direct, high heat.

**STEAM CLEAN** is a chemical-free method to clean the oven. Pour 13.5 fl. oz. of water in the bottom of the oven to soften residue.

**CONV BAKE** uses a fan to circulate heat for quick and even baking, best used when baking with multiple racks.

**BAKE** surrounds food with gentle, rising heat to cook delicate foods.

**CONV ROAST** is recommended to gently brown meats and seal in the juices.

**PROOF** creates the perfect environment to activate yeast when baking homemade breads or pizza dough.

**WARM** is used to keep cooked foods at serving temperature (160°F / 70°C to 200°F / 90°C) in the oven.

**TEMP PROBE** monitors the internal temperature of large cuts of meat with a probe. An alert will sound once the desired set target temperature is reached.

Turn the **OVEN MODE** knob to select the oven mode or function.

**START** flashes in the upper right corner of the display to indicate you can start the selected oven mode.

Once a function is started or when setting the temperature and timing functions the word **START** disappears.

 
**DELAY**  
**BROIL**  
**STEAM**  
**CONV.**  
**BAKE**  
**ROAST**  
**PROOF**  
**CLEAN**

**WARM**



## Using the Oven

1. Use the **OVEN MODE** knob to select the oven mode. The default screen will appear.
2. Turn the **OVEN TEMP/TIMER** knob to select the temperature you want to set your oven.
3. Press the **OVEN MODE** knob to start cooking.

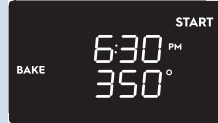

Each oven function has its own auto suggest (default) temperatures.

- BAKE: 350°F / 175°C.
- CONVECTION BAKE: 325°F / 165°C.
- BROIL: 550°F / 280 °C.
- CONVECTION ROAST: 350°F / 175°C.
- WARM: 170°F / 75°C.
- SABBATH: 350°F / 175°C.

The temperature bar on the right side of the oven display will flash until preheating is complete.



## Care and Cleaning

Protect your range by quickly cleaning up spills when they happen.

- Clean with a soft cloth, mild dish detergent and water or a 50/50 solution of vinegar and water.
- Avoid spraying large amounts of water or cleaners directly on the oven control and display area. Excess moisture on the control area may cause damage.
- Avoid using scouring pads or paper towels - they will damage the finish.



Always refer to your Use & Care Manual for more tips and instructions.

## FAQs

- **Why does my oven make noises when I'm cooking?**  
Temperature changes during preheat and cool-down can make parts of the range expand and contract. The controls click as they work to create even cooking temperatures. Different fans run to heat up the oven or cool down different parts of oven, even when it's off. These sounds are normal.
- **Why does my oven smoke when I use the broil setting?**  
Broiling is direct heat cooking and will produce some smoke. If smoke is excessive, place food further away from the element. Broil with the oven door closed, and watch food to prevent burning.
- **This oven doesn't work like my old one. Is this normal?**  
As you get used to a new range, you may need to test and adjust cooking times and temperatures for your recipes. Your Use & Care Manual has rack position and bakeware recommendations to help you get the best baking results.



## Sustainability, together

We're committed to more sustainable eating from how we store foods to how we prepare them.



### Peace of Mind & Protection

Discover more benefits by registering your appliance. Visit us online or return your registration card in the mail to register.

**ElectroluxAppliances.com**  
**(877) 435-3287**

10200 David Taylor Drive  
Charlotte, NC 28262

**ElectroluxAppliances.ca**  
**(800) 265-8352**

5855 Terry Fox Way  
Mississauga, ON L5V 3E4