

## A Quick Guide to Getting Started



### ⏻ Before you begin

- **Set up your refrigerator**

Clean the inside of your appliance before using it. See CARE & CLEANING in your Use & Care Manual. To ensure safe food storage, allow the appliance to operate with the door closed for at least 8 hours before loading it with food.

- **Review the contents of your literature packet**

Your literature pack contains several items including the Use & Care Manual, a PureAdvantage® Air Filter and Produce Keeper™ filter. See FILTER REPLACEMENT in your Use & Care Manual for information on how to install your water, air and Produce Keeper™ filters.

- **Before starting your refrigerator**

Remove tape and glue residue from surfaces before turning on the refrigerator. Choose a place that is near a grounded electrical outlet, allowing clearances for ease of installation, proper circulation, and plumbing and electrical connections.

### + Care and cleaning

- Clean your refrigerator with non-abrasive soapy water and a dishcloth. Rinse with clean water and a soft cloth.
- Keep fresh air and clean water flowing by changing your filters every 6 months.

 


### We Recommend:

Immediately wiping up spills and deep cleaning your refrigerator at least twice per year.

### ? FAQs

- **Why does my refrigerator seem to run continuously?**  
Your refrigerator is equipped with an energy-efficient variable speed compressor that saves energy.
- **The temperature is warmer or colder than preferred. What can I do?**  
Simply adjust the temperature by 1 or 2 degrees and allow 24 hours for the temperature to stabilize. Check to ensure

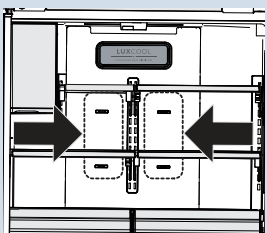

food items are not blocking the air ports as this will impact temperature performance. Food placed within 1 inch in front of the air ports may freeze. See CONTROLS AND SETTINGS in your Use & Care Manual.



#### Your Filters:

- ELXPAAF2**  
PureAdvantage® AF-2™ Air Filter
- EPPWFU01**  
PureAdvantage® PWF-1™ Water Filter
- ELPAPKRF**  
PureAdvantage® Produce Keeper™



## Manage Your Display

### TEMP SETTINGS

Select the Freezer or Refrigerator icon to change temperature. Press +/- buttons to set the temperature.

Freezer control range: -6°F/-21°C  
+6°F/-15°C  
Refrigerator control range: +34°F/+1°C  
+44°F/+7°C

### CLEAR ALERTS

Resets any alarms that are active and illuminated on the display.

### FREEZE BOOST

Prior to grocery shopping, we recommend you activate FREEZE BOOST to lower the temperature and freeze food faster. FREEZE BOOST remains active for up to 24 hours before automatically deactivating or manually exiting by pressing FREEZE BOOST to turn the function off. The freezer will reset to the previous temperature setting.

### TEMP F-C

Touch to toggle display from Fahrenheit to Celsius.

### ICE MAKER

Press and hold for 3 seconds to turn the ice maker on/off. The ice maker is ON when the indicator is lit and OFF when the indicator is not lit. The ice maker will stop making ice when in the OFF state. Ice dispensing can continue as long as there is ice in the bucket. The indicator blinks when the ice maker is off and dispensing ice.

### DEFAULT SETTINGS

Press and hold for 3 seconds to reset to Factory settings.

### WATER FILTER

 
Press and hold button to reset after filter has been replaced, status shown at right of button will reset to GOOD.

### AIR FILTER

Press and hold to reset after filter has been replaced, status shown at right of button will reset to GOOD.



## Adjustable Temp Drawer

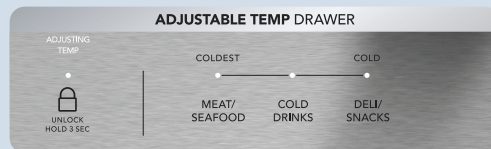


Customize your storage space for all your entertaining favorites – from cheese to wine to sorbet. Set from -6 to 45 degrees. (See Use & Care Manual).

Press and hold the UNLOCK icon for 3 seconds to lock or unlock the drawer.



## Select Ice & Water

 Use this control panel to make your ice and water dispensing selections.

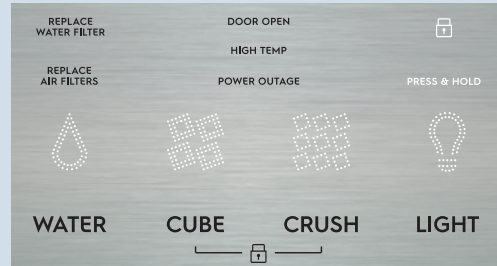

### REPLACE WATER FILTER

Indicates it is time to replace water filter when illuminated, generally, every 6 months.

### REPLACE AIR FILTER

When illuminated, indicates it is time to replace air filter. Generally, every 6 months.

### DOOR OPEN

Alert indicates the door has been open for 5 or more minutes. The audible alert can be turned off by pressing DOOR OPEN or closing the door. The interior light turns off if the door is open for 5 minutes.

### HIGH TEMP ALARM

An alarm sounds in the event of a high temperature condition and continues every 10 seconds until acknowledged. Touch any key or open a door to silence the alarm.

### POWER OUTAGE

In the event of a power outage, a tone sounds once power is restored. Press any button to silence the tone.

### LOCK

Press and hold both the CUBE & CRUSH keys for 3 seconds to LOCK/UNLOCK control panel. No water or ice can be dispensed when the control panel is locked.

### WATER

Press the WATER key to dispense water. The indicator light illuminates above the active feature.

### CUBE

Press the CUBE key to dispense cubed ice. The indicator light illuminates above the active feature.

### CRUSH

Press the CRUSH key to dispense crushed ice. The indicator light illuminates above the active feature.

### LIGHT

Press the Light key to turn on the light feature.



## Learn More

Your Electrolux Refrigerator is designed to keep produce fresh with customized design, consistent temperature and energy-efficient operation. We recommend familiarizing yourself with product features and terminology in your Use & Care Manual.



## Sustainability, together

We're committed to making food last longer with our technology to help you achieve zero waste.



## Peace of Mind & Protection

Get more with product registration. Look for the photo icon on your registration card to text and register, or visit us online.

Electrolux.com  
(877) 435-3287

10200 David Taylor Drive  
Charlotte, NC 28262

Electrolux.ca  
(800) 265-8352  
5855 Terry Fox Way  
Mississauga, ON L5V 3E4