

# Frigidaire

## Factory Parts Catalog



Product No.	PLES389ECI
	37957366H53S9
Series	30" slide-in
Color	stainless
Market	North America
Wiring Diagram	318271978
Owner's Guide	318203824
Installation Instructions	318201611
Timer Guide	318204125

 **Electrolux**

Electrolux Major Appliances  
North & Latin America  
P.O. BOX 212378  
AUGUSTA, GA 30917


Publication No.  
**5995521910**  
08/08/19  
(EN/SERVICE/ECL)  
377

**30-INCH SLIDE-IN  
ELECTRIC RANGE**

Model No.  
**PLES389E**

Copyright © 2008 Electrolux Home Products, Inc.  
All rights reserved.

# BACKGUARD

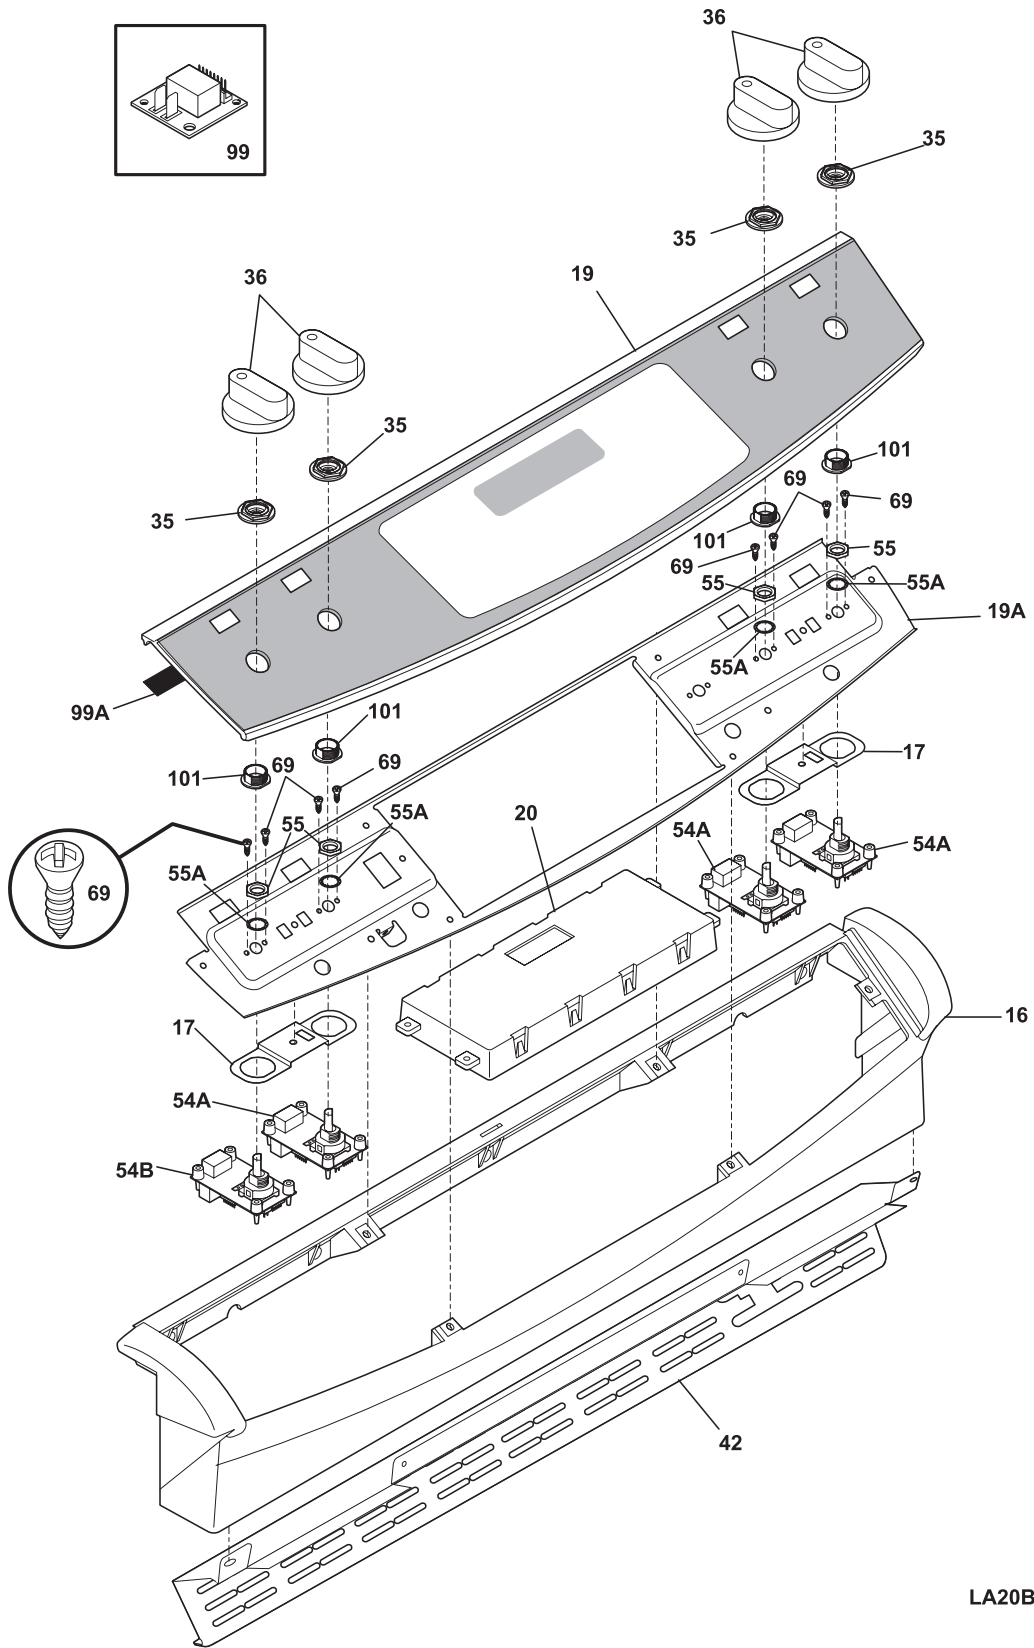


LA20BG0049

**BACKGUARD**

POS. NO	PART NO.	DESCRIPTION
16	318299102	Console, assy., black
16*	5304447071	Clip, console, (2)
17	318306900	Bracket, bushing, (2)
19	318313830	Control Panel Assembly, steel/glass, stainless/black, w/touch pad
19A	318224405	Panel, control mtg.
20 #	316462841	Controller, electronic, ES510X
20*	5304453707	Screw, control mtg.
35	318233720	Retainer, control panel, black
36	318319301	Knob, control, black, (4)
42	318298001	Trim, vent, black, upper
54A#	316441801	Control, electronic, dual element, (3), w/potentiometer
54B#	316441804	Control, electronic, left front, dual element, w/potentiometer
55	316247700	Nut, mounting, (2)
55A	316247800	Washer, lock, mtg
69	5303323134	Screw, 8-32 x 3/16
99 #	316435703	Board, power supply
99A	318223900	Gasket, dark grey
101	318233400	Bushing, retainer
* #	318228864	Harness, wiring, main, backguard
* #	318224849	Harness, wiring, timer
*	08016432	Screw, truss head, 8-18 x 0.375
*	5303300265	Screw, 8-18 X 1/2, (4)
*	5303311333	Screw, 8-32 x 3/8

# BODY

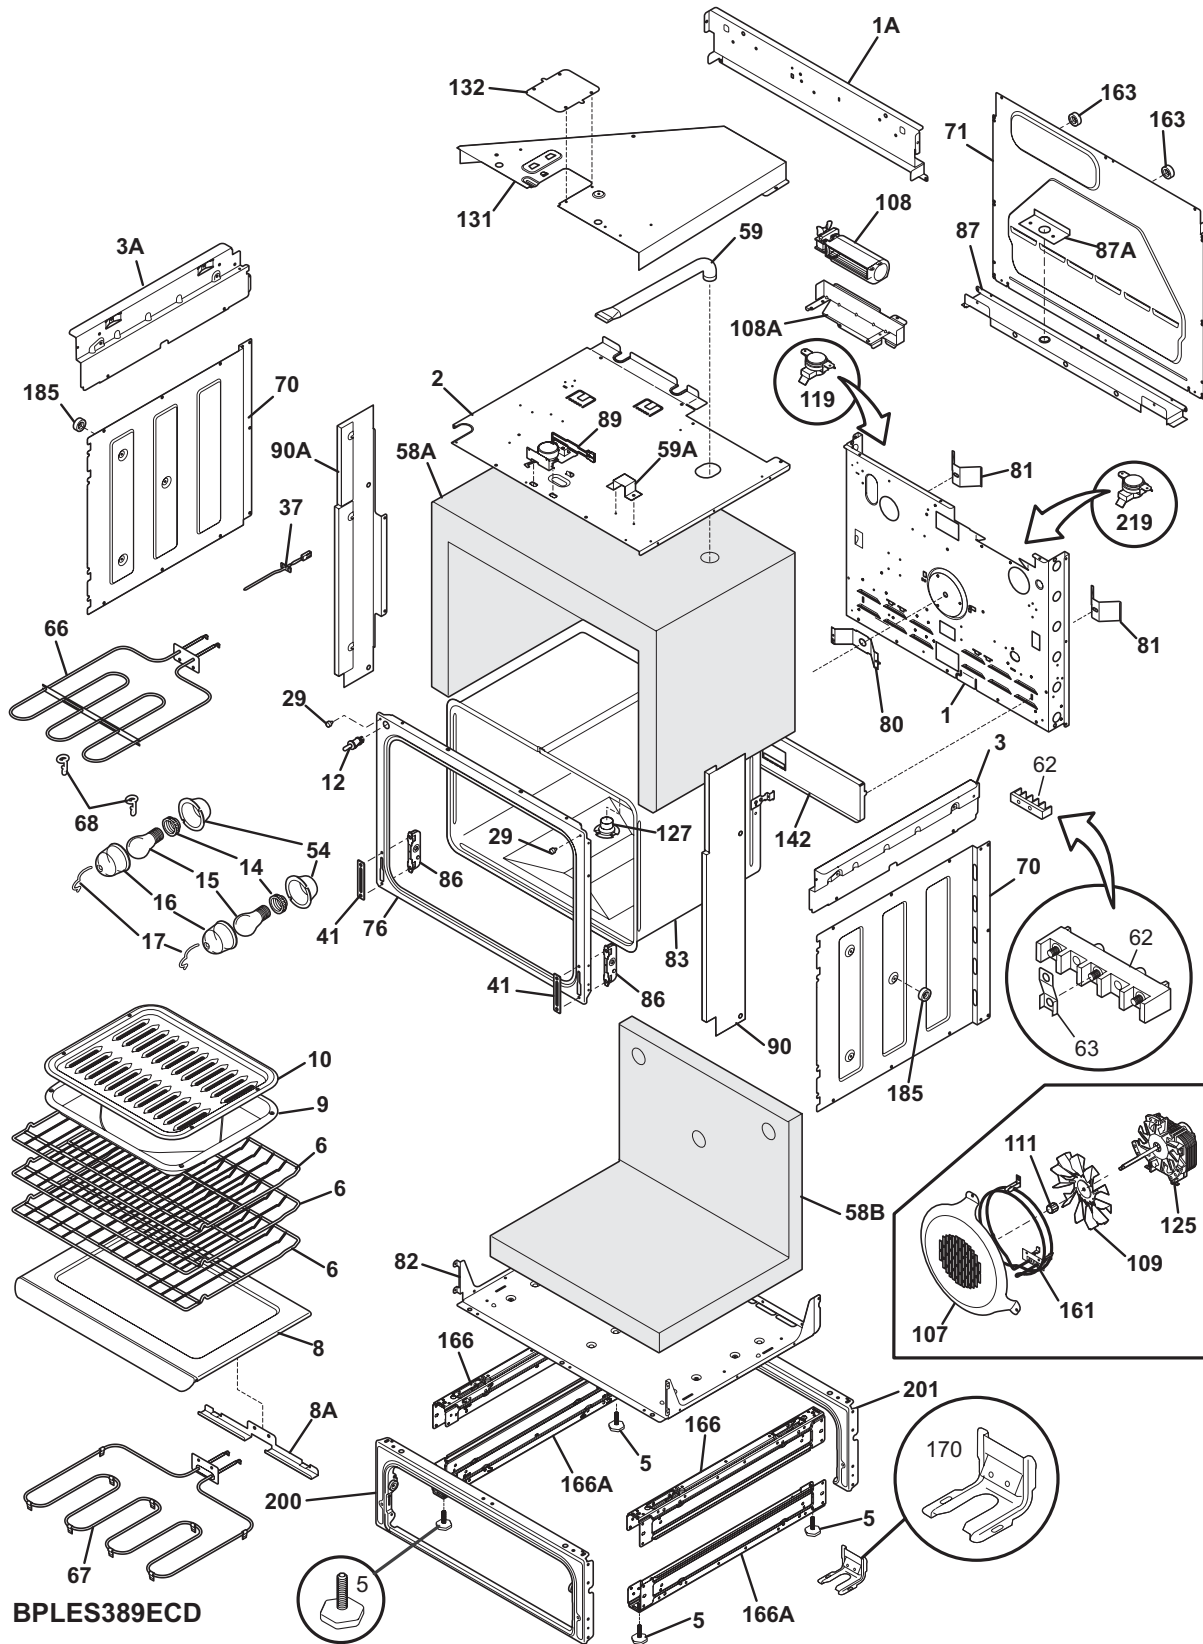

BPLES389ECD


---

**BODY**


---

POS. NO	PART NO.	DESCRIPTION
1	318259220	Back, main
1A	318225110	Panel, main back, upper
2	318258902	Shield, insulation, upper
3	318225210	Panel, bodyside, upper RH
3A	318225211	Panel, bodyside, upper LH
5	318175508	Screw, leveling
6	318345208	Rack, oven
8	318262001	Cover, element
8A	318318600	Bracket, element, hidden bake
9	316081900	Pan, broilerOPTIONAL ACCESSORY
10	316082000	Insert, broiler panOPTIONAL ACCESSORY
12	316445501	Switch, oven light, door frame
* #	318231869	Harness, wiring, door switch
14	318224000	Receptacle, oven light
15	5303013071	Bulb/Lamp, light
16	08011086	Lens, oven light, glass
17	5304400195	Retainer, light cover
29	318147411	Bumper, (2)
37 #	316217002	Probe, oven temp
41	5303310526	Cover, hinge cutout
54	318222400	Housing, oven light
58A	318285055	Insulation, oven wrapper
58B	318133791	Insulation, oven back, back/bottom
59	318072560	Duct, oven vent
59A	318261600	Bracket, vent tube
62	5303935061	Terminal Block Kit
62*	5303323139	Screw, 10-24 x 0.906
62*	5303323144	Nut, 10-32
63	318264200	Plate, grounding strap
66 #	318255600	Element, broil, 2750W
67 #	318254906	Element, bake, 3400W, 8 pass
68	5304403015	Support, hanger, (2), broil element
70	318259100	Shield, insulation, sides, (2)
71	318260007	Panel, rear box
76	318056217	Front, oven
80	5303320846	Plate, oven mtg
81	318192400	Spring, oven
82	318258708	Shield, insulation, lower
83	318261400	Liner, oven assy
86	318328010	Receptacle, hinge
87	318260608	Bracket, cable mtg.
87A	318111806	Plate, cord set mtg
89 #	318261215	Motor, latch assy
90	318296904	Panel, filler, black, RH
90A	318296905	Panel, filler, black, LH
107	318219405	Cover, fan
108#	318073028	Motor, blower
*	318249403	Tube, protector
108A	318251300	Bracket, fan support
109	318398300	Fan Blade
111	318399800	Nut-fan retainer

**BODY**

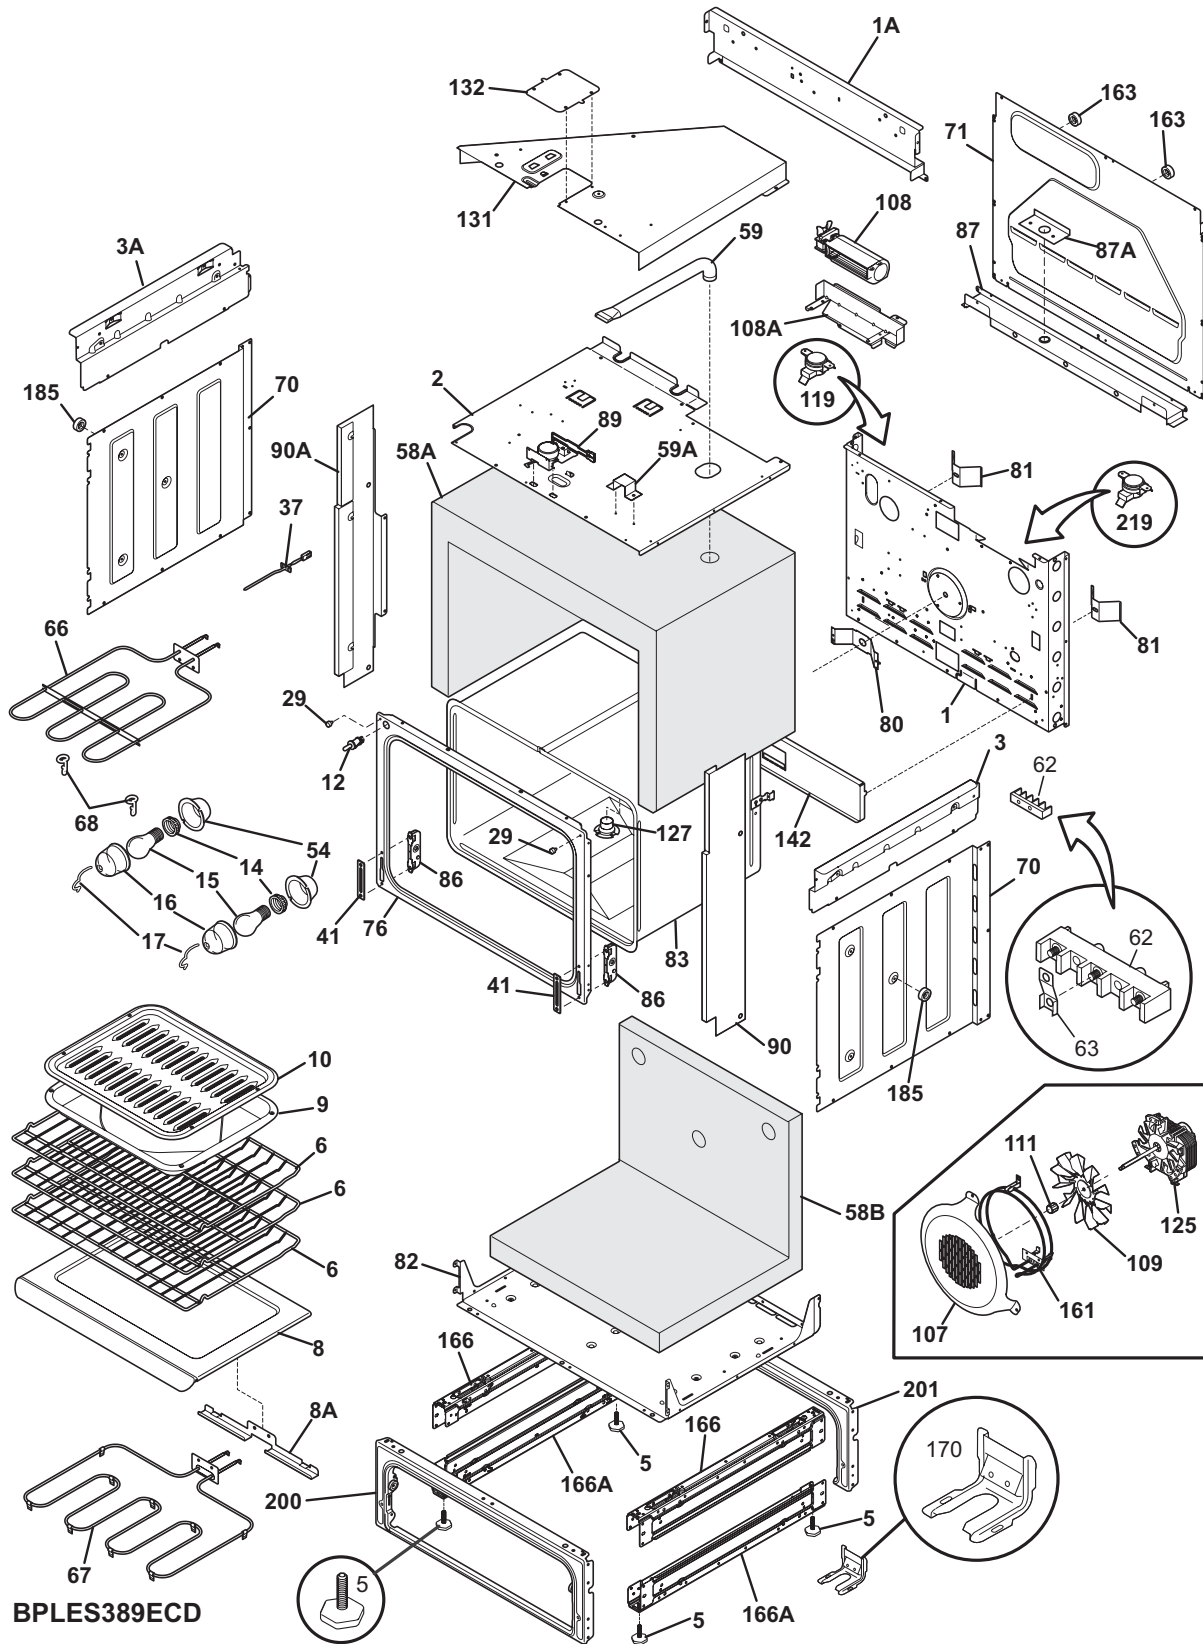

---

**BODY**


---

POS. NO	PART NO.	DESCRIPTION
119#	318004900	Switch, thermal
125#	5304463302	Motor-convection
127	318317100	Adapter Assembly, vent tube, w/converter
131	318272901	Box, vent
132	318003000	Plate, shield
142	318123910	Deflector
161#	318255503	Element, convection, 350 W
163	318014105	Spacer, (2)
166	318298410	Bracket, base support, (2)
166A	318298403	Bracket, base support, lower, (2)
170	318335500	Anti-tip & accessories
185	318165800	Spacer
200	318298221	Frame, drawer, front
201	318298210	Frame, drawer
219#	318003631	Thermostat, safety, (2)
* #	318224998	Harness, wiring, main
*	318235300	Connector assy., w/3 lugs, & instructions
*	3051050	Screw, shoulder
*	3201861	Screw, 6 x 0.375, (4)
*	08016432	Screw, truss head, 8-18 x 0.375
*	5303211311	Screw, 8 x 0.500
*	5303307980	Screw, 8-32 x 0.437, (4)
*	5303323129	Screw, 8 X 0.750
*	5304415832	Screw, 8-18 x 0.406
*	5304436875	Screw, 8-18 X 1/2, black






**TOP/DRAWER**

POS. NO	PART NO.	DESCRIPTION
1	318304401	Drawer, body assembly
1A	318300000	Panel, warmer drawer, side, (2)
1C	318300301	Panel, warmer drawer, rear
2	318303901	Panel, drawer, black, inner
4	318298819	Panel, drawer, stainless, front
13	318259507	Glide, warmer, inner RH
13A	318259506	Glide, warmer, inner LH
15B#	316418401	Element, dual, 6"9", surface, 1200W/2500W, radiant
15C#	316419902	Element, 7"5", dual, 750W/1800W, (2)
16	318223640	Main Top, glass assy., black
29	318147430	Bumper, (2)
39	316246100	Handle, door/drawer, stainless
46	318225410	Box, burner
51 #	318044827	Light, indicator, clear
52B	318122010	Spring, element mtg, 3000W
52C	318122008	Spring, element mtg, 1800W/3000W
60	5303311174	Screw, 10-24 x 3/8
81 #	318255301	Element, warmer drawer
84 #	318005108	Thermostat
85	318345600	Rack, warmer drawer
86	316095800	Clip, hold down, warmer element
87	318300102	Panel, warmer drawer, lower
90	318368001	Channel, glass protector, (2)
95	318303800	Shield, wire
124	316105501	Glide, outer/RH & LH, (2)
165	318227503	Plate, mounting
* #	318228932	Harness, wiring, cooktop
* #	318231848	Harness, wiring, pilot light
*	08016432	Screw, truss head, 8-18 x 0.375
*	5303211311	Screw, 8 x 0.500
*	5303300265	Screw, 8-18 X 1/2, (4)
*	5303311333	Screw, 8-32 x 3/8

DOOR

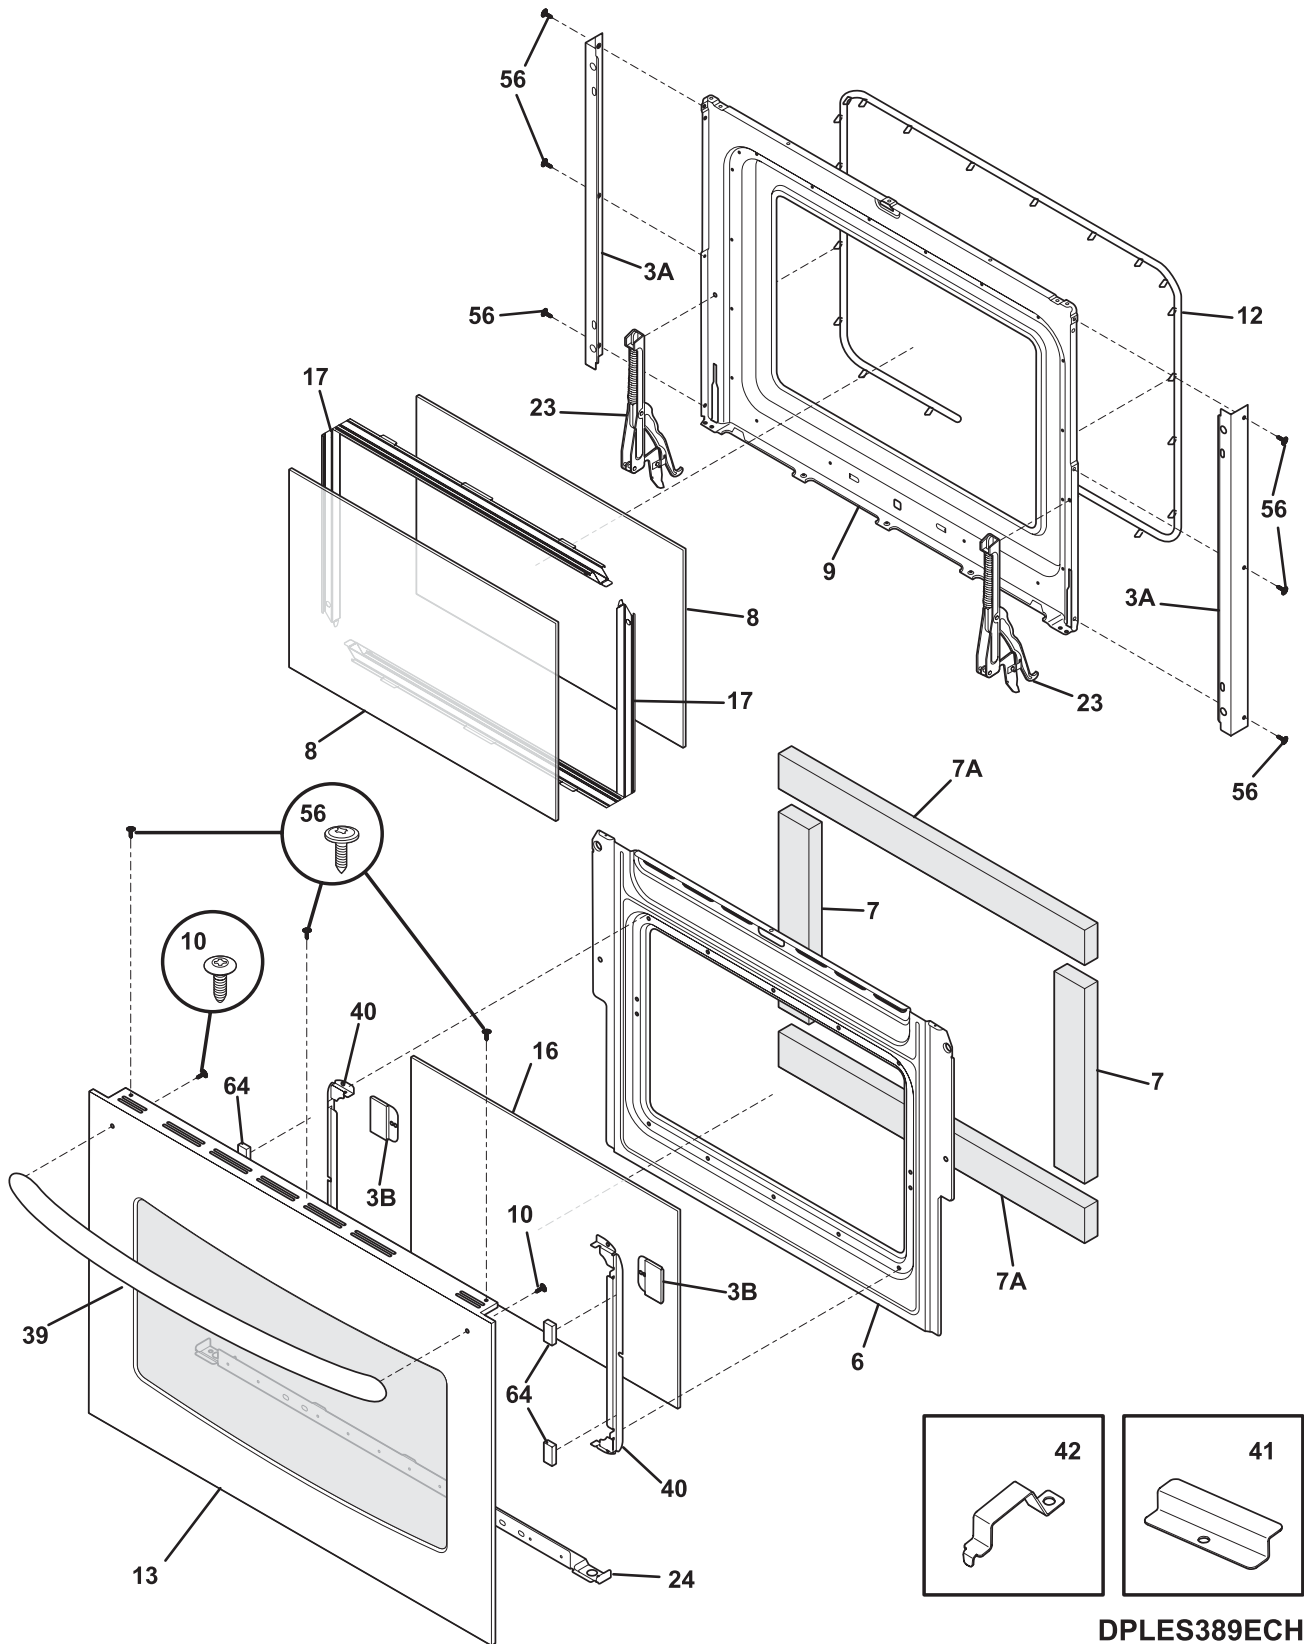

DPLES389ECH


---

**DOOR**






---

POS. NO	PART NO.	DESCRIPTION
3A	318260401	Trim, oven door, side, (2)
3B	318262101	Cover, rear door, black, (2)
6	318260522	Baffle, door
7	318372000	Insulation, door, (2)
7A	318372002	Insulation, door, (2)
8	316117500	Glass, oven door, heat barrier
9	318259605	Liner, door
10	5303311174	Screw, 10-24 x 3/8
12	318053120	Seal, door, lower oven
13	318272189	Door Assy, w/nameplate, stainless steel, outer, w/tape & foil
16	318212210	Glass, oven door, heat barrier
17	318264710	Spacer, glass, (2)
23	318024747	Hinge, door, (2)
24	318260301	Trim, door, black, lower
39	316246100	Handle, door/drawer, stainless
40	318242702	Bracket, glass holder, upper door, (2)
41	318370600	Bracket, glass retainer, (2)
42	318382301	Bracket, glass retainer, (4)
56	5304436875	Screw, 8-18 X 1/2, black
64	318165800	Spacer
*	316221001	Label, anti-tip
*	5304415832	Screw, 8-18 x 0.406

WIRING DIAGRAM

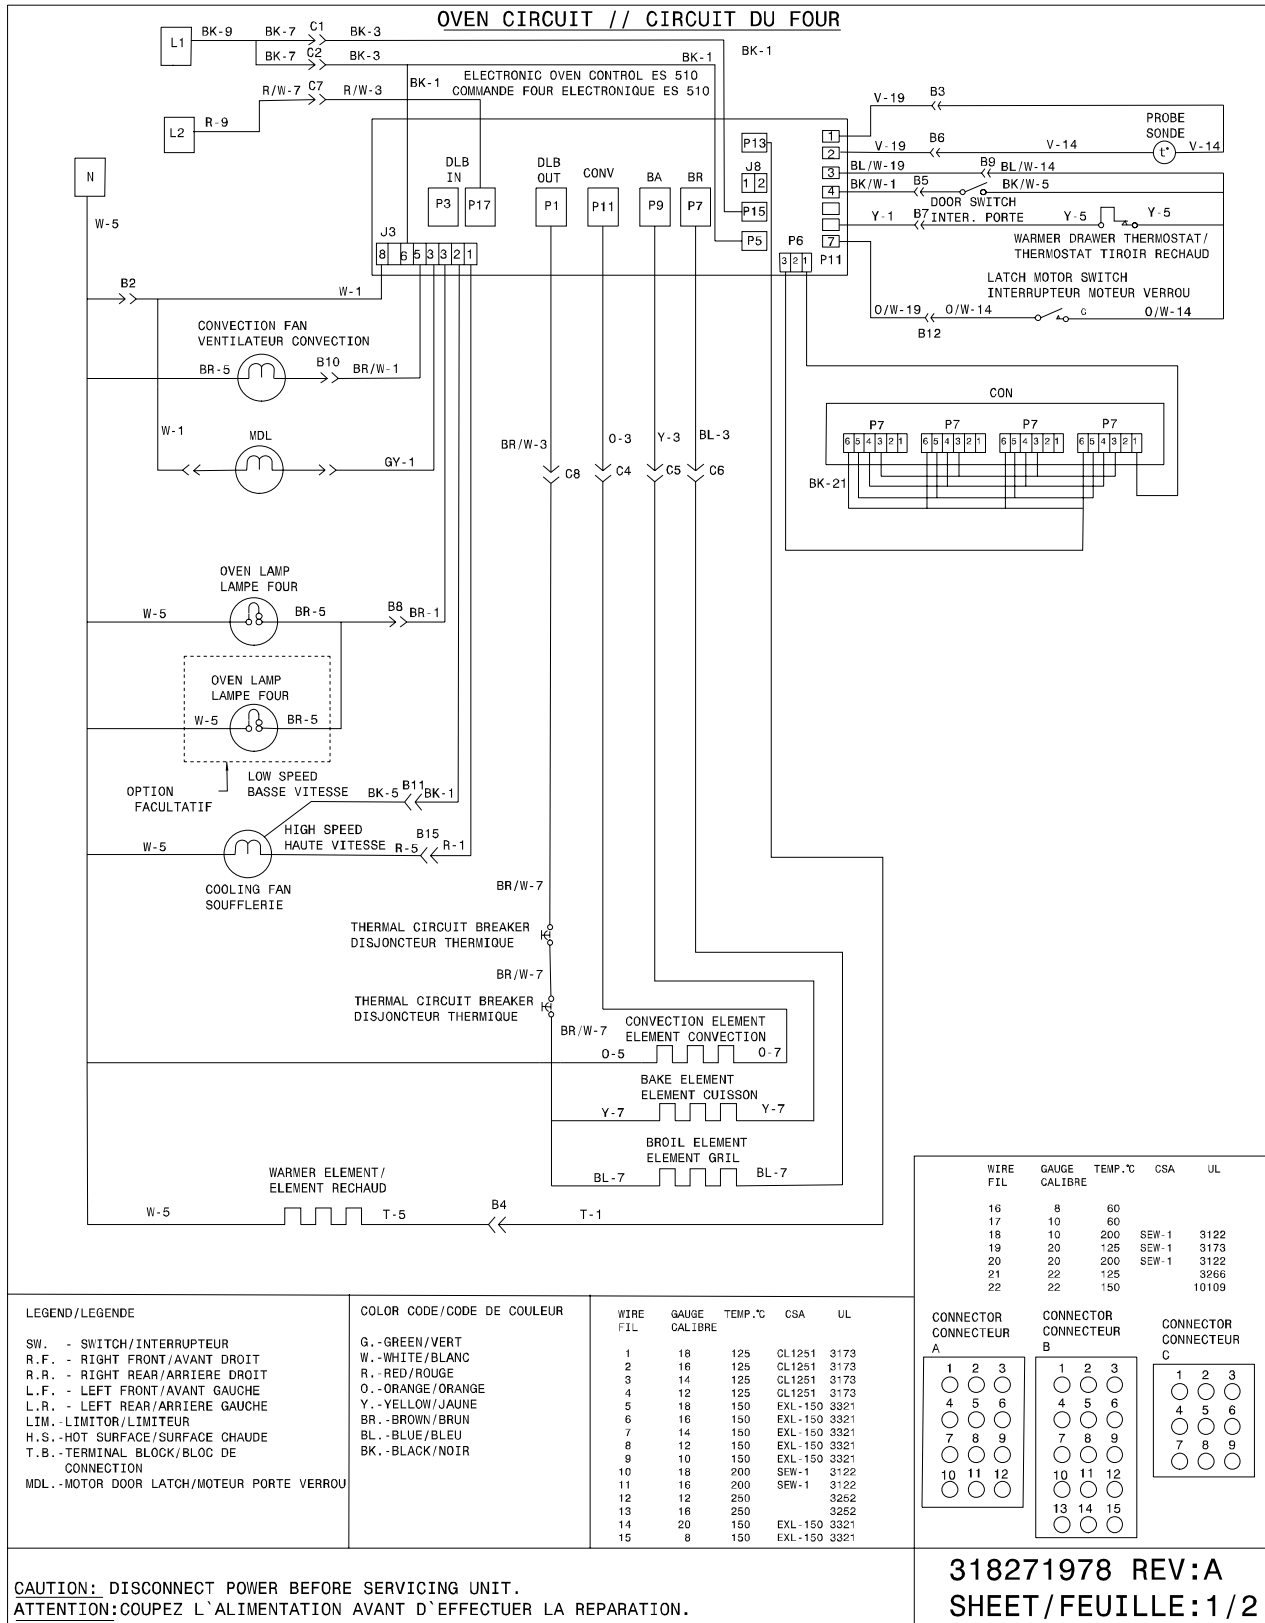

**WIRING DIAGRAM**

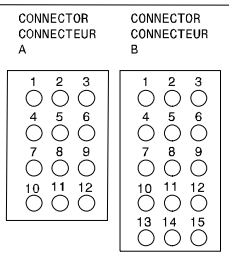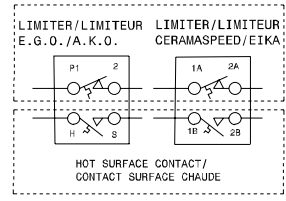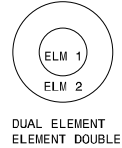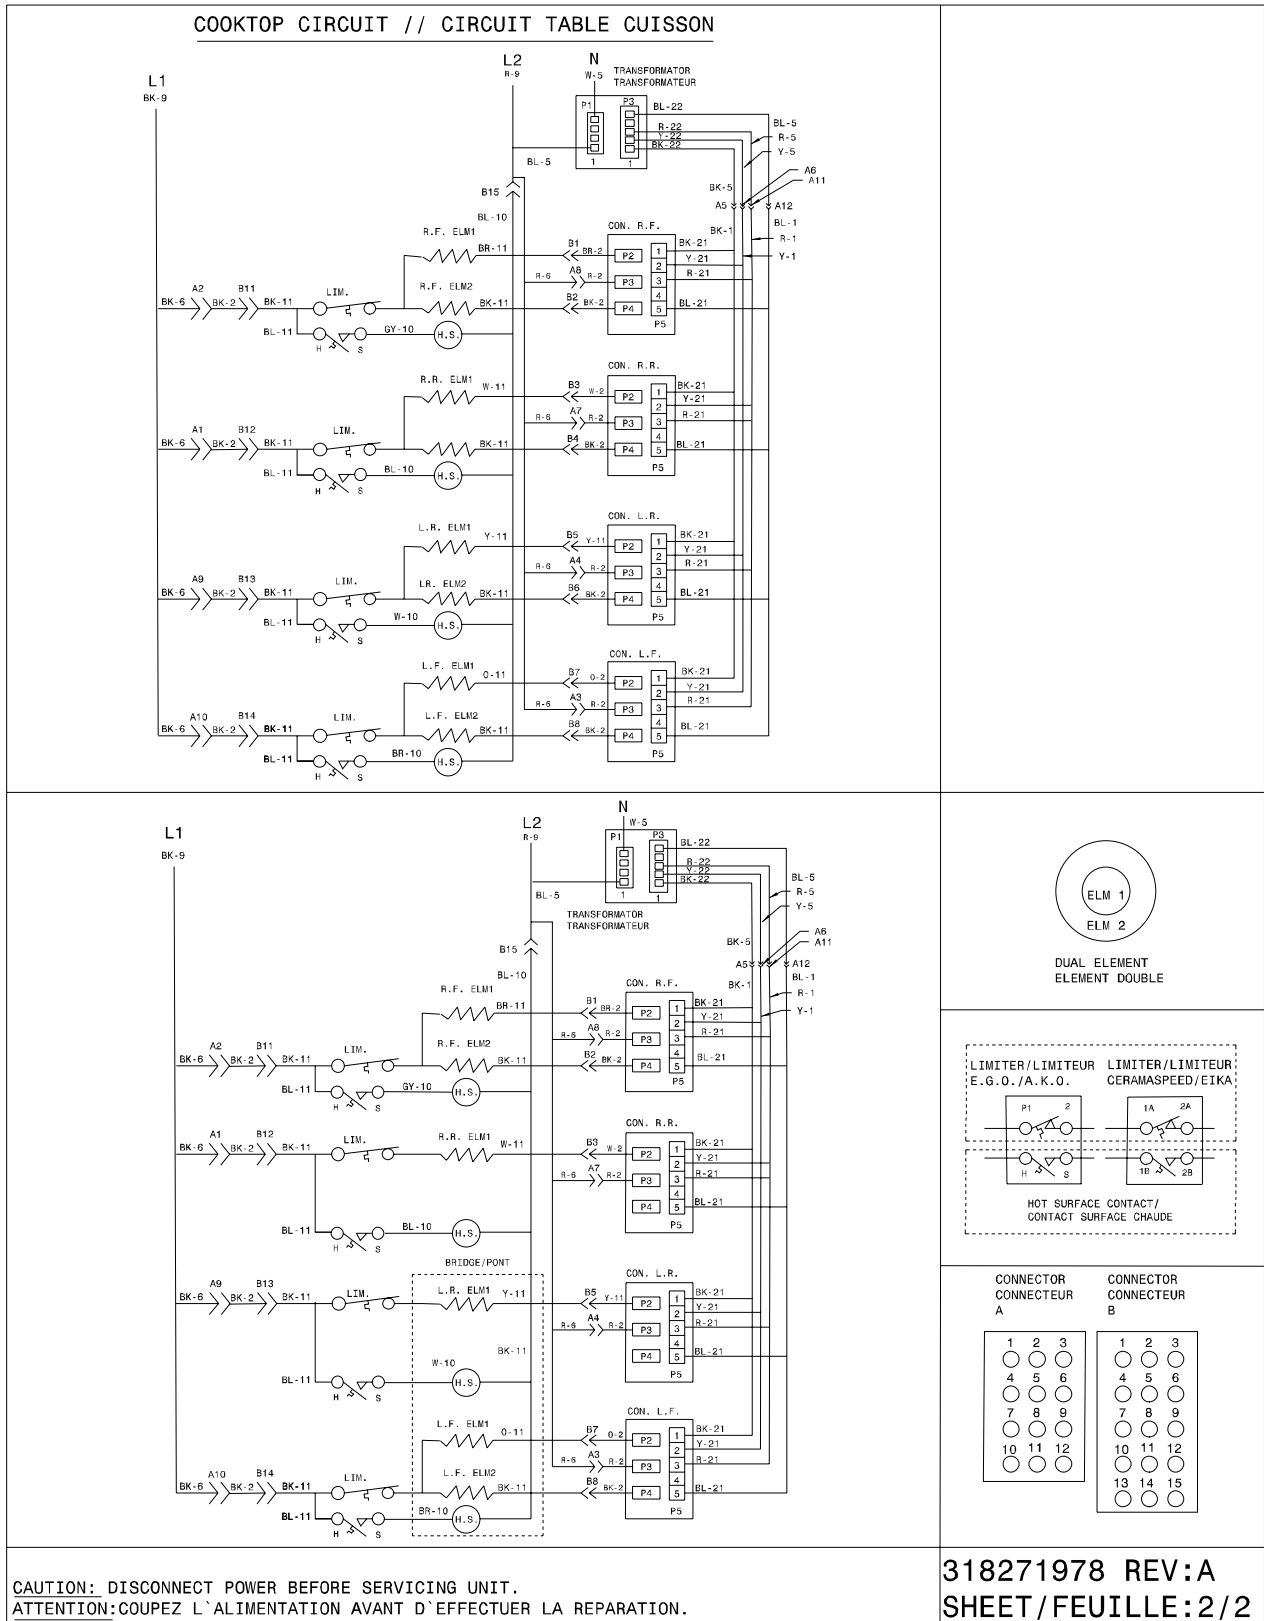

**318271978 REV:A**  
**SHEET/FEUILLE: 2/2**