

FRIGIDAIRE

Get started with your **electric range**



BEFORE YOU START




Set up your oven

Remove all packaging material and tape and make sure your oven racks are in place prior to operating the range. Check out your Use & Care Manual for tips to help care for your range.



Set your clock

It's easy! Press . Press the Up or Down arrow until "CLoC" appears in the display. Press START. Press and hold the Up or Down arrow until the correct time appears in the display, then press START.



Before cooking for the first time

Set your oven to Bake at 350°F/ 177°C for about 30 minutes. As the range gets settled in your home, it's normal to experience some noises and smoke.

YOU'RE IN CONTROL





Your oven controls


Using your oven starts with pressing the keys on your oven control.



OVEN MODE HIGHLIGHTS

-  Cooking is more convenient with **Cook Time**. Choose the amount of time you want your oven to cook, then the oven will turn off.
-  Meals stay warm and ready to serve in the oven with **Keep Warm**.

GET STARTED

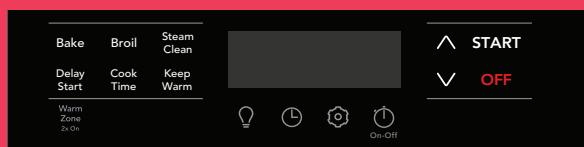

1 Press **BAKE**.



350° will appear in the display.

2 Use the **UP** and **DOWN** arrow keys to change to desired cooking temperature.

3 Press **START**.


4 To cancel **BAKE** at any time, press **OFF**.



REMEMBER

- Do not use aluminum foil or any other materials to line the oven bottom, walls, racks or any part of the oven.
- Do not add bleach, ammonia, oven cleaner, or any other abrasive household cleaners to the water used for Steam Clean.
- All oven racks should be removed before a steam clean operation.
- For more cooking and rack position tips, refer to your Use & Care Manual.

OVEN MODES

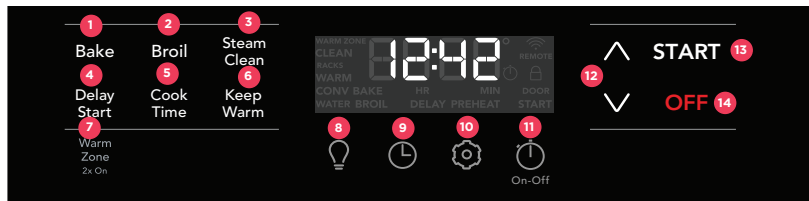

- 1. BAKE** is for foods that need heat to rise and move gently in the oven.
- 2. BROIL** is for broiling and grilling foods under direct, high heat.
- 3. STEAM CLEAN** offers a time saving method to assist in the routine cleaning of small and light soils.
- 4. DELAY START** sets a delayed starting time to oven cooking or cleaning functions.
- 5. COOK TIME** counts down your set cooking time and shuts off the oven when complete.
- 6. KEEP WARM** is used to keep cooked foods at serving temperature in the oven.

- 7. WARM ZONE** uses radiant heat to keep cooked foods at serving temperature on the cooktop.*
- 8. OVEN LIGHT** turns the interior light on and off at a touch.
- 9. CLOCK** is used to set the time of day.
- 10. GEAR** sets user preferences for various control functions
- 11. TIMER ON-OFF** is used to set or cancel the minute timer.
- 12. UP and DOWN** keys are used to set temperature and time.
- 13. START** starts cooking functions and sets the clock.
- 14. OFF** turns off all cooking functions.

*Using Warm Zone on the cooktop






To turn on Warm Zone
Press the Warm Zone key **twice** (2X).



To turn off Warm Zone
Press the Warm Zone key **once**.

QUICK CARE

-  **A little love goes a long way**
Quick ongoing care keeps your range working great for years to come! Use a ceramic cooktop cleaning cream before cooking for the first time to protect your cooktop from scratches.
-  **Be gentle**
Clean with warm water and mild soap, or use Frigidaire ReadyClean™ Oven and Microwave Cleaner.
-  **STEAM CLEAN** is a chemical free and time saving method to assist in the routine cleaning of small and light soils in your oven. Remove all racks and accessories before starting a steam clean cycle. Refer to your Use & Care Guide for more steam clean tips.

FAQs

Why does my range make noises when I'm cooking?

Temperature changes during preheat and cool-down can make parts of the range expand and contract. The controls click as they work to create even cooking temperatures. Different fans run to heat up and cool down different parts of the oven, even when it's off. These sounds are normal.

This oven doesn't work like my old one. What's wrong?

We know adjustment isn't always easy. As you get used to a new range, you may need to test and adjust cooking times and temperatures for recipes. Consult your Use & Care Guide for detailed instructions on how to adjust temperature or call Frigidaire Owner Support if you need help!

Why does my oven smoke when I use the broil setting?

Broiling is direct heat cooking and will produce some smoke. If smoke is excessive, place food further away from the element. Watch food to prevent burning.

 **Find more troubleshooting tips in the back of your Use & Care Guide.**

LET'S MAKE IT OFFICIAL!

Take the first step to becoming a part of the Frigidaire family by registering your new range.

Look for the PhotoregisterSM icon on your registration card.



WE ARE
here

 Have a question?  Want help?  Need service?

owner support

FOR YOU frigidaire.com 1 (800) 374-4432

frigidaire.ca 1 (800) 265-8352

