

GETTING Started

WITH YOUR FRIGIDAIRE SIDE-BY-SIDE REFRIGERATOR

BEFORE YOU START

Before starting the refrigerator

Remove tape and glue residue from surfaces before turning on the refrigerator. Choose a place that is near a grounded electrical outlet, allowing for clearances for ease of installation, proper circulation, and plumbing and electrical connections. After you remove all of the package materials, clean the inside of your refrigerator before using it. See **CARE AND CLEANING** in your Use & Care Guide.

Set your controls

Adjusting the refrigerator control will change the temperature in both compartments. The freezer control can be left at the factory preset (*Recommended) or adjusted as desired.

To maintain temperatures, a fan circulates air in the refrigerator and freezer compartments. For good circulation, do not block cold air vents with food items.

 
YOU'RE IN CONTROL



Your controls

Using your refrigerator starts with just adjusting your controls. Adjust the control in small increments, allowing the temperature to stabilize.

Front of Door Control

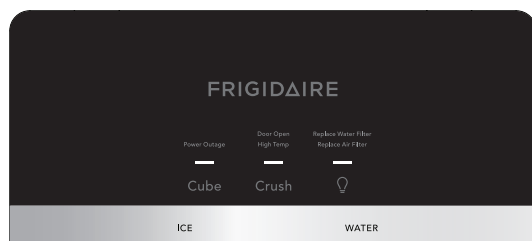

Cube Press the **Cube** button to get cubed ice.

Crush Press the **Crush** button to get crushed ice.

Light Press the light button to turn on the dispenser light.

 
Water To operate the water dispenser, press a glass against the **Water** dispensing paddle. Dispensed water is not cold. For colder water, add crushed ice or cubes before dispensing water.

Water Filter Status When you need to order a new water filter, the in-door control will change to the Order status. When you need to replace the water filter, the in-door control will change to the red replace status and the front control will display **Replace Water Filter**.

Air Filter Status* When you need to order a new air filter, the in-door control will change to the Order status. When you need to replace the air filter, the in-door control will change to the red Replace status and the front control will display **Replace Air Filter**.

*Only on some models

In-Door User Interface

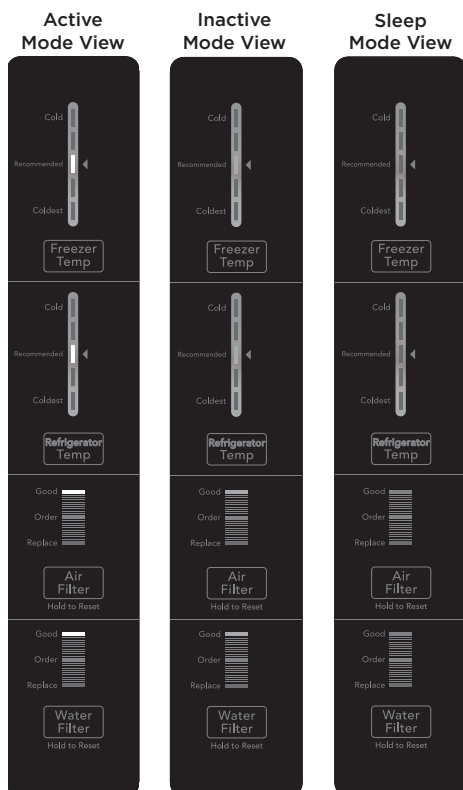

Your display is equipped with a sleep and inactive mode to prevent accidental changes to the unit settings when you open or close the doors. When both doors are closed, the display will be in sleep mode. When either door is first opened, the display will be in inactive mode where all the current settings are visible but dimmed.

Pressing any button on the display will activate the display and a tone will be played. All settings will then be fully lit. Touch the display again to change any setting.

If there is no button pressed for 10 seconds while any door is open, the display will default back to inactive mode.

QUICK CARE



 
A little love goes a long way

Keeping your refrigerator clean maintains its appearance and maintains freshness.



Be gentle

Clean with warm water and mild soap. For stainless steel models only, use Frigidaire **ReadyClean™** Stainless Steel Cleaner.



Air filter (some models)

Our PureAir Ultra® II air filter's active carbon technology optimizes the reduction of refrigerator odors. See **FILTER REPLACEMENT** in your Use & Care Guide for more information on how to order.



Water filter

Change your water filter every 6 months to ensure great-tasting, safe water. **Water Filter Status** on the front control prompts you to replace the filter after a standard amount of water (125 gal/453 L for **PurePour™**) has flowed through the system.



FAQs

What are normal refrigeration operating sounds?

See the **NORMAL OPERATING SOUNDS** section of your Use & Care Guide.

What should I do if my ice maker is not making any ice in my refrigerator?

 
If your ice maker is not making any ice, check to see if the ice maker has been inadvertently turned off. Make sure the refrigerator is connected to the water line and/or the water valve is open. If your dispenser will not dispense water, check to see if the water filter is seated properly. Remove and reinstall the water filter until you hear it lock solidly into position. Remember: the freezer needs up to 24 hours to stabilize after plugging it in before it produces ice.

Can I adjust the shelves in my Side-by-Side refrigerator to fit my spacing needs?

Shelves are easily adjusted to suit individual needs. Before adjusting the shelves, remove all food. Shelves are supported by side rails.

To adjust, lift up on the back of the shelf and pull forward.

Replace the shelf by sliding it on top of the formed rails on the side walls of the cabinet until the rear plastic hooks of the shelf lock into the rear of the cabinet liner.

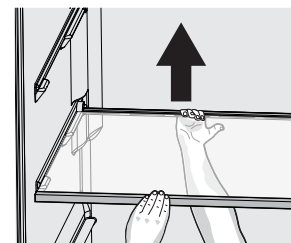

For more information refer to **TROUBLESHOOTING** in the back of your Use & Care Guide.

LET'S MAKE IT OFFICIAL!

Take the first step to becoming a part of the Frigidaire family by registering your side-by-side refrigerator.

Look for the PhotoregisterSM icon on your registration card.



WE ARE
here
FOR YOU



Have a question?



Want help?



Need service?

frigidaire.com/1 (800) 374-4432

frigidaire.ca/1 (800) 265-8352

owner support

