



Chimney Vent Hood Remote Control



UXRC70

If you have questions, call 800.GE.CARES (800.432.2737) or visit our website at: GEAppliances.com.

In Canada, call 800.561.3344 or visit geappliances.ca.

The remote control replicates the functions on the control panel supplied with the hood. For a clearer understanding of these functions, please consult the owner's manual enclosed with the hood itself.

- The remote control is powered by two standard 1.5 V AAA batteries (not included).
- Do not place the remote control near heat sources.
- Used batteries should be disposed of properly.

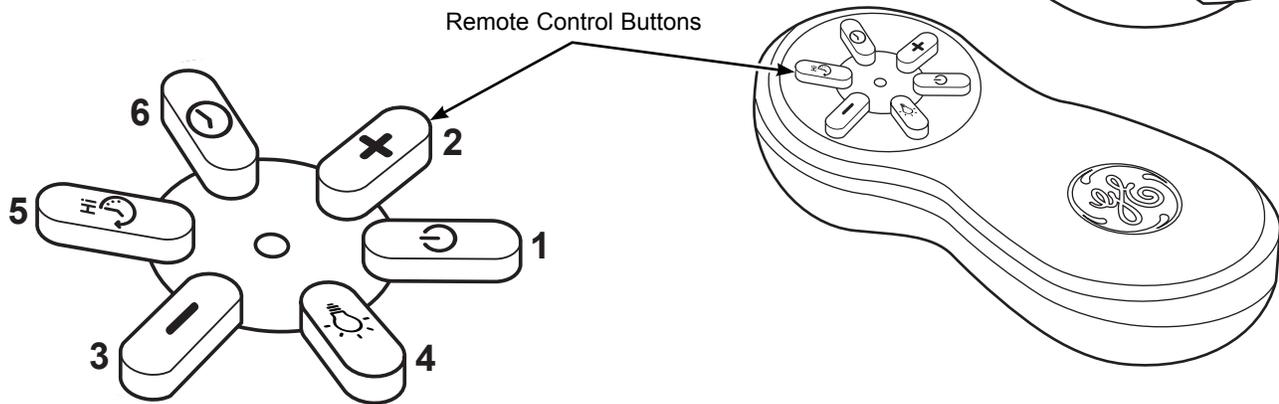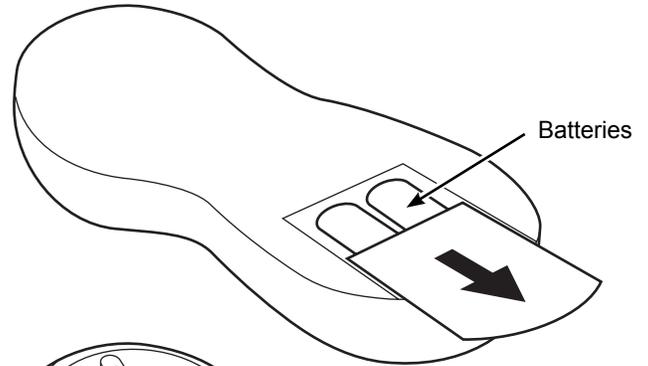

1 	2 	3 	4 	5 	6 
Turns the fan on and off.	Increases the fan speed.	Decreases the fan speed.	Switch on/off lights. Hold button down to activate the night light setting. For models with multiple light settings, hold button down to alternate between different light settings.	Activate/deactivate the 10 minute boost speed function.	Activate/deactivate the 15 minute auto off function.

Remote Control Button Functions



Télécommande de hotte type cheminée



UXRC70

Si vous avez des questions, téléphonez au 1-800-GE-CARES (432-2737) ou visitez notre site Web à GEAppliances.com.

Au Canada, téléphonez au 1-800-561-3344 ou visitez electromenagersge.ca.

La télécommande reproduit les fonctions du panneau de commande fourni avec la hotte. Pour une meilleure compréhension de ces fonctions, veuillez consulter le manuel de l'utilisateur joint à la hotte elle-même.

- La télécommande est alimentée par deux piles AAA standard de 1,5 V (non incluses).
- Ne placez pas la télécommande à proximité de sources de chaleur.
- Les piles usagées doivent être mises au rebut correctement.

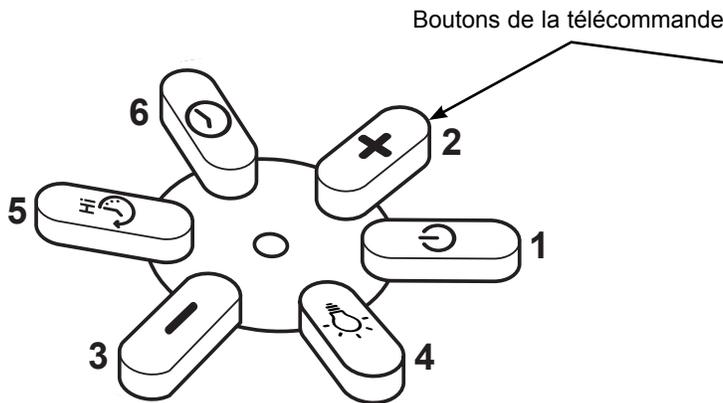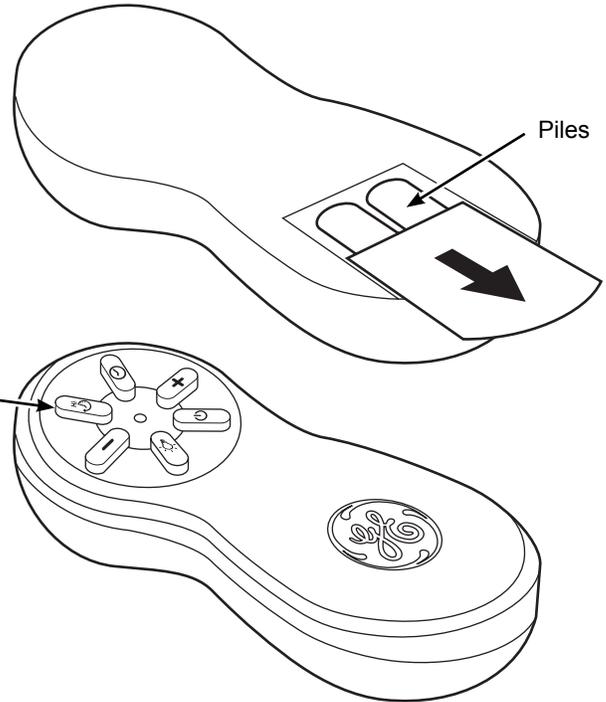

1 	2 	3 	4 	5 	6 
Allume et éteint le ventilateur.	Augmente la vitesse du ventilateur.	Diminue la vitesse du ventilateur.	Allume/éteint les lumières. Maintenez le bouton enfoncé pour activer la veilleuse. Pour les modèles avec plusieurs réglages d'éclairage, maintenez le bouton enfoncé pour alterner entre les différents réglages.	Active/désactive la fonction de suralimentation du ventilateur de 10 minutes.	Active/désactive la fonction de suralimentation du ventilateur de 15 minutes.

Fonctions des boutons de la télécommande