 



INSTALLATION COMPLETION CHECKLIST

- House power turned on Unit leveled Shipping material removed Dispose of all packing material
 Refrigerator plugged in Controls set

TOOLS YOU WILL NEED



 8 mm Socket
or Nut Driver




Flat-Blade
Screwdriver



Phillips-Head Screwdriver

ONCE REFRIGERATOR IS AT THE HOME
START HERE

1

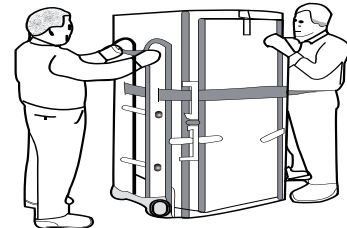


Use padded hand truck. **LEAVE TAPE AND DOOR PADS ON DOORS** until refrigerator is in its final location. **TRUCK FROM SIDE ONLY. CENTER ON HAND TRUCK.** Do not overtighten strap.

2 IF ENTRANCE IS NARROW, REMOVE DOORS.

NOTE: Two people recommended for door removal and reinstallation.


A. REMOVE FREEZER DOOR

Remove the hinge cover. Unscrew and remove the top hinge and shim. Lift the freezer door up and away from the appliance. Set the door on a non-scratching surface with the outer surface facing up. NOTE: When removing the door, watch for washer(s) between the center hinge and the bottom of the freezer door that may stick to the door. Do not lose.

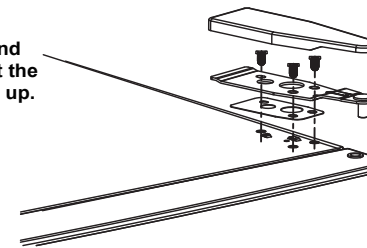

B. REMOVE FRESH FOOD DOOR

Tape the door shut with masking tape. Remove the center hinge and shim by removing the screws. Lift up the hinge to remove it. Remove the tape holding the door shut. Lift the fresh food door up and off the bottom hinge. Set the door on a nonscratching surface with the outer surface facing up. Note: Some models have a washer between the center hinge and top of fresh food door and also between the bottom hinge and bottom of fresh food door that may stick to the door. Do not lose.

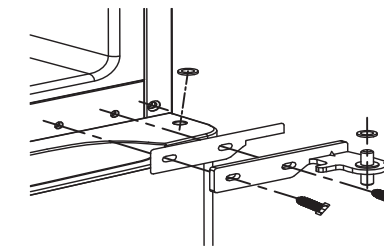


3 REINSTALL IN REVERSE

Reinstall doors by following Steps B and A.

IMPORTANT:
Be sure to reinstall washer if initially included.
Be sure not to scratch door surfaces.


MAKE SURE TO TIGHTEN ALL HINGE SCREWS.

IMPORTANT:
If reversing doors, remove all three screw covers at the left before installing the middle hinge.

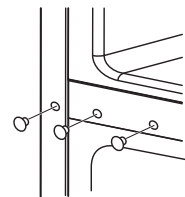


4 PLUG IN

See grounding information attached to power cord.

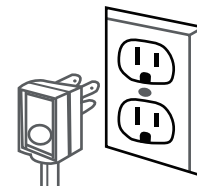

5 PUT IN PLACE; LEVEL UNIT

Turn leveling legs clockwise to raise refrigerator, counterclockwise to lower it.

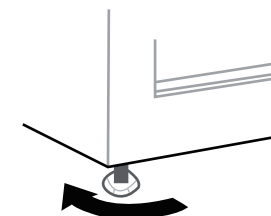

6 SET THE CONTROLS

A. FREEZER CONTROLS

Set the controls to the recommended setting.

Adjust Freezer Temperature

Max is Coldest
Middle is Normal
Min is Cold




B. FRESH FOOD CONTROLS

Set the controls to the recommended setting.

Adjust Refrigerator Temperature

Temp Control
4
1 is Cold
4 is Normal
7 is Coldest

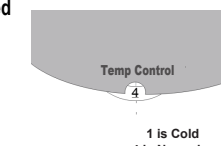

REMOVE AFTER INSTALLATION OR ON SHOWROOM MODELS. DISPOSE OF ALL PACKING MATERIAL.

Instrucciones en Español —
Ver el Manual del propietario
Veuillez consulter les instructions
en français du manuel du propriétaire.

Contact GE at: GEAppliances.com
or call 800.GE.CARES