 



## Front Panel

The buttons are located on the rear.




- ..... Standby
- ..... Selects Function.
- ..... Adjusts Volume.

## Rear Panel

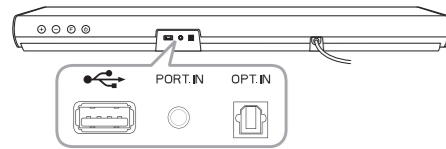

 - (USB) ..... Connect to a USB device.
- PORT. IN (Portable) ..... Connect to a Portable device.
- OPT. IN (Optical) ..... Connect to an Optical device.



## 1 Subwoofer Connection

Place the wireless subwoofer near the sound bar and follow steps below.

- 1 Connect the power cord of wireless subwoofer and sound bar to the outlet.
- 2 Turn on the main unit:  
The sound bar and wireless subwoofer will be **automatically** connected. The subwoofer's green LED turns on.

### Subwoofer Connection Manually


If the subwoofer does not playback audio, try to connect manually.

- 1 Press **Pairing** button on the rear of the wireless subwoofer.
  - The green LED on the rear of wireless subwoofer blinks quickly.
- 2 Turn on the main unit.
- 3 Pairing is completed.
  - The green LED on the rear of wireless subwoofer turns on.

Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m (3 feet) to prevent wireless interference.


## 2 TV Connection

- 1 Connect the sound bar to the TV using an Optical cable.
- 2 Set up [External Speaker (Optical)] on your TV setting menu.

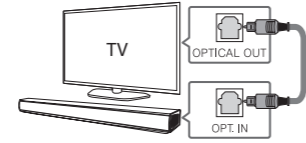


### Additional Device Connection

- 1 Connect to the external device as follows.

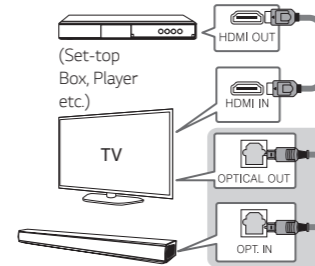

- 2 Set the input source by pressing **OPTICAL** on the remote control or pressing **F** on the unit repeatedly.

## Remote control

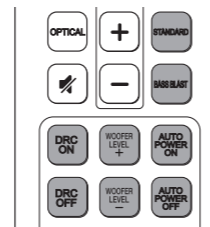


**STANDARD/BASS BLAST:** Selects the sound effect.

**DRC ON/OFF:** Dynamic Range Control optimizes the volume level of compatible Dolby Digital content.

**WOOFLER LEVEL +/-:** Adjusts the volume level of subwoofer.

**AUTO POWER ON/OFF:** Automatically turns on by an input source.

### Replacement of battery

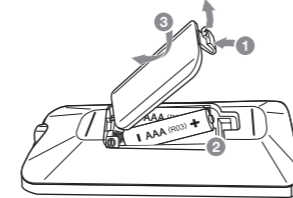

## Additional Information

### Specification

Power requirements	Refer to the main label.
Power consumption	Refer to the main label.
Dimensions (W x H x D)	Approx. 660 mm x 56 mm x 99 mm (26 inch x 2.2 inch x 3.9 inch) With foot
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS Output power)	160 W RMS

Design and specifications are subject to change without notice.

