

QUICK START GUIDE MAYTAG® DRYER

CONTROL PANEL AND FEATURES

OPERATING INSTRUCTIONS

WARNING



Fire Hazard

No washer can completely remove oil.
Do not dry anything that has ever had any type of oil on it (including cooking oils).
Items containing foam, rubber, or plastic must be dried on a clothesline or by using an Air Cycle.
Failure to follow these instructions can result in death or fire.

WARNING

 


Explosion Hazard


Keep flammable materials and vapors, such as gasoline, away from dryer.
Do not dry anything that has ever had anything flammable on it (even after washing).
Failure to follow these instructions can result in death, explosion, or fire.

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance’s Owner’s Manual, before operating this appliance.

Step 1. Clean lint screen



 
Step 2. Load clothes

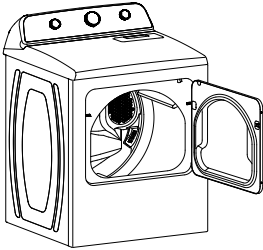


Step 3. Press Power Button



 Step 4. Select the desired cycle for your load*

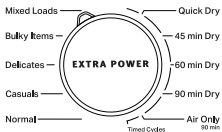

 
Step 5. Adjust cycle settings and options, if desired

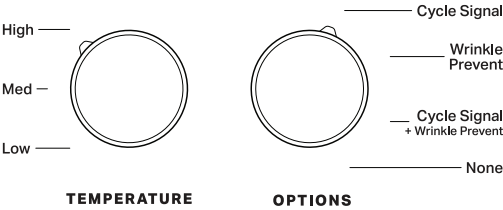

Step 6. Press, hold, and release Start Button



 NOTE: Start button must be held for 1 second to start cycle. Once the bottom line of lights left of the Start button are illuminated, release the Start button.

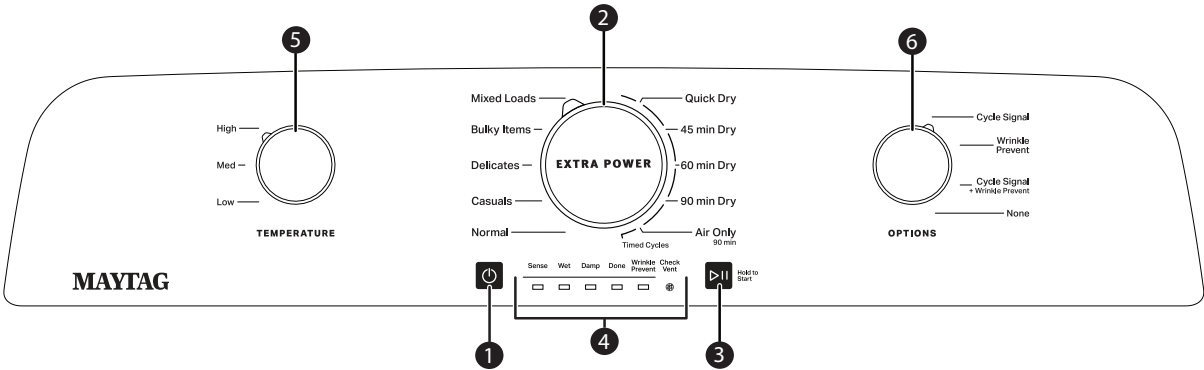

**Not all features, cycles, and options are available on all models. Appearance may vary.*

1. POWER

Press to turn On/Off or to stop/cancel a cycle.

2. CYCLE KNOB

Turn knob to select desired cycle.

SENSOR DRYING CYCLES:

Use Sensor Dry for better fabric care and energy savings. The dryer senses air temperature and shuts off when the load reaches the selected dryness level. Note that you cannot adjust the time with these cycles.

TIMED DRYING CYCLES:

In these cycles, you can specify the drying time. Time options available are Quick Dry (15), 45, 60, and 90 minutes. For a complete list of all cycles, please refer to the online Product Guide document.

Air only:

Select the Air only option to dry items with no heat.

EXTRA POWER:

The Extra Power option can be used with both Sensor and Timed Dry Cycles for harder to dry loads. It provides an additional 10 minutes of cycle time, including additional heat and tumbling (where applicable).

3. START/PAUSE

Press and hold the Start/Pause button for 1 second until all status lights are illuminated, then release to start cycle. Press during a cycle to pause.

4. Status Indicator Lights

Monitors and displays the cycle progress from Sensing to Done.

Check Vent:

The Check Vent will light up when lint has accumulated and needs to be cleared from the dryer vent. Keeping this clean will improve the drying performance. Steps to clean the vent can be found in the online product guide.

5. TEMPERATURE:

Select the temperature to modify the cycle’s available temperature. (Low, Medium and High). If you want to use no heat, then choose the Air Only Timed cycle, in which case the temperature selection will be ignore.

6. OPTIONS

Turn the knob of the option needed. Options include Cycle Signal, Wrinkle Prevent, Cycle Signal + Wrinkle Prevent, None.

Cycle Signal:

Select Cycle Signal for a tone to signal when the cycle is done.

Wrinkle Prevent:

Select Wrinkle Prevent for a wrinkle free cycle with no end of cycle signal.

Cycle Signal + Wrinkle Prevent:

 
Select this option to signal when the wrinkle prevent cycle is done.

None:

Select None if a cycle signal or the wrinkle shield options are not needed.

NOTE: This clothes dryer’s Government energy certifications were based on the 90 minute Dry Cycle, and Maximum Drying Temperature Setting. The as-shipped defaults of Normal, Extra Power Off, Wrinkle Prevent Off, were used.


CHOOSING THE RIGHT CYCLE

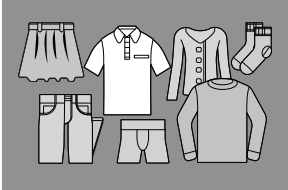

A Product Guide with cycle guide information for your dryer can be found online at www.maytag.com/owners. The document will help identify which cycle to choose for various load types as well as the default cycle options. For example we recommend using the NORMAL cycle with Medium temperature for cottons, linens and mixed-garment loads.

For detailed installation instruction and maintenance information, winter storage, and transportation tips, please see the “Owner’s Manual” included with your machine.

 ASSISTANCE OR SERVICE AND ADDITIONAL INFORMATION

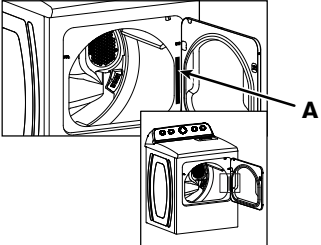For information on any of the following items, a full product guide, warranty, detailed product dimensions, or for complete instructions for use and installation, please visit www.maytag.com/owners or in Canada www.maytag.ca/owners . This may save you the cost of a service call.						
Register Product	Schedule Service	How To’s & FAQ	Manuals & Downloads	Add Service Plan	Parts	Accessories
						
 <i>A. Model & Serial Number Tag Location</i>		To speak with a customer service representative or if you have additional questions, call us toll free at 1-800-344-1274 or in Canada call 1-800-807-6777 . You can write with any questions or concerns at: United States: Maytag Brand Appliances Customer eXperience Center 553 Benson Road Benton Harbor, MI 49022-2692 Canada: Maytag Brand Appliances Customer eXperience Centre 200-6750 Century Ave. Mississauga, Ontario L5N 0B7 Please include a daytime phone number in your correspondence.				

W11679948B

