

# Bottom Mount REFRIGERATOR

SAFETY INFORMATION	.....2
USING THE REFRIGERATOR	.....6
Location of the appliance	.....6
Starting operation	.....7
Parts and features	.....8
Control panel	.....9
Mode setting	.....11
Dispensing cold water and ice	.....13
CARE AND CLEANING	.....14
Overall cleaning	.....14
Defrosting	.....16
INSTALLATION INSTRUCTIONS	.17
Leveling legs	.....17
Level the doors	.....17
Installation procedure	.....18
Installing the filter	.....19
Water line	.....20
TROUBLESHOOTING TIPS	.....22
WARRANTY	.....27
CONSUMER SUPPORT	.....28

## OWNER'S & INSTALLATION MANUAL

MYE22HYPKFS

ENGLISH/FRANÇAIS/  
ESPAÑOL

Write the model and serial numbers here:

Model # \_\_\_\_\_

Serial # \_\_\_\_\_

# IMPORTANT SAFETY INFORMATION.

## READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE



### WARNING: RISK OF FIRE/FLAMMABLE MATERIALS

#### ⚠ WARNING

- This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.) Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- The appliance has to be unplugged after operation and before carrying out user maintenance on the appliance.
- Keep ventilation openings in the appliance enclosure or in the built-in structure, clear of obstructions.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance unless they are of the type recommended by the manufacturer.
- Dispose of the refrigerator according to local regulations as it uses flammable blowing gas and refrigerant.
- When positioning the appliance, make sure the supply cord is not trapped or damaged.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- Do not use extension cords or ungrounded (two prong) adapters.
- DANGER Risk of child entrapment. Before you throw away your old refrigerator or freezer:
  - Take off the doors.
  - Leave the shelves in place so that children may not easily climb inside.
- The refrigerator must be disconnected from the source of electrical supply before attempting the installation of accessories.
- Refrigerant and cyclopentane foaming material used for the refrigerator are flammable. Therefore, when the refrigerator is scrapped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm.
- Children should be supervised to ensure that they do not play with the appliance.
- FOR EN Standard: This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the operation of the appliance in a safe way and they understand the hazards involved.
- Children should not play with the appliance. Cleaning and user maintenance should not be made by children without supervision. Children aged from 3 to 8 years are allowed to load and unload refrigerator.
- To avoid contamination of food, observe the following instructions:
  - Leaving the door open for long periods of time can cause a significant increase of the temperature in the compartments of the appliance.
  - Clean regularly surfaces that can come in contact with food and accessible drainage systems.
  - Clean water tanks if they have not been used for 48 hours; flush the water system connected to a water supply if water has not been drawn for 5 days. (Note 1).
  - Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
  - Two-star frozen food compartments are suitable for storing prefrozen food, storing or making ice-cream and making ice cubes. (Note 2).
  - One , two , and three star  rated compartments are not suitable for the freezing of fresh food.
  - If the refrigerating appliance is left empty for long periods of time, switch off, defrost, clean, dry, and leave doors open to prevent mould developing within the appliance.

**Notes 1, 2 and 3:** Confirm whether these notes are applicable according to your product compartment type.

**THIS MANUAL CONTAINS IMPORTANT SAFETY INFORMATION WHICH SHOULD BE OBSERVED BY THE USERS.**

# IMPORTANT SAFETY INFORMATION.

## READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE


**⚠ WARNING** TO AVOID HAZARD DUE TO INSTABILITY OF THE APPLIANCE, IT MUST BE FIXED ACCORDING TO THE INSTRUCTIONS.

To prevent children from being entrapped, keep keys out of reach of children and not in the vicinity of refrigerator. (On models equipped with locks)


**⚠ WARNING** CONNECT TO POTABLE WATER SUPPLY ONLY. (ON MODELS EQUIPPED WITH AN ICE MAKING MACHINE).

### ⚠ WARNING POWER SUPPLY


- When unplugging the refrigerator, do not pull the power cord. Firmly grasp the plug and pull it out it from the power outlet.
- To ensure safe operation, do not damage the power cord or use the power cord if it is damaged or worn.
- Use a dedicated power outlet that must not be shared with other electrical appliances. The power plug should firmly contact the outlet or this could result in fire.
- Make sure that the grounding electrode of the power socket is equipped with a reliable grounding line.

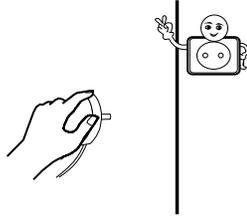

- In case of leakage of gas and other flammable gases, turn off the valve of the leaking gas and then open doors and windows. Do not unplug the refrigerator and other electrical appliances considering that a spark may cause a fire.

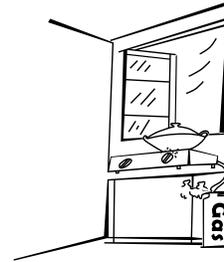


- Do not operate electrical appliances on top of the refrigerator, unless they are of the type recommended by the manufacturer.

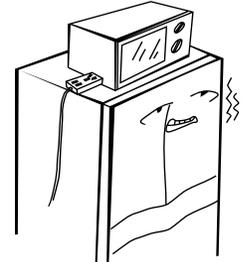


### ⚠ WARNING OPERATION

- Do not disassemble the refrigerator, nor damage the refrigerant circuit; maintenance of the appliance must be conducted by a specialist.
- A damaged power cord must be replaced by the manufacturer, its maintenance area or related professionals in order to avoid danger.

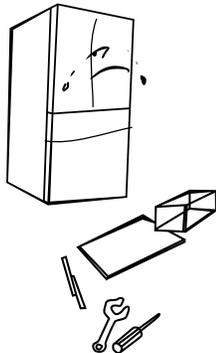

- Gaps between refrigerator doors and between doors and refrigerator body are small. Do not place your hands in these areas to prevent from pinching a finger. Be gentle when closing the refrigerator door to avoid falling articles.

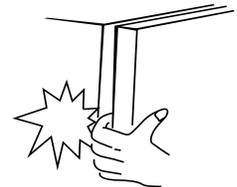

- Do not pick foods or containers with wet hands in the freezer compartment when the refrigerator is running, especially metal containers in order to avoid frostbite.


**IMPORTANT SAFETY INFORMATION.  
READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE**

**⚠ WARNING OPERATION**

- Do not allow children to get into, or climb the refrigerator; otherwise suffocation or falling injury of the children may be caused.




- Do not place heavy objects on top of the refrigerator considering that an object may fall when closing or opening the door resulting in an accidental injury.
- Pull out the plug in case of power failure or cleaning. Do not connect the appliance to power supply within five minutes to prevent damages caused to the compressor due to successive starts.

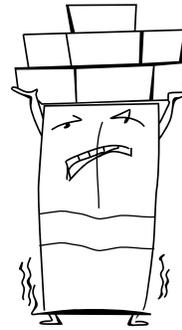


**⚠ WARNING PLACEMENT OF ITEMS**

- Do not place flammable, explosive, volatile and highly corrosive items into the refrigerator to prevent damages to the product or fire.
- Do not place flammable items near the refrigerator to avoid a fire.

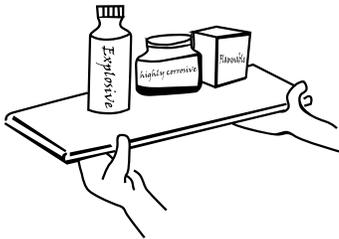

- Do not store beer, beverages or other fluid contained in bottles or enclosed containers in the freezer compartment, otherwise bottles or enclosed containers may explode due to freezing resulting in damages.

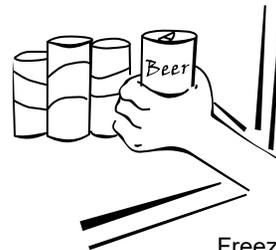

Freezer compartment

- The refrigerator is intended for household use, such as storage of foods; it should not be used for other purposes, such as storage of blood, drugs or biological products, etc.



# IMPORTANT SAFETY INFORMATION.

## READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

### **⚠ WARNING ENERGY**

- Refrigeration appliances might not operate consistently (defrosting of contents or temperature becoming too warm in the freezer compartment) when set for an extended period of time below the cold end of the range of temperatures for which the refrigeration appliance is designed.
- Carbonated drinks should not be stored in the freezer compartment or in low temperature compartments or cabinets. Some products such as water ice cubes should not be consumed too cold.
- Do not exceed the storage times recommended by the food manufacturer for any kind of food and particularly for commercially quick-frozen food in the freezer compartment.
- Take the necessary precautions to prevent an undue rise in the temperature of frozen food while defrosting the appliance, such as wrapping the frozen food in several layers of newspaper.
- An accidental rise in temperature of frozen food during manual defrosting, maintenance or cleaning will shorten its storage life.
- For doors or lids fitted with locks and keys, the keys should be kept out of the reach of children and not in the vicinity of the refrigerator, in order to prevent children from being locked inside.

### Energy saving tips

- The appliance should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.
- Let hot foods cool down to room temperature before placing them into the appliance. Overloading the refrigerator forces the compressor to run longer. Foods that freeze too slowly may lose quality, or spoil.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the appliance. This cuts down on frost build-up inside the appliance.
- Appliance storage bins should not be lined with aluminum foil, wax paper, or paper towels. Liners interfere with cold air circulation, making the appliance less efficient.
- Organize and label food to reduce door openings and extended searches. Remove as many items as needed at once, and close the door as soon as possible.

### **⚠ WARNING DISPOSAL**

- The refrigerant and cyclopentane foaming material used for the refrigerator are flammable. Therefore, when the refrigerator is disposed of, it shall be kept away from any source of fire and it must be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm.
- When disposing of the refrigerator, remove doors, and gaskets from doors and shelves; put the doors and shelves in a proper place, so as to prevent children getting trapped inside the appliance.



#### Correct disposal of this product:

This mark indicates that this product should not be disposed with other household wastes throughout the E.U. To prevent possible harm to the environment or human health from uncontrolled waste, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.


**KEEP THESE INSTRUCTIONS**

# Using the refrigerator


---

## Location of the appliance

- Keep the refrigerator upright to avoid vibration during transportation. Avoid tilting the appliance over 45 degrees during handling.
- When moving the refrigerator, avoid excessive stress on the door or top cover, in addition, it may deform.
- Before operation, remove all packing materials, including bottom foam pads and tape inside the appliance; tear off the protective film on doors and the refrigerator body.


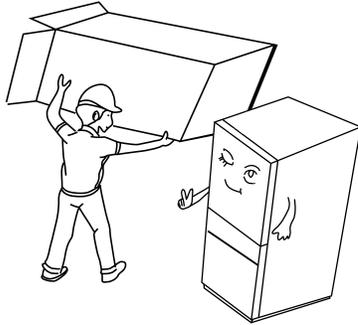


- The refrigerator should be placed in a well-ventilated indoor place; floor should be flat, and sturdy (rotate left or right to adjust the wheel for levelling if unstable).

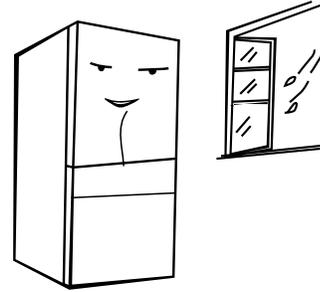

- Clearance on top of the refrigerator should be 30 cm minimum. Place the refrigerator against a wall with a clearance of more than 10 cm to facilitate heat dissipation.

- Keep the appliance away from heat and direct sunlight. Do not place the refrigerator in moist or watery places to prevent rust or reduction of insulation effect.

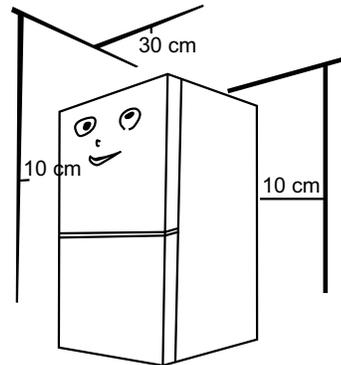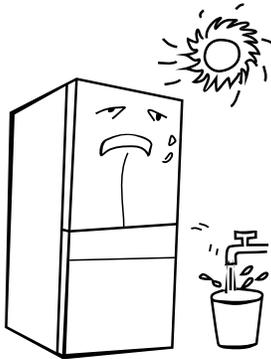


---

## Precautions before installation






Before installation or adjusting accessories, make sure that the refrigerator is disconnected from the power supply.

Precautions should be taken to prevent fall of the handle and causing personal injuries.

# Using the refrigerator

## Starting operation


- Before initial start, keep the refrigerator still for two hours before connecting it to power supply.
- Before placing any fresh or frozen foods, allow the refrigerator to run for 2-3 hours, or more than 4 hours during summer when the ambient temperature is high.
- Leave enough space for convenient opening of the doors and drawers.

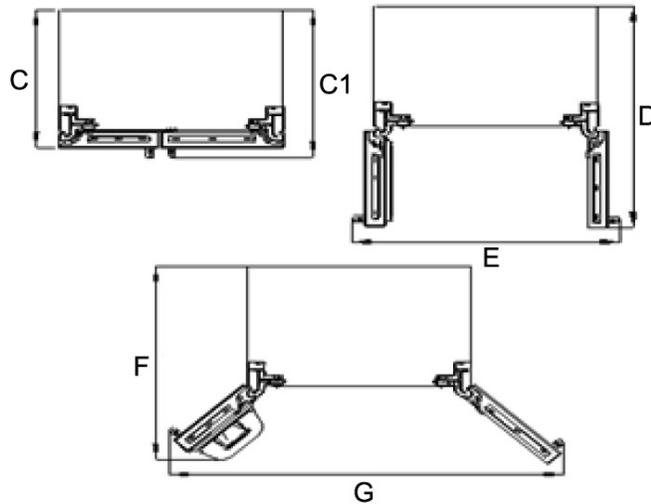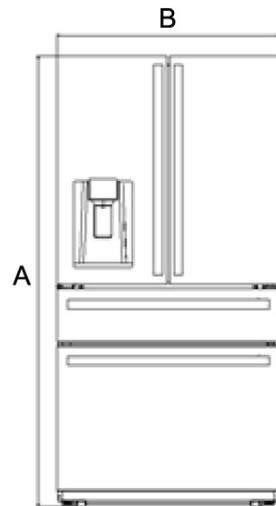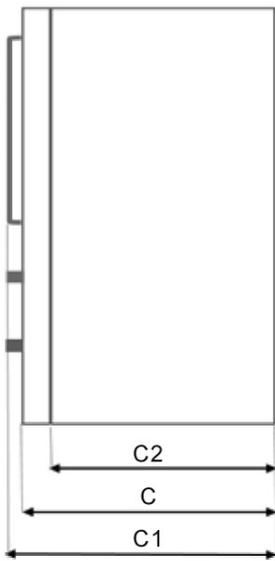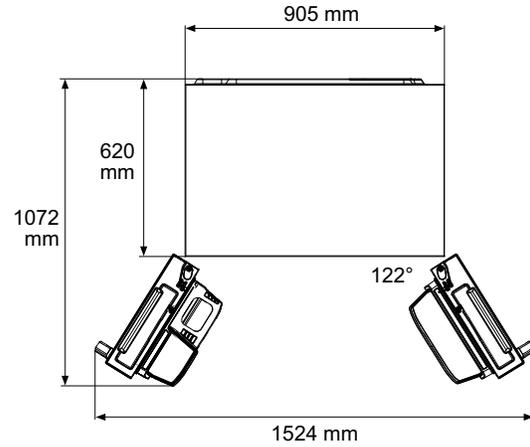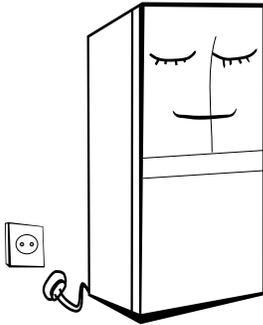

	CODE	SIZE (inch)	SIZE (mm)
Height	A	69.8	1772.7
Width	B	35.8	910
Depth without doors	C2	24.4	620
Depth including handles	C1	30.9	785.5
Depth	C	29.0	737
Depth with door open 90°	D	43.2	1096.5
Width with door open 90°	E	44.3	1124
Depth with door open 122°	F	42.2	1072
Width with door open 122°	G	60.0	1524


# Using the refrigerator

## Parts and features

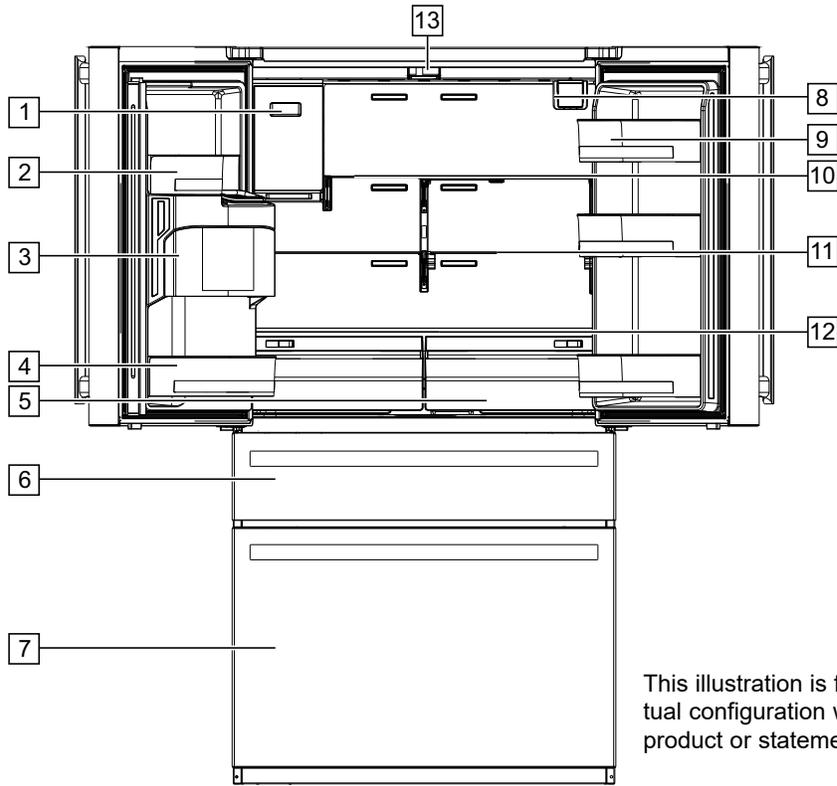

This illustration is for reference only. The actual configuration will depend on the physical product or statement by the distributor.

- |                 |                        |                   |                  |
|-----------------|------------------------|-------------------|------------------|
| 1. Ice maker    | 4. Door tray           | 7. Freezer drawer | 10. Shelf        |
| 2. Door tray    | 5. Two vegetable cases | 8. Filter         | 11. Shelf        |
| 3. Turnover box | 6. Flex drawer         | 9. Door tray      | 12. Shelf        |
|                 |                        |                   | 13. LED lighting |

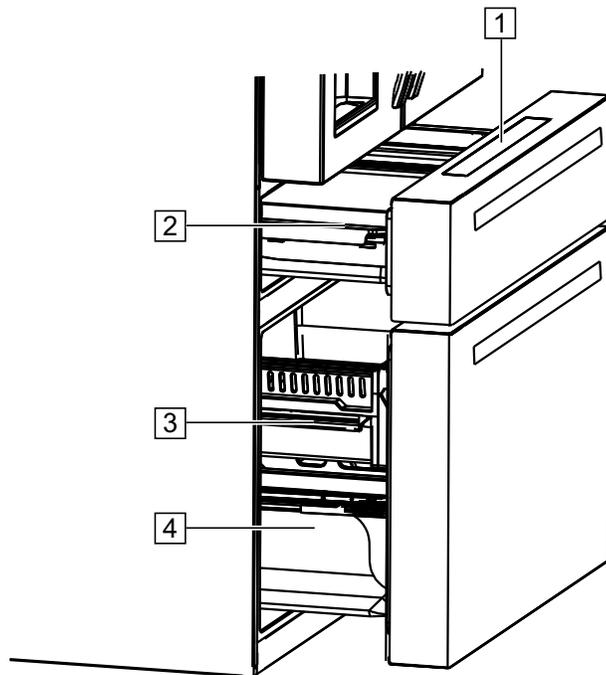

- 1. Display screen
- 2. Flex drawer
- 3. Upper freezer drawer
- 4. Lower freezer drawer

This illustration is for reference only. The actual configuration will depend on the physical product or statement by the distributor.

# Using the refrigerator

## Fresh food compartment

- The fresh food compartment is suitable for storage of a variety of fruits, vegetables, beverages and other foods to be consumed in the short term.
- Cooked foods should not be placed in the refrigerator compartment until cooled down to room temperature.
- Foods are recommended to be sealed up before placing them into the fresh food compartment.
- The glass shelves can be adjusted up or down for a reasonable amount of storage space and easy use.


## Freezer compartment

- The low temperature freezer compartment keeps food fresh for a long time and it is mainly used to store frozen foods and making ice cubes.
- The freezer compartment is suitable for storage of meat, fish, rice balls and other foods not to be consumed in short term.
- Chunks of meat are preferably to be divided into small pieces for quick freezing and easy access.
- Foods should be consumed within the shelf time.

## Flex drawer

- The Flex drawer temperature can be adjusted in -1 °C/30 °F, 1 °C /34 °F, 3 °C /37 °F and 5 °C /4 °F. The appropriate temperature can be selected according to different foods.
- When the Flex drawer temperature is set at - 1 °C /30 °F, it is suitable to store meat.
- When the Flex drawer temperature is set at 1 °C /34 °F, it is suitable to store drinks.
- When the Flex drawer temperature is set at 3 °C / 37 °F, it is suitable to store cooked food.
- When the Flex drawer temperature is set at 5 °C / 41 °F, it is suitable to store wine.

## Control panel

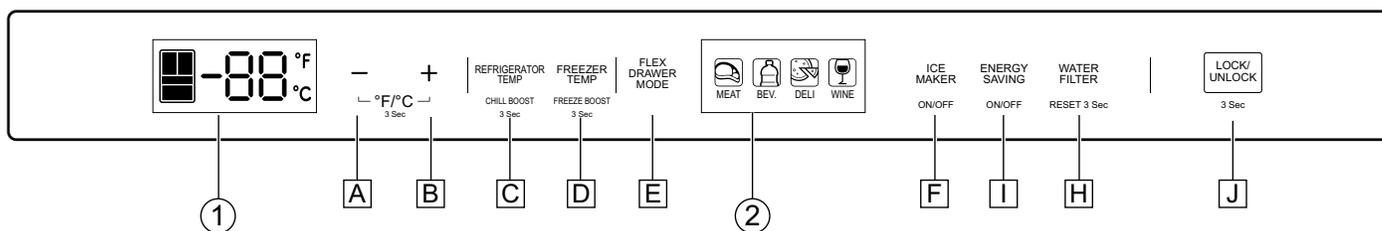

The illustration is for reference only. The actual configuration will depend on the physical product or statement by the dealer.

### Displays

1. Temperature zone display
2. Temperature shift gear

### Operation pads

- A. Decrease temperature pad
- B. Increase temperature pad
- C. Refrigerator temperature pad
- D. Freezer temperature pad
- E. FLEX drawer mode pad
- F. Icemaker pad
- H. Water filter pad
- I. Energy saving pad
- J. Lock/UNLOCK pad

# Using the refrigerator

## Displays

### ① Main display control (located on drawer door)

When the power is on for the first time, icons will be semibright, fully displayed and scrolling from left to right. Then icons will be fully lighted for 3 seconds. At the same time, the start-up bell will ring, and then the display will enter normal operation. When the refrigerator is energized for the first time, the temperature of refrigerator, freezer and flex drawer will be set at 39°F, 0°F and 37°F respectively.

Under normal conditions, if there is no door opening action and no pad is pressed for 30 seconds, the display will be locked, and will turn off after 30 seconds at locking status. When the display off, if any pad is pressed, then it will turn on.

### ② Distribution display and control

When the refrigerator is energized for the first time, the distribution display and control will turn on for 3 seconds and then it enters the normal operation. Water dispensing function is the default option when the refrigerator is energized for the first time.

## Lock and unlock

In the unlock state, press and hold the locking pad for 3 seconds to enter the lock state, the locking buzzer beeps.

In the lock state, press and hold the locking pad for 3 seconds to unlock. The buzzer beeps.

If no pad is pressed after 30 seconds, the display enters the locking state automatically.

## Temperature setting of refrigerator compartment

Press the refrigerator pad to select the refrigerator temperature zone. Then press the "-" and "+" temperature regulation pads to set the temperature for the fresh food compartment. When pressing the "-" pad once, the temperature will decrease by 1°C/1°F. After the temperature reaches 1°C/34°F, the "-" pad will be invalid no matter how it is pressed.

When the "+" pad is pressed once, the temperature will increment by 1°C/1°F. After the temperature reaches 7°C/44°F, the "+" pad will be invalid no matter how it is pressed.

The temperature range for the fresh food compartment is 1°C (34°F) ~ 7°C (44°F). The setting will take effect after locking.

## Temperature setting of the Flex Drawer

Press the FLEX drawer pad to select temperature shift zone. Press the temperature shift pad again to adjust the temperature of the FLEX drawer.

When the temperature shift pad is pressed once, the temperature will be increased by 1 gear, when the temperature reaches the WINE setting (4th gear), press the temperature shift key again, the temperature will return to MEAT (1st gear).

The corresponding temperature settings for each gear are MEAT -1°C (30°F), BEV. 1°C (34°F), DELI 3°C (37°F) and WINE 5°C (41°F). The settings will take effect after locking.



# Using the refrigerator

---

## Temperature setting of the freezer compartment

- Press the freezer pad to select the freezer temperature zone, then press the "-" or "+" temperature pads to adjust the temperature of the freezer compartment.
- When the "-" pad is pressed once, the temperature will decrease by 1°C (1°F). After the temperature reaches -22°C (-7°F), the "-" pad will be invalid no matter how it is pressed.
- When the "+" pad is pressed once, the temperature will increase by 1°C/1°F. After the temperature reaches -14°C (7°F), the "+" pad will be invalid no matter how it is pressed.
- The temperature range for the freezer compartment is -22°C (-7°F) to -14°C (7°F). The setting will take effect after locking.

---

## Switching between Fahrenheit and Celsius degrees

Press both pads "+" and "-" at the same time for 3 seconds, Fahrenheit temperature and Celsius temperature are switched and it will take effect after locking.

---

## Dispenser selection

1. Touch the pad corresponding to the desired mode to select between Ice Cubes, Cold Water or Crushed Ice.
2. After the corresponding function is selected, the indicator light of that function will turn on.
3. Water will be dispensed immediately after Cold Water dispensing mode is selected. Ice will be dispensed 3 seconds after Ice Cubes or Crushed Ice is pressed.

### Dispenser indicator lamp

When turning on the dispenser switch, the dispenser indicator light will turn on; when the dispenser switch is turned off, the dispenser indicator light will turn off after a 3 seconds delay.

Press the REF-ICE pad to turn on the backlight and the refrigerator ice maker; press the REF-ICE pad again to turn off the backlight and the refrigerator ice maker. It will take effect after locking.

**Note:** When the refrigerator ice maker is on, the ice maker will direct the ice into the ice making compartment, if the ice storage box is removed and the ice maker is currently turning over the ice.

---

## Tips for filter replacement

When the filter is used for more than 150 days and the indicator light is on, or when the filter is used for more than 180 days and the indicator light flashes, press the WATER-FILTER pad for 3 seconds to clear the alarm settings and reset it.

The buzzer will sound 3 times.

---

## Mode setting

### Quick cooling mode

- Press and hold the refrigerator pad 3 seconds to enter the QUICK COOLING mode. At the same time, the icon of the fresh food compartment turns blue.
- The QUICK COOLING mode will take effect after being locked.
- When setting the QUICK COOLING mode, the temperature of the refrigerator compartment is automatically set at 1°C.
- When exiting the QUICK COOLING mode, the set temperature of the refrigerator compartment automatically returns to the previous set temperature.

### Quick freezing mode

- Press and hold the freezer pad 3 seconds to enter the QUICK FREEZING mode. At the same time, the icon of the freezer compartment turns blue.
- The QUICK FREEZING mode will take effect after being locked.
- When setting the QUICK FREEZING mode, the temperature of the refrigerator compartment is automatically set at -22°C.
- When exiting the QUICK FREEZING mode, the set temperature of the freezer compartment automatically returns to the previous set temperature.

# Using the refrigerator

---

## ECO mode

- Press the ENERGY SAVING pad to enter the ECO mode. The indicator light will turn on. The QUICK-FREEZING mode is cancelled. The QUICK FREEZING is set at -14°C and the fresh food compartment temperature at 7°C.
- Press the ENERGY SAVING pad again to exit the ECO mode, the backlight of the pad will turn off, and the temperature of freezer and fresh food compartments will return to the previous set temperature.
- The mode will take effect after locking.

---

## Anti-condensation heater strip

- The anti-condensation heater strip can be turned on and off via a combination of pads.
- Press the ENERGY SAVING and FREEZER TEMP pads at the same time for 3 seconds, the Fahrenheit symbol will blink, it will take effect by pressing the locking key, and the anti-condensation heater strip will be turned off.
- When the anti-condensation heater strip is off, press the ENERGY SAVING and FREEZER TEMP pads at the same time for 3 seconds, the Fahrenheit symbol will stop blinking, it will take effect by pressing the locking key, and the anti-condensation heater strip will be turned on.
- The on and off anti-condensation heater strip is used for inspection and maintenance convenience. The user should not easily turn off the anti-condensation heater strip, as it will cause the risk of condensation.

---

## Error codes

- When there is an error, the display shows the error code (the display cycles after locking).
- The buzzer sounds an alarm. Press any pad when unlocking or locking, the alarm turns off. After the corresponding sensor/ice maker error is eliminated, the display will clear the corresponding error code.
- When any door is opened for more than 2 minutes, the buzzer will sound an alarm. When the door is locked/unlocked, press any pad to turn off the alarm, or close all doors, the alarm sound will be muted.

Error code	Error description
EH	Humidity sensor failed.
F5	Refrigerator ice maker fails to turn over ice.
F4	The sensor at the bottom of refrigerator ice maker fails.
CC	The defrosting sensor in ice maker chamber fails.
C9	The sensor in ice maker compartment fails.
CA	The communication between main control and ice maker boards failed.
F6	Initialization of refrigerator ice maker failed.
E0	Initialization of freezer ice maker fails.
E1	The temperature sensor in the fresh food compartment failed.
E2	The temperature sensor in the freezer compartment failed.
E3	Sensor of the Flex Drawer failed.
E4	Frosting sensor of fresh food compartment failed.
E5	Frosting sensor of freezer compartment failed.
E6	Communication between display and main control boards failed.
E7	Ambient temperature sensor failed.

# Using the refrigerator



## Dispensing cold water and ice

The ice and water dispenser is located on the outside of refrigerator compartment door. You can select cubed ice, crushed ice, or cold water.

The dispenser only works when the fresh food compartment door is closed.



### Dispensing cold water

1. Press the WATER pad until the indicator turns on.
2. Push the container against the dispensing cushion, cold water starts to flow into the container.
3. Remove the container from the dispensing cushion to end water dispensing.

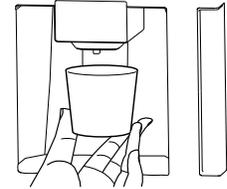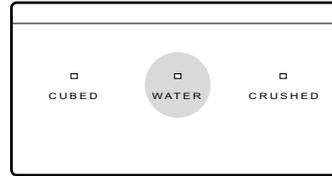



### Dispensing crushed ice

1. Press the CRUSHED pad until the indicator turns on.
2. Place the container against mouth of water dispenser to prevent side jet.
3. Push the container against the dispensing cushion.
4. Fill the container with crushed ice.
5. Remove the container from the dispensing cushion to end crushed ice dispensing.

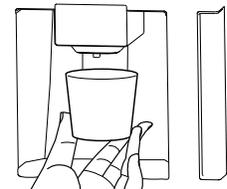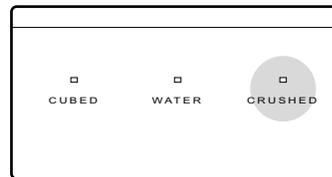

### Dispensing ice cubes

1. Press the CUBED pad until the indicator turns on.
2. Push the container against the dispensing cushion.
3. Ice cubes start to fall into the container.
4. Remove the container from the dispensing cushion to end dispensing of cubed ice.

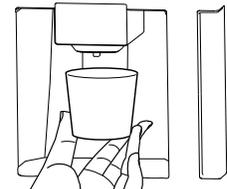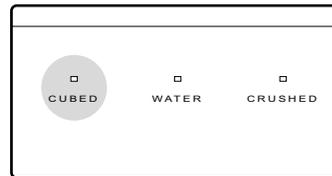

The illustrations above are for reference only. The actual configuration will depend on the physical product or statement by the dealer.

# Care and Cleaning

## Overall cleaning

**⚠ WARNING UNPLUG THE REFRIGERATOR FROM POWER SUPPLY BEFORE DEFROSTING AND CLEANING.**

- Dust behind the refrigerator and on the floor should be regularly removed to improve cooling and energy saving.
- Check the door gasket regularly to make sure there are no debris. Clean the door gasket with a soft cloth dampened with soapy water or diluted detergent.
- The interior of the refrigerator should be cleaned regularly to avoid odor formation.
- Turn off the power before cleaning the interior, remove all foods, drinks, shelves, drawers, etc.
- Use a soft cloth or sponge to clean the inside of the refrigerator with a solution made with warm water and two table-spoons of baking soda, about a quart of warm water. Then rinse with clear water and wipe clean. After cleaning, open the doors and let dry naturally before turning on the power.
- For areas that are difficult to clean (such as narrow gaps or corners), it is recommended to wipe them regularly with a soft cloth, soft brush, etc. and when necessary, combined with auxiliary tools (such as thin sticks) to ensure no contaminants or bacteria accumulation in these areas.


- Do not use soap, detergent, scrubbing powders, spray cleaner, etc., as these may cause odors in the interior of the refrigerator or could contaminate foods.



- Clean the bottle frame, shelves and drawers with a soft cloth dampened with soapy water or diluted detergent. Dry with a soft cloth or dry naturally.
- Wipe the outer surface of the refrigerator with a soft cloth dampened with soapy water, detergent, etc., and then wipe dry.
- Do not use hard brushes, cleaning steel balls, wire brushes, abrasives such as toothpaste, organic solvents such as alcohol, acetone, banana oil, etc., boiling water, acid or alkaline items, which may damage the refrigerator surface and interior. Boiling water and organic solvents such as benzene may deform or damage plastic parts.
- Do not rinse with water or other liquids during cleaning to avoid short circuits or affect electrical insulation after immersion.

## Cleaning door bins

- According to the direction of arrows in the figure below, use both hands to press the bin, and pull it upward, to take it out.
- After washing the door bin, you can replace it at a height that best suits your needs.

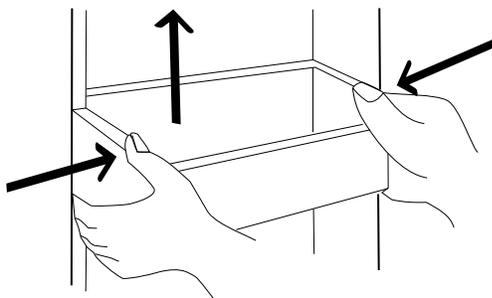


The illustration is for reference only. The actual configuration will depend on the physical product or statement by the dealer.

# Care and Cleaning

## Variable temperature drawer (Flex Drawer)


Completely open the variable temperature drawer, hold the left and right sides of the drawer with both hands. Lift the back end, exert a little force to pull the whole drawer back about 15 mm until the support claw of the slide rail is separated from the drawer, then lift the front end of the drawer at an angle. Hold the drawer and move horizontally to the inside of the compartment, then rotate it back and up to remove the drawer.

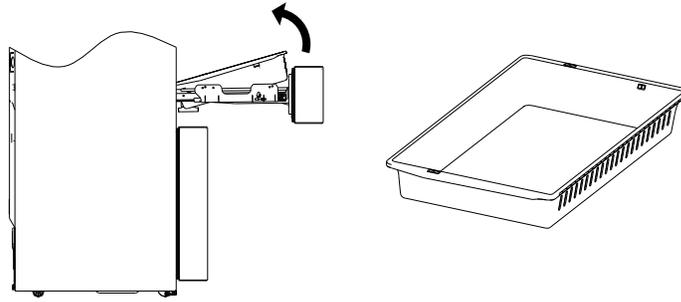

## Upper freezer drawer

Completely open the freezer compartment drawer, lift the back end of the upper drawer, pull the slide rail so that it won't jump. Push the drawer forward to separate it from the support claw of the slide rail. Separate the drawer on the side from the support claw of the slide rail with the same method.


Rotate the drawer back and up to remove it after the slide rail support is separated from the drawer.

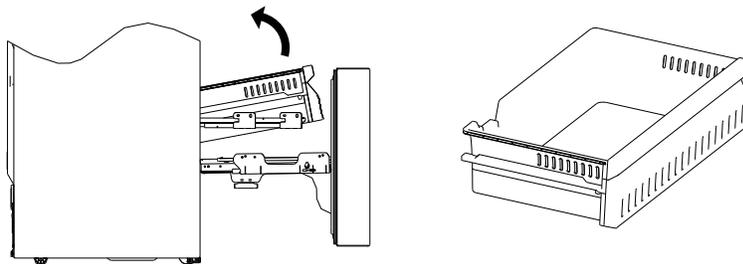

## Lower freezer drawer

Completely open the freezer compartment lower drawer, hold the left and right sides of the lower drawer. Lift the back end of the drawer to pull the whole drawer about 15 mm to the external side of the compartment until the sliding rail support claw is separated from the drawer.

Rotate the drawer back and up to take it out.

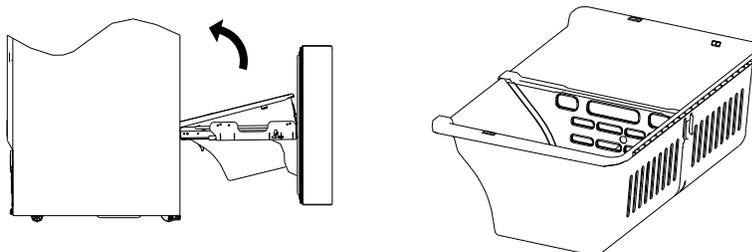

# Care and Cleaning



---

## Cleaning the ice storage box

When you need to use a lot of ice, or need to clean the ice storage box, you can take out the ice storage box.

1. Hold the bottom of the ice storage box with your hand, press it gently, then pull it out horizontally.
2. Push the ice storage box in slightly after cleaning.

**Note:** Please remove the ice that fall in the ice making chamber during pulling out.

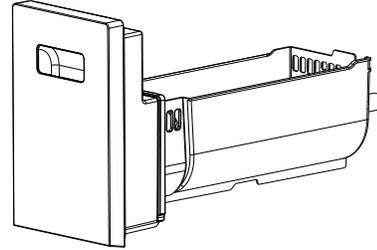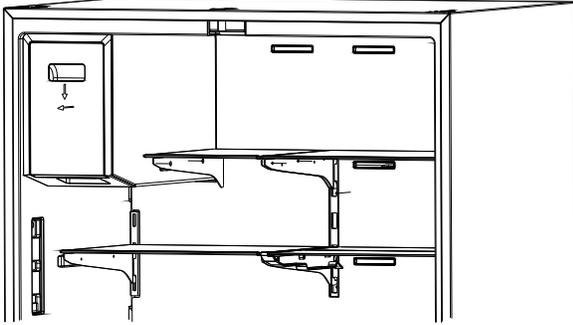

---

## Defrosting

The refrigerator was designed based on the air-cooling principle and thus has an automatic defrosting function. Frost formed due to change of season or temperature may also be manually removed by unplugging the appliance from power supply or by wiping with a dry towel.

---

## Out of operation

**Power failure:** In case of power failure, even during summer, foods inside the appliance can be kept for several hours; during the power failure. The number of door openings should be reduced, and no more fresh food should be placed into the appliance.

**Long-time nonuse:** The appliance should be unplugged and then cleaned; then leave the doors open to prevent odors.

**Moving:** Before the refrigerator is moved, take all items out, fix the glass shelves, vegetable holder, freezer compartment drawers, etc. with tape. Tighten the leveling legs; close the doors and fix them with tape. During moving, the appliance shall not be laid upside down or horizontally, or be vibrated; the inclination during moving should be no more than 45°.