


|                                  |    |
|----------------------------------|----|
| 1. IMPORTANT SAFETY INSTRUCTIONS | 2  |
| 2. INSTALLATION AND HOOK-UP      | 10 |
| 3. DESCRIPTION OF THE CONTROLS   | 18 |
| 4. OPERATING INSTRUCTIONS        | 26 |
| 5. CLEANING AND MAINTENANCE      | 27 |
| 6. TROUBLESHOOTING               | 28 |

*Thank you for choosing one of our products.*

*You are advised to read this manual carefully; it contains all the information you need about the right conditions for the proper, safe use of your dishwasher.*

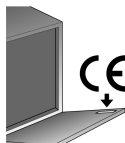

*This manual contains only the basic information required to use the appliance. The complete manual can be obtained from*

**[www.smeg.com/download-manuals](http://www.smeg.com/download-manuals)**

*by entering the product code shown on the plate attached to the inner right hand edge of the dishwasher door.*

*The manual can be accessed quickly via the QR code using a device with a QR reader application.*



# TRANSLATION OF THE ORIGINAL INSTRUCTIONS

## 1. IMPORTANT SAFETY INSTRUCTIONS

### SAVE THESE INSTRUCTIONS

- Before using the appliance, carefully read all the instructions contained in this manual.
- During installation, take care not to injure yourself on the sharp edges of the appliance: wear safety gloves.
- This manual is an integral part of the appliance; it must always be kept intact together with the dishwasher for future reference (even if sold).
- Use the dishwasher only for its intended function.
- This appliance is intended for indoor use in a household environment and similar such as staff kitchens of shops, offices and other workplaces, institutions, and for the use by guests at hotels, hostels, bed and breakfast and other residential facilities. The appliance is designed and manufactured to perform the following function: **washing and drying of dishes**; any other use shall be considered improper. **The manufacturer declines all responsibility for uses other than those described above.**
- Do not use appliances which have been damaged during transit! If in doubt, contact your dealer.



- Do not operate your dishwasher unless all enclosure panels are properly in place.
- Do not tamper with controls.
- The appliance must be installed and connected in accordance with the instructions provided by the manufacturer. **Installation must be performed by qualified technicians in accordance with applicable regulations.**
- **The installation and repair or servicing shall be carried out by qualified and authorised technical personnel.** Interventions by unauthorised personnel can be dangerous and cause the warranty to lapse. The installation must comply with all the directives of the country where the dishwasher is installed, and in the absence of them, in the United States the National Electric Code; in Canada the Canadian Electric Code C22.1 - Latest edition/provincial and municipal codes and/or local codes
- Under certain conditions, hydrogen gas might be produced in a hot-water system that has not been used for two weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot-water system has not been used for such a period, before using the dishwasher turn on all hot-water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.



- Never leave waste packaging unattended. Do not allow children to play with packaging materials. Separate waste packaging materials by type and consign them to the nearest recycling centre.
- The plate with the technical data, serial number and marking is in a visible position on the inside edge of the door. **It must not be removed.**
- The appliance must be earthed in compliance with electrical safety regulations. **The manufacturer declines all responsibility for damage to persons or property resulting from failure to earth the appliance or from a defective earth connection.**
- During the installation the appliance must be disconnected from the network.
- Do not install the appliance in a place subject to freezing.
- Do not install the appliance near equipment with high irradiation temperature (e.g. gas burners, fireplaces, etc.).
- If the appliance is installed in a compartment above or below another equipment (e.g. gas burners, ovens, etc.), read carefully the instructions provided by the manufacturer of the equipment. If the instructions of the equipment do not contain information, contact the manufacturer of the equipment to ensure that the appliance can be installed above or below it.



- Building-in the appliance underneath a hob is absolutely forbidden. Installing a hob on top of free-standing appliance is absolutely forbidden.
- To ensure stability, install the appliance only under continuous worktop, securely fixed to adjacent cabinets. If the appliance is installed in a high cabinet, both the appliance and the cabinet must be adequately fixed.
- If the appliance is not built-in and is therefore accessible on one side, the door hinge area must be covered for safety reason (injury hazard). The covering fixtures are available as an accessory from specialist dealers or the after-sales.
- Check that the voltage and the frequency of the mains match the ratings on the name plate of the appliance.
- The plug on the supply cord and the corresponding socket outlet must be of the same type and meet the regulations in force. Do not use adaptors or shunt connections in order to avoid the possibility of overheating or burning.
- The plug of the appliance must be accessible after installation. Never disconnect the plug by pulling on the power supply lead.
- If the appliance is provided with a plugless supply cord, an omnipolar circuit breaker providing a full disconnection in overvoltage protection class III must be installed in an easily accessible position on the supply line.



- The appliance **must** be connected to the water supply by means of new hoses.
- Briefly test the appliance after installation. Run a wash cycle with a temperature of between 113°F and 158°F (45°C-70°C) with the dishwasher empty and using a specific dishwasher detergent. (It is not sufficient to run a soak cycle). If the dishwasher fails to operate correctly, disconnect it from the electrical power supply and call the nearest technical service centre. **Never attempt to repair the appliance yourself.**
- The dishwasher should only be used by adults. Use by children aged from eight years and persons with reduced physical, sensor or mental capabilities or lack of experience and knowledge is only permitted under the supervision of a person responsible for their safety.
- To reduce the risk of injury, do not allow children to play in or on a dishwasher.
- Use only detergents or wetting agents recommended for use in a dishwasher and keep them out of the reach of children
- Keep children away from the dishwasher when the door is open. Always check that the detergent distributor is empty after completion of the wash cycle.
- Cleaning and regular maintenance of the appliance by children is only permitted under the supervision of a person responsible for their safety.



- Some detergents are strongly alkaline. Avoid contact with the skin and eyes. Detergents can be extremely dangerous if swallowed. They contain substances capable of causing permanent damage to the mouth and throat, and even leading to suffocation. Observe all the safety instructions on the packaging of these products.
- Do not drink the water residues which may be present on the dishes or appliance at the end of the washing program.
- Never place solvents such as alcohol or turpentine, which are potentially explosive, inside the appliance. Never load dishes soiled with ash, wax or paint.
- Never leave the dishwasher door open; people might trip over it.
- Do not abuse, sit on, or stand on the door or dish rack of the dishwasher.
- Switch off the dishwasher after use to avoid wasting electricity.
- Locate sharp items so that they are not likely to damage the door seal.
- Load sharp knives with the handles up to reduce the risk of cut-type injuries.
- The appliance satisfies all applicable safety regulations governing electrical equipment. Any technical checks should be conducted exclusively by trained and authorised technicians: **repairs performed by unauthorised persons not only**



**void the warranty but may also put the user's safety at risk.**

- In the event of a fault, disconnect the dishwasher from the electrical power supply and shut off the water tap. In the event of damage to the supply cord, have it replaced by the manufacturer or an authorised technical service centre.
- Some components are live even with the **on/off** button in the off position. Before performing any maintenance work on the appliance, disconnect it from the electrical power supply.
- Do not clean the machine with a water jet machine, high-pressure or steam cleaners.
- Do not introduce animals into the dishwasher.
- **Models with “acquastop” device**

This device prevents flooding in case of water leak. When the “acquastop” device is tripped, contact a qualified technician to identify and repair the fault. In these models the water intake hose contains a solenoid valve. **Do not cut the hose and do not allow the solenoid valve to drop into water.** In case of damage to the water intake hose, disconnect the appliance from the electrical and water supply.

**Warning: The device only works if the dishwasher is connected to the mains.**





## **1.1 Disposal**

The appliance does not contain substances in quantities sufficient to be considered hazardous to health and the environment, in accordance with current European directives:

To dispose of the appliance:

- Remove the washing compartment door.
- Cut the power cable,
- Make the lock unusable.

**The manufacturer declines any liability for damage or injury caused by failure to comply with the instructions indicated above or as a result of tampering with even just one part of the appliance and the use of non-original spare parts.**




## 2. INSTALLATION AND HOOK-UP

### 2.1 Technical characteristics

|                                             |                                                  |
|---------------------------------------------|--------------------------------------------------|
| <b>Water supply pressure</b>                | min. 0,05 - max. 0,9 MPa (min. 0.5 – max. 9 bar) |
| <b>Water supply temperature</b>             | max. 140°F – 60°C                                |
| <b>Capacity</b>                             | 12-13 standard place settings                    |
| <b>Class of protection against moisture</b> | IPX0                                             |
| <b>Protection against electric shock</b>    | class I                                          |
| <b>Electrical data</b>                      | see the data plate                               |

### Appliance dimensions

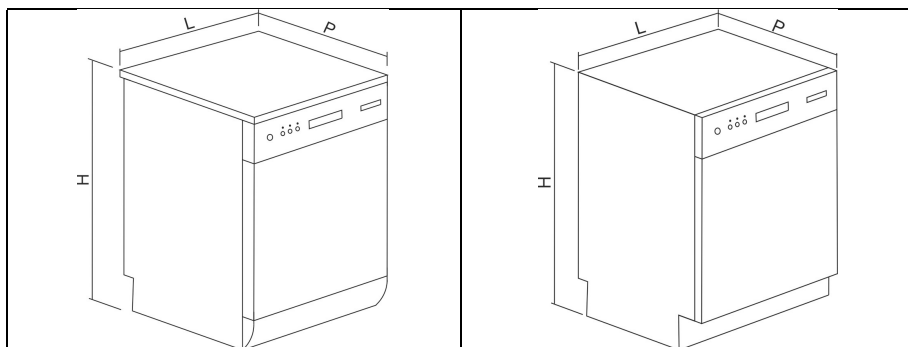

| Dimensions         | H                                  | P                   | L                 |
|--------------------|------------------------------------|---------------------|-------------------|
| Free standing      | 850 mm;<br>33"-15/32               | 627 mm<br>24"-11/16 | 600 mm<br>23"-5/8 |
| Free standing maxi | 890 mm;<br>35"-3/64                | 627 mm<br>24"-11/16 |                   |
| Integrated         | 818-888 mm;<br>32"-13/64-34"-61/64 | 584 mm<br>22"-63/64 |                   |
| Integrated maxi    | 858-928 mm;<br>34"-31/32-36"-35/64 | 584 mm<br>22"-63/64 |                   |



## 2.2 General Information

- This appliance may be placed up against walls or other furniture units.
- If the appliance is installed near a heat source, fit a special insulating panel to prevent overheating and malfunction of the appliance.
- To facilitate the installation procedure, the intake and drain hoses can be positioned in any direction; make sure that the hoses are not kinked, crushed or pulled too tightly.
- A hole at least 8 cm (3" 5/32) in diameter is required to allow the power supply cable and hoses to pass.
- At the end of the installation, perform a short test of the appliance: open the water tap and check that there are no leaks.
- To install the dishwasher against the back wall, the hoses should be passed through the lower area where there is a dedicated space for them.



Level the appliance on the floor using the appropriate Allen key to regulate the adjustable feet. This operation is essential for ensuring correct operation of the dishwasher.



*Some models are equipped with only one adjustable foot at the rear, which can be adjusted by turning the screw on the lower front part of the appliance.*



Building-in a dishwasher underneath a hob is **absolutely forbidden**.

Moreover, dishwashers **may not** be installed directly touching appliances which are **not conventional** built-in kitchen appliances (e.g. fireplaces, stoves, etc.).

When installing the dishwasher in a compartment next to one or more other appliances, it is essential to comply with all the recommendations provided by the appliance's manufacturer (minimum distances, installation procedures, etc.).

**For free-standing models only**

- Installing a hob on top of a free-standing dishwasher is **absolutely forbidden**.
- If the appliance is accessible from one side, the door hinge area has to be covered for safety reasons (risk of injury). The covers are available as an accessory and can be ordered through the Technical Assistance Service.
- The top surface of the dishwashers can be removed to allow installation under a worktop. The **appropriate kit** should be purchased from authorised dealers or via the Technical Assistance Service. This must be carried out by authorised personnel.




## 2.3 *Water supply connection*

### CONNECTING TO THE WATER SUPPLY

Connect the intake hose to a cold water supply with  $\frac{3}{4}$ " gas thread, inserting the filter **A** supplied with the dishwasher. **Take care to screw the hose firmly into place with your hands and then complete by tightening about  $\frac{1}{4}$  of a turn with pliers.**

**In dishwashers equipped with the AQUASTOP device, the filters is already fitted inside the threaded ring.**

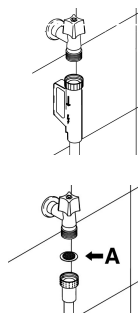

•



- The dishwasher can also be connected to a hot water supply **not exceeding 60°C (140°F)**. Supplying the appliance with hot water cuts down the washing time by approximately 20 minutes, but slightly reduces its effectiveness. Make the connection to the domestic hot water supply using the same procedure described for connecting to the cold water supply.




## DRAIN CONNECTION

Insert the dishwasher's drain hose into a drain pipe having a diameter of at least **4 cm (1"37/64)**, or alternatively, place it inside the kitchen sink using the plastic support provided, taking care not to crush or excessively bend the hose. It is important to prevent the hose from coming loose and falling. For this purpose, the plastic support is equipped with a hole for tying it to the wall or water tap.

The free end should be positioned at a height of between **30 and 100 cm (11" 13/16 and 3' 3" 3/8)**, and should never be submerged in water.

If a horizontal drain extension hose is used (for a maximum 3 m - 9' 10" 7/64 ), the drain hose can be placed at a maximum height of **85 cm (2' 9" 15/32)** from the ground.

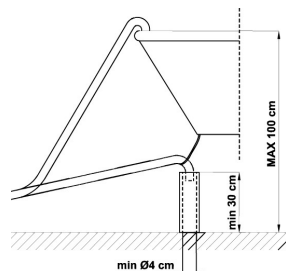



## 2.4 *Electrical connection*



- Check that the voltage and the frequency of the mains match the ratings on the name plate of the appliance positioned on the inner edge of the door.
- This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances.
  - **WARNING** – Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly grounded. Do not modify the plug provided with the appliance, if it will not fit the outlet, have a proper outlet installed by a qualified electrician.
- The plug must be accessible after installation.
- **Never disconnect the plug by pulling on the power supply lead.**
- After changing the supply cord, make sure that the bracket which secures the cord is fixed securely in place.





- **Do not use adaptors or shunt connections** in order to avoid the possibility of overheating or burning.




***The power cable must be replaced by the manufacturer or by an Authorized Service Centre.***



## 3. DESCRIPTION OF THE CONTROLS

### 3.1 Upper panel

All the dishwasher controls are grouped on the front panel. Programming and option selection are only possible with the **door closed**.

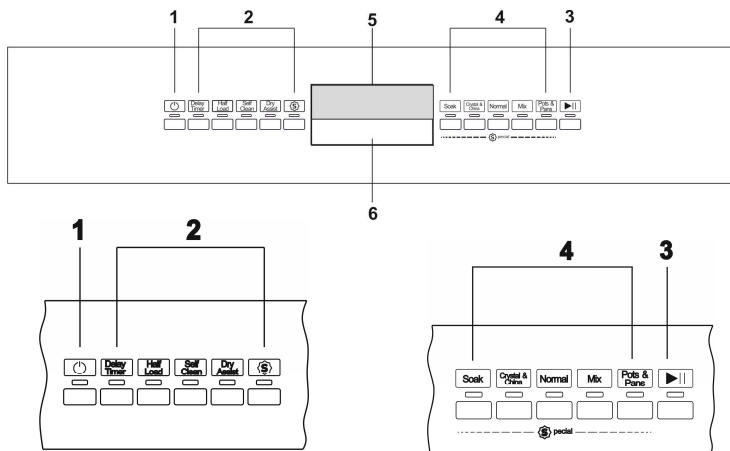

|   |                                                    |
|---|----------------------------------------------------|
| 1 | <b>ON/OFF BUTTON AND WARNING LIGHT</b>             |
| 2 | <b>OPTION SELECTION BUTTONS AND WARNING LIGHTS</b> |
| 3 | <b>START/PAUSE BUTTON</b>                          |
| 4 | <b>PROGRAM SELECTION BUTTONS</b>                   |
| 5 | <b>INFORMATION DISPLAY</b>                         |
| 6 | <b>HANDLE TO OPEN THE DOOR</b>                     |

**N.B.:** symbols and styling are guideline and may vary depending on the model or version of the dishwasher purchased.



## 3.2 Information display

The dishwasher is equipped with a practical **DISPLAY** which provides information on the programmed dishwasher functions.

|                                                                                     |                                                                                                   |                                                                                   |                                                                                   |                                                                                   |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
|    | Time to end                                                                                       |  |  |  |
|    | Sani-tized                                                                                        |                                                                                   |  |  |
|    | Rinse aid lack warning indicator                                                                  |                                                                                   |                                                                                   |                                                                                   |
|    | Salt lack warning indicator                                                                       |                                                                                   |                                                                                   |                                                                                   |
|    | End of cycle signal                                                                               |                                                                                   |                                                                                   |                                                                                   |
| Sani-tized                                                                          | Shows that sanitation has been completed.                                                         |                                                                                   |                                                                                   |                                                                                   |
| <b>000</b>                                                                          | Delayed start indicator, wash cycle duration and alarms                                           |                                                                                   |                                                                                   |                                                                                   |
| <b>H0....H5</b>                                                                     | Water softener setting indicator                                                                  |                                                                                   |                                                                                   |                                                                                   |
| <b>b0....b5</b>                                                                     | Rinse aid setting indicator                                                                       |                                                                                   |                                                                                   |                                                                                   |
|    | Program phases warning lights<br>With program in progress, it indicates the status of the program | Prewash                                                                           |                                                                                   |                                                                                   |
|    |                                                                                                   | Wash                                                                              |                                                                                   |                                                                                   |
|   |                                                                                                   | Rinse                                                                             |                                                                                   |                                                                                   |
|  |                                                                                                   | Drying                                                                            |                                                                                   |                                                                                   |




## LIGHTING

Pressing the **ON/OFF** button will start the dishwasher and will lit up the dishwasher pilot light. After approximately **3 second** from this operation the **DISPLAY** will be turned on with a visualization that will depend upon the state of the dishwasher.

## PROGRAMMING

All the programming operations are possible only with closed door. With open door, on the **DISPLAY** will appear - - : - -.

## SELECTION PROGRAM

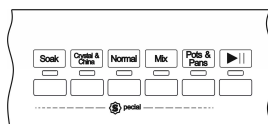

The program selection is possible through the relative buttons.

By pressing the relative button of the desired program (see table) it will light up the relative pilot light to confirm that the operation occurred and on the **DISPLAY** a program duration forecast will appear ("h.mm").



## START PROGRAM

At this point, in order to start the machine, it is only enough to press the

**START/PAUSE**  for some seconds until the symbol **START/PAUSE** start to flash and confirmation "beep" is heard. From this moment the cycle duration on the **DISPLAY** starts to decrease.

Program progress is indicated by the program phases that show the status of the current cycle.

The current phase flashes, while the next washing phases lights stay on. At the end of each phase, the signal will turn off.

N.B.: when a program which does not need the prewash phase is selected, the prewash signal stays off.



Prewash



Wash



Rinse



Drying



## Warning:

during the initial phase of the wash program the spray arms cannot be heard in operation because they start turning about 5 minutes after the start. This is the normal wash cycle sequence.

## END PROGRAM

At the end of the program the **DISPLAY** shows "**end**". By pressing one of the program buttons the dishwasher is ready to start a new cycle.

## INTERRUPTING A PROGRAM

In order to interrupt a running program it is necessary:

- to press the **START/PAUSE**  for some seconds until when the led **START/PAUSE** remains lit on (confirmation beep). At this point, it is possible to start the cycle again, otherwise:
- 

## TO CHANGE A PROGRAM

To change the running program it is necessary:

- to interrupt the running program (see "**INTERRUPTING A PROGRAM**");
- select the new program;
- to press again the **START/PAUSE** button  to make start the new program.

## STOPPING A PROGRAM

To cancel a program which is running:

- Interrupt the program (see "**INTERRUPTING A PROGRAM**")
- Press the **START/PAUSE** button  and hold it down; the display will show "**P0**" and the dishwasher will immediately switch to the end of the cycle and drain the tank (during this process, the "**START/PAUSE**" led will flash). When the drain procedure ends, the end of cycle "**End**" message appears on the display.



*In case that the door is opened during the operation, to the next door closing it is going to be necessary to start the program as shown in paragraph "**STARTING THE PROGRAM**". The program will resume from the point in which it was interrupted.*

***In case that the tub temperature is higher than 50°C the program will start about 60 seconds later.***



## PROGRAMS TABLE

| Program           |                                                                                                           | Pre-wash | Wash            | Rinse     |                                | Drying | (1) Duration (min) | Water consumption<br>(liters/cycle) | (1) Energy consumption<br>(kWh/cycle) |
|-------------------|-----------------------------------------------------------------------------------------------------------|----------|-----------------|-----------|--------------------------------|--------|--------------------|-------------------------------------|---------------------------------------|
| P1                | SOAK                                                                                                      | cold     | -               | -         | -                              | -      | 15                 | 4,5l<br>1,19 gal.                   | 0,02                                  |
| P2(**)            | CRYSTAL &<br>CHINA                                                                                        | -        | 45°C<br>(113°F) | 2         | 55 °(4) /70°C<br>(131°F/158°F) | •      | 126 (4)<br>/76     | 15,6l<br>4,12gal                    | 1,15                                  |
| P3<br>(2)<br>(**) | NORMAL                                                                                                    | -        | 45°C<br>(113°F) | cold      | 55 ° (4)/64°C<br>(127°F/158°F) | •      | 170(4)<br>/83      | 3,4l<br>0,9gal                      | 0,6                                   |
| P4<br>(**)        | MIX                                                                                                       | cold     | 65°C<br>(149°F) | cold      | 55 ° (4)/70°C<br>(131°F/158°F) | •      | 150(4)<br>/108     | 15,6l<br>4,12gal                    | 1,35                                  |
| P5<br>(3)         | POTS &<br>PANS                                                                                            | hot      | 70°C<br>(158°F) | 2<br>cold | 70°C (158°F)                   | •      | 110                | 19,3l<br>5,1 gal                    | 1,60                                  |
| P6                | EXPRESS 27'<br>P1+       | -        | 38°C<br>(100°F) | -         | 50°C (122°F)                   | -      | 27                 | 8,2l<br>2,17gal                     | 0,40                                  |
| P7<br>(**)        | DELICATE<br>P2+         | cold     | 50°C<br>(122°F) | 2<br>cold | 55 ° (4)/70°C<br>(131°F/158°F) | •      | 133(4)/<br>85      | 19,3l<br>5,1gal.                    | 1,00                                  |
| P8                | ECO<br>EXPRESS<br>P3+  | -        | 50°C<br>(122°F) | cold      | 70°C<br>(158°F)                | •      | 88                 | 12,9l<br>3,41 gal.                  | 1,20                                  |
| P9                | EXPRESS<br>60'<br>P4+  | -        | 65°C<br>(149°F) | cold      | 70°C<br>(158°F)                | •      | 60                 | 11,9<br>3,14 gal                    | 1,30                                  |
| P10               | STERILIZE<br>P5+       | hot      | 70°C<br>(158°F) | 2<br>cold | 75°C (167°F)                   | •      | 130                | 19,3l<br>5,1 gal                    | 1,12                                  |



1 – The cycle times and electrical energy listed use and care manual are based on normal soil loads and 120°F (49°C) incoming water and will vary based on your actual conditions.

2 – Program for energy star; the **DRY ASSIST** option must be **enabled**.

3-Only “**POTS & PANS**” program **conforms to NSF std 184** and is certified by **INTERTEK** with the **ETL SANITATION LISTED**.

When the “Sanitized” light shine it means that the dishwasher and its contents have been sanitized according to the requirements of the **National Sanitation Foundation (NSF)**.

4 – **DRY ASSIST** option selected (default)/not selected

### **Automatic door opening – Dry Assist**

Automatic door opening is **included** in programs indicated with \*\* in the first column



*If the dishwasher door is open or not properly closed, the washing cycle will not start.*

### **Switching on**

Press the on/off button to start the dishwasher. Then wait for one of the program indicator light to turn on.

### **IMPORTANT**

The door of the dishwasher must **ble closed within 4 seconds after use of the program selection button** for all functions (e.g. program selection, change, deletion, etc.). If the door is not closed within 4 seconds, **one or more program lights** (depending on the current operation) **will flash at high speed** to indicate that **the operation must be confirmed** before the door is closed.

To **confirm, simply press the program selection button once** and the flashes will slow down; close the door an once to start/restart the dishwasher.

The same applies if the dishwasher is opened **with the program delay option set and the cycle not started** (e.g. to add more dishes): **the program selection button must be pressed before the door is closed**, restarting the program delay countdown.

If the door of the dishwasher has not been closed or has been incorrectly closed, the washing cycle will not begin



### Description of the programs:

|                                                                                                                                                                    |                                                                                                                                                                                                                              |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>SOAK</b><br>Pans and dishes awaiting completion of the load                                                                                                     | <b>EXPRESS 27'</b><br>Dishes with light dirt, washed immediately after use                                                                                                                                                   |
| <b>CRYSTAL &amp; CHINA</b><br>Wash cycle for delicate items, such as wine glasses and lightly soiled fine china. Ideal when you require dazzlingly clean glassware | <b>DELICATE</b><br>Wash cycle for mixed loads such as wine glasses and lightly soiled dishes.                                                                                                                                |
| <b>NORMAL</b><br>Normally soiled dishes including dried-on residues, for daily use.                                                                                | <b>ECO EXPRESS</b><br>Quick wash cycle with low water and energy consumption. Suitable for normally soiled mixed loads, washed immediately after use.                                                                        |
| <b>MIX</b><br>Mixed dishes very dirty, including dried-on residues.                                                                                                | <b>EXPRESS 60'</b><br>Quick wash cycle for normally soiled mixed loads such as dishes and pans, even with dried-on residues. Dishes are washed and dried in 60 minutes.                                                      |
| <b>POTS &amp; PANS ETL SANITATION LISTED</b><br>Mixed dishes very dirty and pans dirty, including dried-on residues.                                               | <b>STERILIZE</b><br>Intensive wash cycle ideal for plates, pots, pans, cutting boards, feeding bottles. Ideal for baby dishes or if there are allergy sufferers in the family in order to achieve a higher level of hygiene. |





## User instructions

EN

| Option |                   | Description                                                                                                                                                                                                                            |
|--------|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1      | <b>SPECIAL</b>    | Creates additional programs.                                                                                                                                                                                                           |
| 2      | <b>DRY ASSIST</b> | Allows the dishes to be dried perfectly even at low rinse temperatures, with significant energy savings. It starts automatically if the selected program is compatible with it. If it is not required, press the button to disable it. |
| 3      | <b>HALF-LOAD</b>  | Allows you to wash just a few dishes when distributed evenly between the baskets.                                                                                                                                                      |
| 4      | <b>DELAY</b>      | Allows the wash cycles 1 or 3 to be delayed by up to 9, 12 or 24 hours depending on the models.                                                                                                                                        |
| 5      | <b>SELF CLEAN</b> | Dishwasher cleaning cycle. Must be started with the machine empty, without dishes.                                                                                                                                                     |




## 4. OPERATING INSTRUCTIONS

After having installed the dishwasher, remove the basket retainers.

### 4.1 Adding the salt

The salt prevents the formation of scale deposits.

- Unscrew the cap of the salt container.
- Only for the first time, fill the container with a litre of water.
- Pour salt (approx. 1 kg) into the container using the funnel provided with the dishwasher.
- Remove any salt residues before screwing the cap back on.

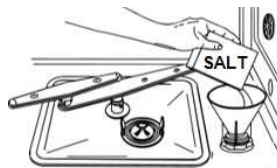

To regulate the water hardness setting, please refer to the complete manual that can be found on the website.




- *Only use regeneration salt specifically for domestic dishwashers.*
- *After having added the salt, run a wash cycle to remove any excess salt.*

### 4.2 Adding the rinse aid

The rinse aid helps to dry the dishes more quickly.

To add rinse aid:


- Open the dispenser by pressing and lifting the tab on the cover.
- Top up again when the rinse aid indicator light turns on.
- Close the cover, a click indicates when it is closed.
- Use a cloth to remove any spillage of rinse aid which might lead to the formation of excess foam.

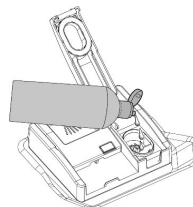

To regulate the amount of rinse aid, please refer to the complete manual that can be found on the website.

### 4.3 Adding the detergent

- Open the detergent dispenser cover by lightly pressing the button **P**.
  - Add the detergent or tablet.
- Close the cover by sliding it until it stops, indicated by a click.

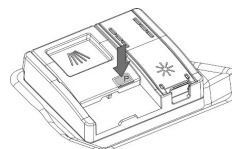




## 5. CLEANING AND MAINTENANCE



**Before carrying out any work, always unplug the appliance from the electrical supply or switch off the omnipolar circuit breaker.**

### CLEANING THE WATER INTAKE FILTER




Close the water supply tap, unscrew the end of the water intake hose, remove the filter **A** and clean it under running water. Put the filter **A** back into its seat and carefully screw the water intake hose back on.

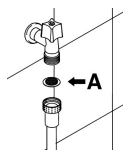


### CLEANING THE SPRAY ARMS

Remove the spray arms and wash them with a jet of water. Put them back in their seats, **making sure that there is nothing to prevent them from rotating.**

 - To remove the **upper** spray arm, unscrew locking ring **R**.
- To remove the **lower** spray arm, simply lift it up, pulling by the central part. To remove the **orbital** spray arm assembly, take hold of the longer arm and pull the orbital unit upward.
- To remove and clean the **planetarium** sprayer follow the instructions provided.

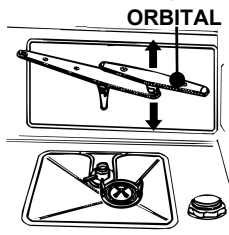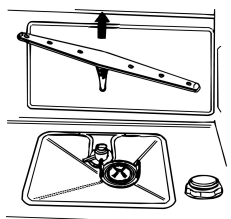



**PLANETARIUM**

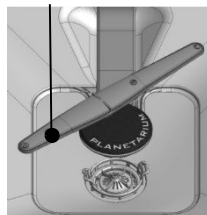

### CLEANING THE FILTER UNIT

- Remove the planetarium spray arm (only for the models on which it is fitted)
- Grip the tabs, turn them anticlockwise and lift upwards.
- Push the central filter **D** from underneath to remove it from the micro-filter.
- Separate the two parts that make up the plastic filter by pressing the body of the filter in the zone indicated by the arrows.

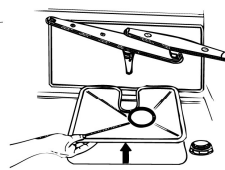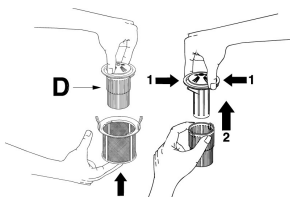



## 6. TROUBLESHOOTING

The dishwasher is equipped with a self-diagnostics system that is capable of detecting and signalling a number of possible faults.

**TABLE OF FAULTS DETECTED BY THE SELF-DIAGNOSTICS SYSTEM**

| FAULT       | DESCRIPTION                                                                    |
|-------------|--------------------------------------------------------------------------------|
| <b>E 01</b> | The anti-flooding system (where present) has been tripped service.             |
| <b>E 02</b> | The water level limitation system has tripped.                                 |
| <b>E 03</b> | The appliance cannot heat the water.                                           |
| <b>E 04</b> | The temperature sensor is disconnected.                                        |
| <b>E 05</b> | The appliance cannot take in the water.                                        |
| <b>E 06</b> | The appliance cannot drain the water from the tank.                            |
| <b>E 07</b> | The dishwasher cannot measure the precise water quantity that has been loaded. |
| <b>E 08</b> | Problem on the water distribution system to the baskets.                       |
| <b>E 09</b> | Water intake system malfunction.                                               |
| <b>E 11</b> | Wash motor pump does not work                                                  |

If an alarm occurs, the machine stops the current program and indicates the fault.

- Alarms **E1** and **E11** require you to contact the technical assistance service.
- Alarm **E7** is displayed at the end of the cycle, which is anyway completed, as it does not affect the operation of the dishwasher.

For all other alarms, proceed as follows: stop the current program, switch off the dishwasher. Switch on and program the dishwasher again to start the new wash cycle.



*If the malfunction persists, contact your authorised Service Centre and provide it with the fault code.*

*The contact details of the Technical Assistance Department can be found on the warranty certificate and the website*

The manufacturer reserves the right to make any changes deemed necessary for the improvement of its products without prior notice.