

# Whirlpool® Upright Freezer

 
## PRODUCT MODEL NUMBERS

EV161FZT      EV181FZT  
 EV161NZT      EV181NZT  
                     EV185NXT  
                     EV201NZT  
                     EV209NBT

**Electrical:** A 115 Volt, 60 Hz., AC only 15 or 20 amp fused (or circuit breaker), grounded electrical supply is required. It is recommended that a separate circuit serving only your freezer be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.

**Water Supply:** Connect the ice maker to a cold water line with water pressure between 30 and 120 psi.

## OVERALL DIMENSIONS

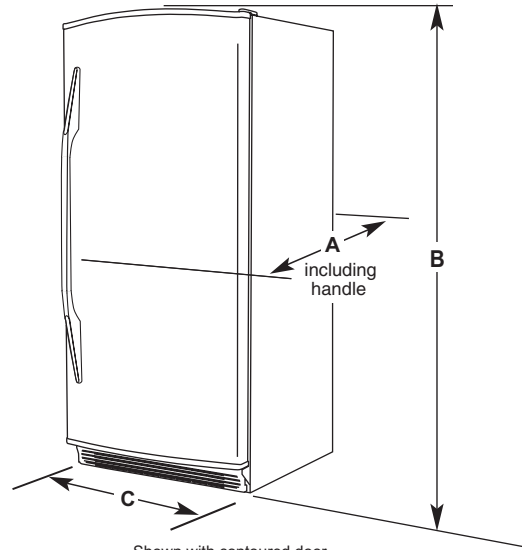


Shown with contoured door.

Door swing is right-fixed.

Model	Depth "A"	Cabinet Height "B"	Width "C"
EV161FZT	30 5/16"	61.0"	30.0"
EV161NZT	31 5/16"	61.0"	30.0"
EV181FZT	30.0"	67.0"	30.0"
EV181NZT	32.0"	67.0"	30.0"
EV185NXT	32.0"	67.0"	30.0"
EV201NZT	32.0"	67.0"	30.0"
EV209NBT	32.0"	67.0"	30.0"

## LOCATION REQUIREMENTS

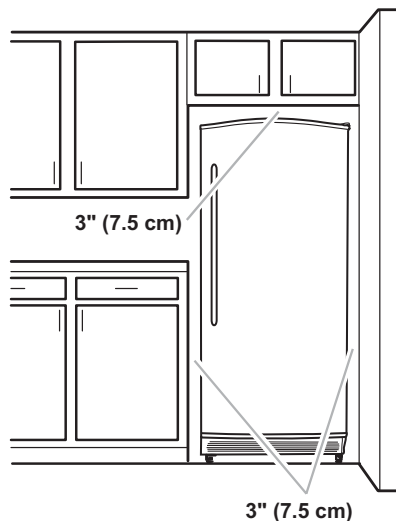 

Allow at least 3 in. (7.5 cm) of air space at the top and on both sides of the freezer and 1 in. (2.5 cm) between the back of the freezer and the wall. If the freezer is to be against a wall, leave extra space on the hinge side so the door can open wider.

**NOTE:** This freezer may be installed side by side with another refrigerator or freezer. Allow for a 3 in. (7.5 cm) clearance at the top and sides and a 1/4 in. (0.64 cm) clearance between the appliances.

**IMPORTANT:** Do not install the freezer near an oven, radiator, or other heat source, nor in a location where the temperature will fall below 40°F (5°C).