




## **30" BUILT-IN ELECTRIC DOUBLE OVEN**

### **MODELS:**

WOD51EC0HB00 (Black)  
WOD51EC0HW00 (White)  
WOD51EC0HS00 (Stainless)


# CONTROL PANEL PARTS

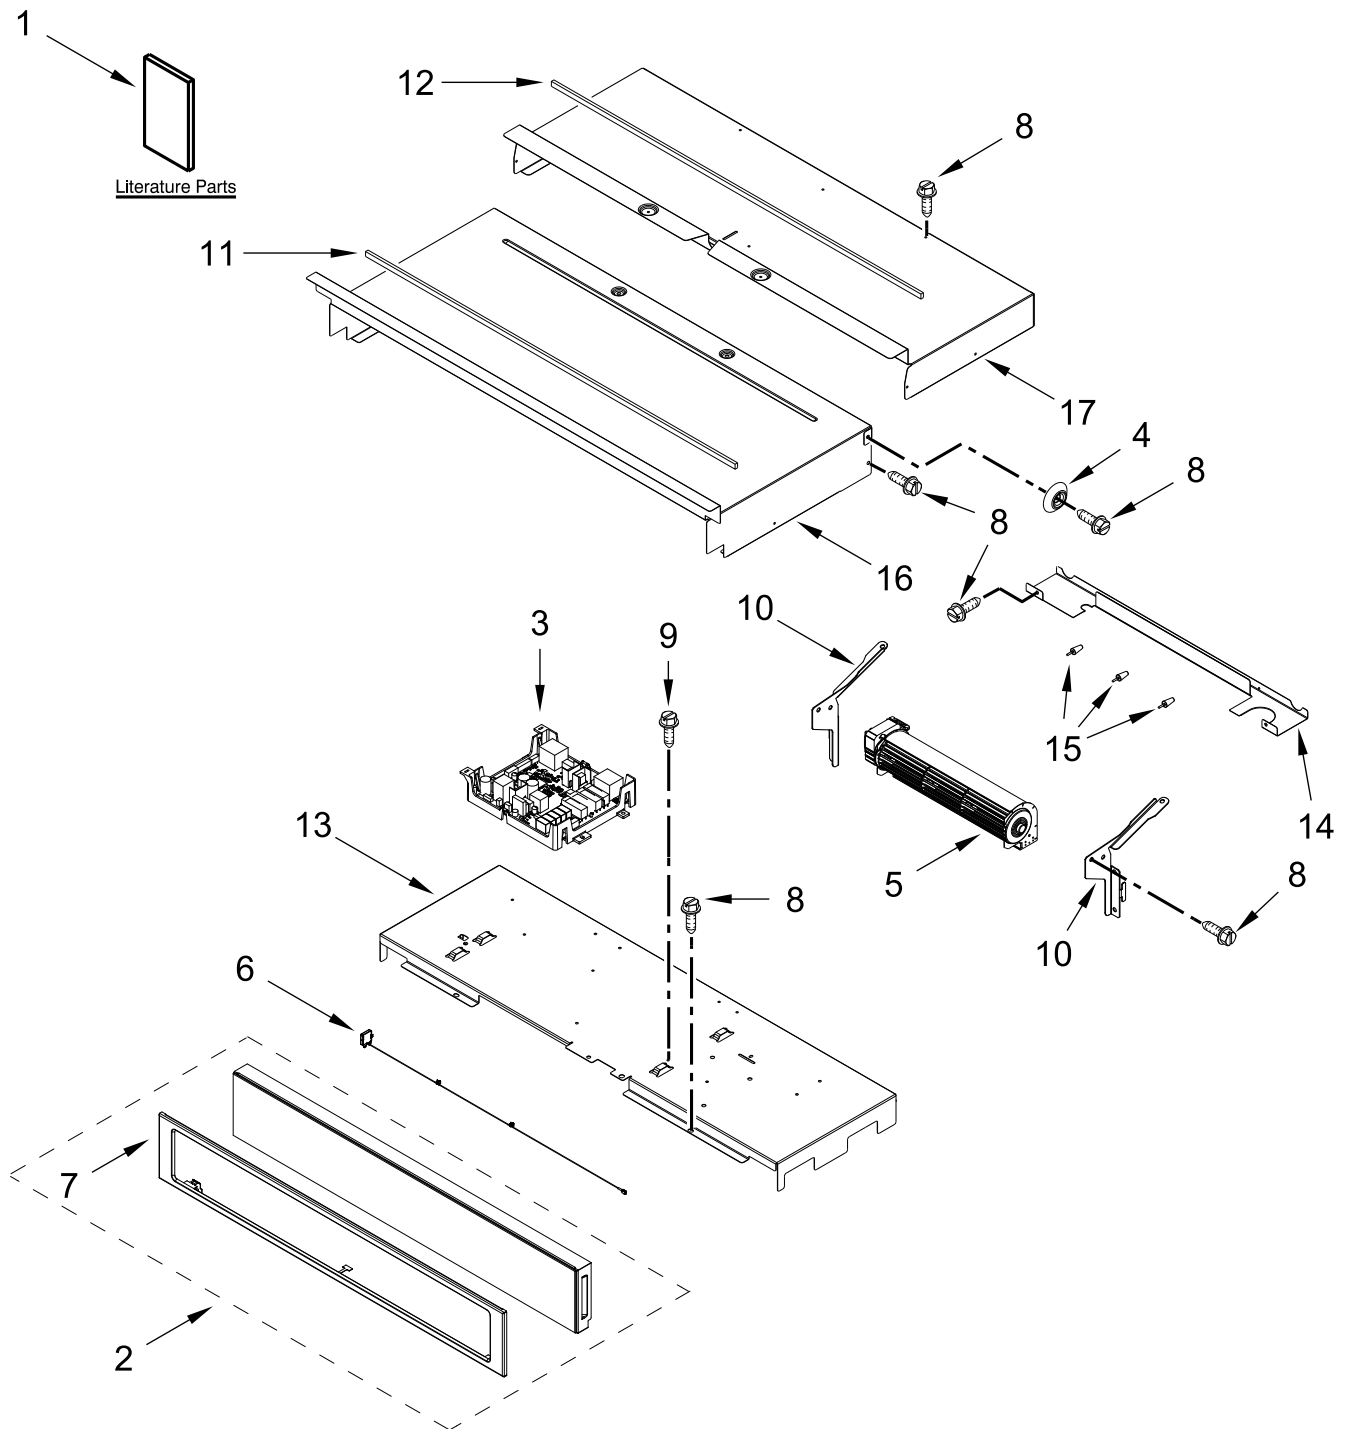

# CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	W10618105	Spacer, Lateral	16	W10318192	Chassis, Cover Top Front 30"
	W11108506	Guide, Use & Care	5	W10850518	Blower			
	W11129956	Instructions, Installation	6	W11044576	Antenna	17	W10904156	Chassis, Cover Top Back 30"
	W11097305	Guide, Internet Connectivity	7		Skin, Control Panel			
	W11046178	Sheet, Tech		W11026970	Black			FOLLOWING PARTS NOT ILLUSTRATED
	W11129950	Diagram, Wiring		W11026969	White		W10881995	Harness, Main
2		Assembly, Control Panel (Includes Overlay)		W10899877	Stainless		W10775068	Harness, Door Latch
	W11105011	Black	8	7101P426-60	Screw		W10562910	Harness, EOL
	W11105013	White	9	7101P434-60	Screw		W10766377	Harness, TOD Jumper
	W11105007	Stainless	10	W10655463	Bracket, Blower (Left)		W10834514	Harness, Console
3	W11040197	Manager, Appliance (With Power Supply)		W10655462	Bracket, Blower (Right)		4448664	Clamp, Conduit
	W11040198	Manager, Appliance (Without Power Supply)	11	W10657548	Gasket, Rubber		W10655464	Bracket, Harness
			12	W10728475	Gasket, Rubber		313438	Clip, Harness
			13	W10864102	Tray, Electronic		4450800	Screw, Grounding
			14	W10655465	Chassis, Back Divider		W10487999	Clip, Harness
			15	W10351295	Bumper		W10431304	Bag, Hardware


# OVEN PARTS

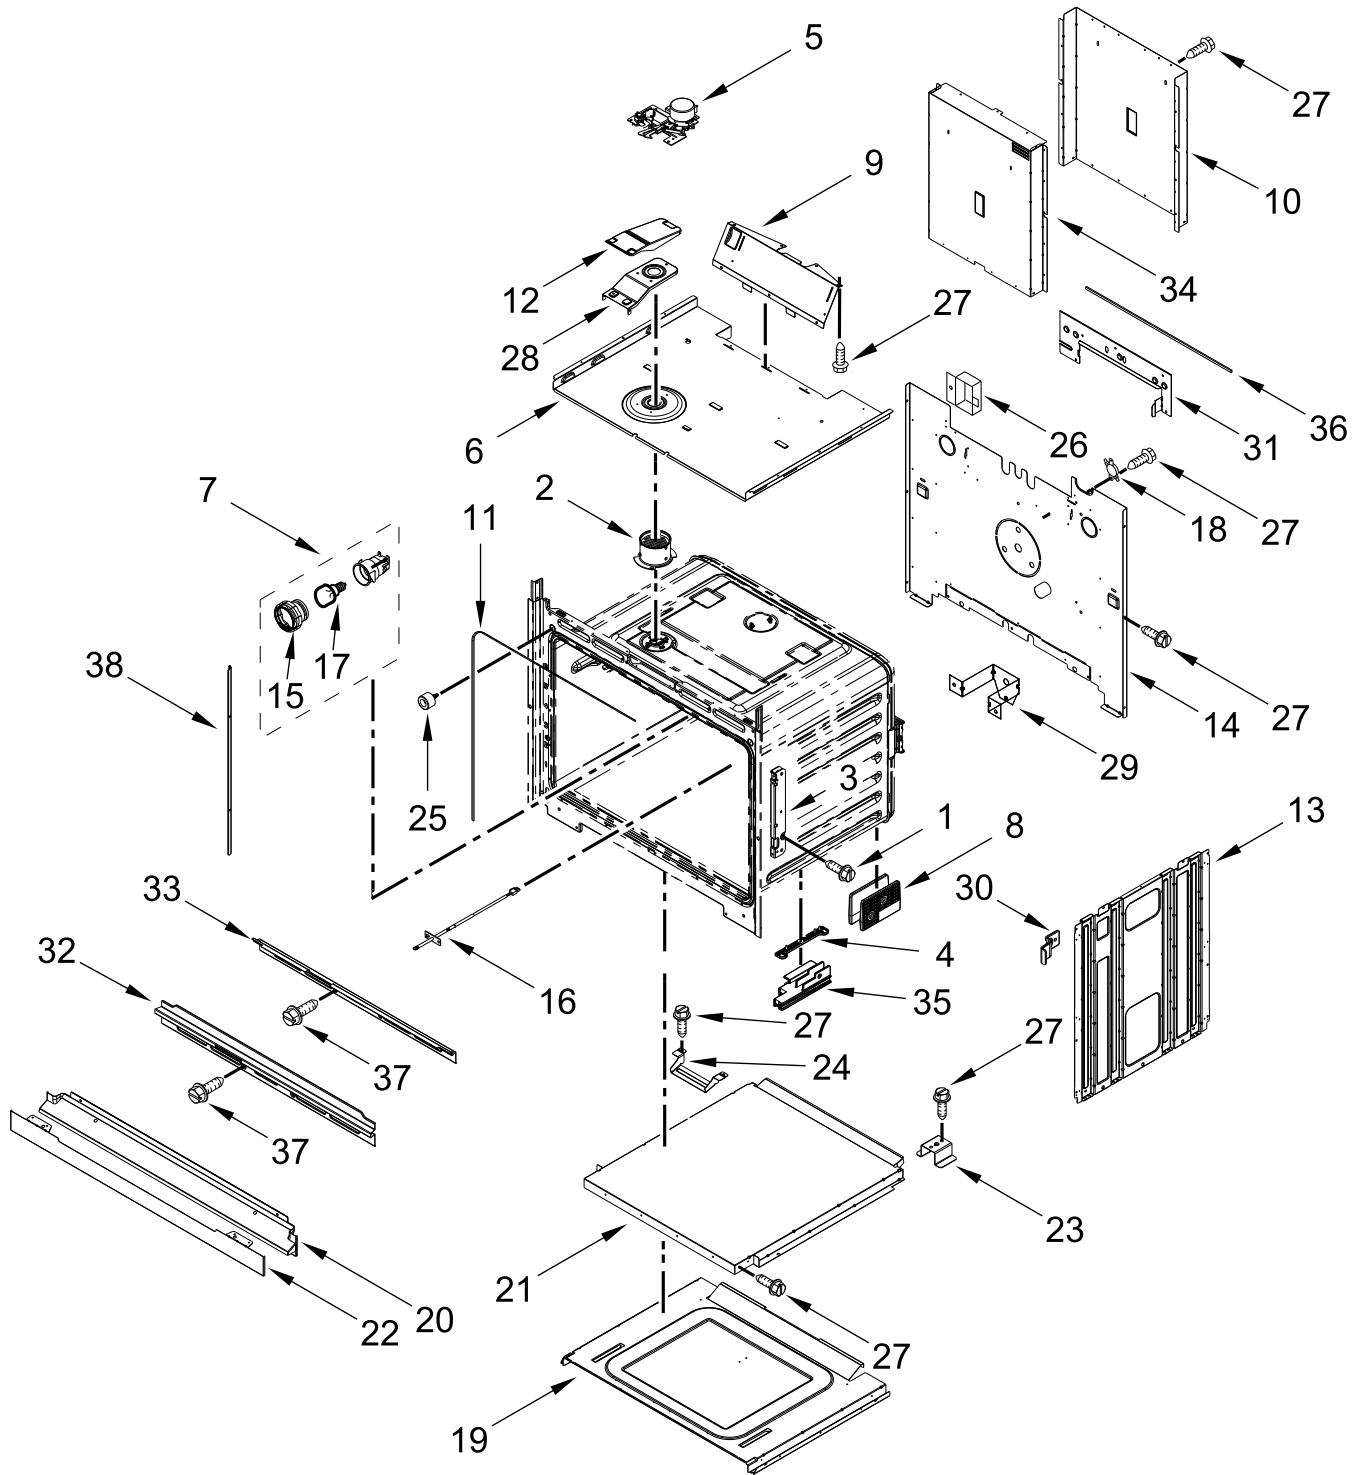

# OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10254050	Screw	19	W10834867	Base, Chassis	30	W10347649	Spacers, Front
2	W10282946	Tube, Vent	20		Assembly, Bottom Vent	31	W10904155	Bracket, U-Shape
3	W10616802	Receiver, Hinge		W10327373	Black	32	W10283040	Vent, Center 30"
4	W10618102	Spacer, Base		W10506344	White	33	W10283036	Vent, Top 30"
5	W10618131	Latch, Motorized		W10351279	Stainless	34	W10318196	Duct, Chassis Back
6	W10904158	Top, Chassis	21	W10283008	Chassis, Bottom Duct			(Upper)
7	W10734063	Assembly, Light	22		Trim, Bottom Vent	35	W10618103	Foot, Front (Left)
8	W10618101	Foot, Base		W10351236	Black		W10618104	Foot, Front (Right)
9	W10904163	Deflector, Blower		W10504026	White	36	W10728475	Gasket, Rubber
10	W10542857	Duct, Chassis Back (Lower)		W10327377	Stainless	37	W10607120	Screw
11	W10282960	Gasket	23	W10213759	Support, Air Channel	38	W10327369	Cover, Side Trim (Left)
12	W10616810	Cover, Vent Exhaust	24	W10351308	Spacer, Chassis Bottom Duct		W10327368	Cover, Side Trim (Right)
13	W10318190	Side, Chassis	25	W10351278	Bumper & Screw			FOLLOWING PARTS NOT ILLUSTRATED
14	W10904160	Back, Chassis	26	8285593	Cover, Connector		W10520715	Insulation, Wrap
15	W10412722	Lens, Light	27	7101P426-60	Screw		W10282944	Insulation, Cavity
16	W10622170	Probe, Sensor	28	W10616809	Base, Vent Exhaust			
17	W10412711	Bulb, Light	29	W11027314	Hat Bracket, Vent			
18	4449751	Thermostat (TOD)						


# UPPER OVEN DOOR PARTS

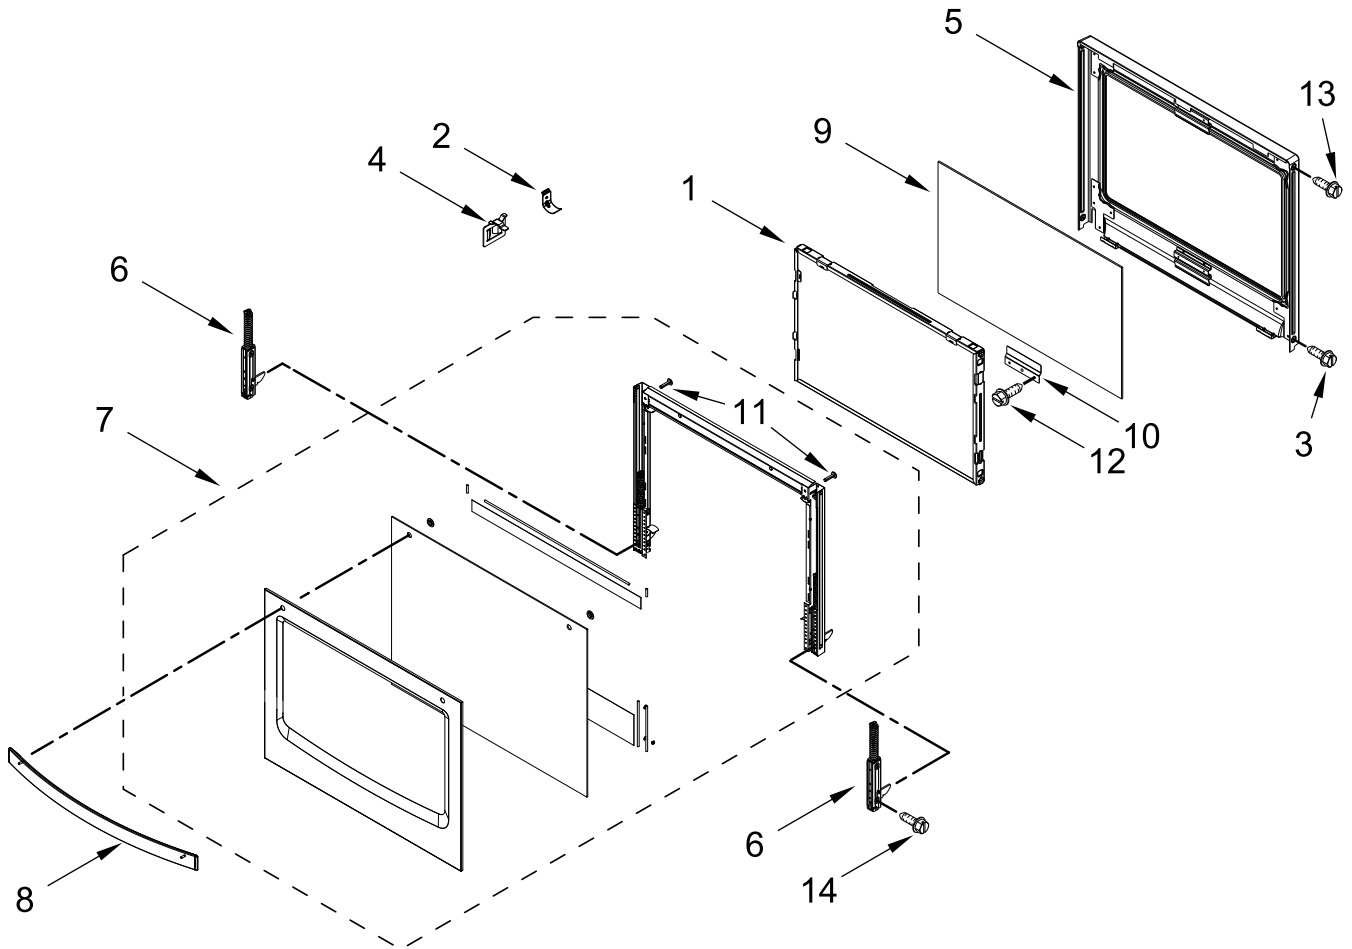

# UPPER OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10347596	Assembly, Window Pack	7		Assembly, Door Glass	9	W10618107	Glass, Inner
2	W10284285	Spring, Door Glass Fixation		W10866266	Black	10	W10284297	Bracket, Glass
3	7101P635-60	Screw (Black)		W10866267	White	11	W10480830	Screw
4	W10653954	Clip, Spring Metal		W10866265	Stainless	12	7101P426-60	Screw
5	W10709147	Assembly, Liner	8		Assembly, Door Handle	13	7101P653-60	Screw
6	W10639069	Hinge, Door		W11022638	Black	14	3196183	Screw
				W11022639	White			
				W10875206	Stainless			

# LOWER OVEN DOOR PARTS





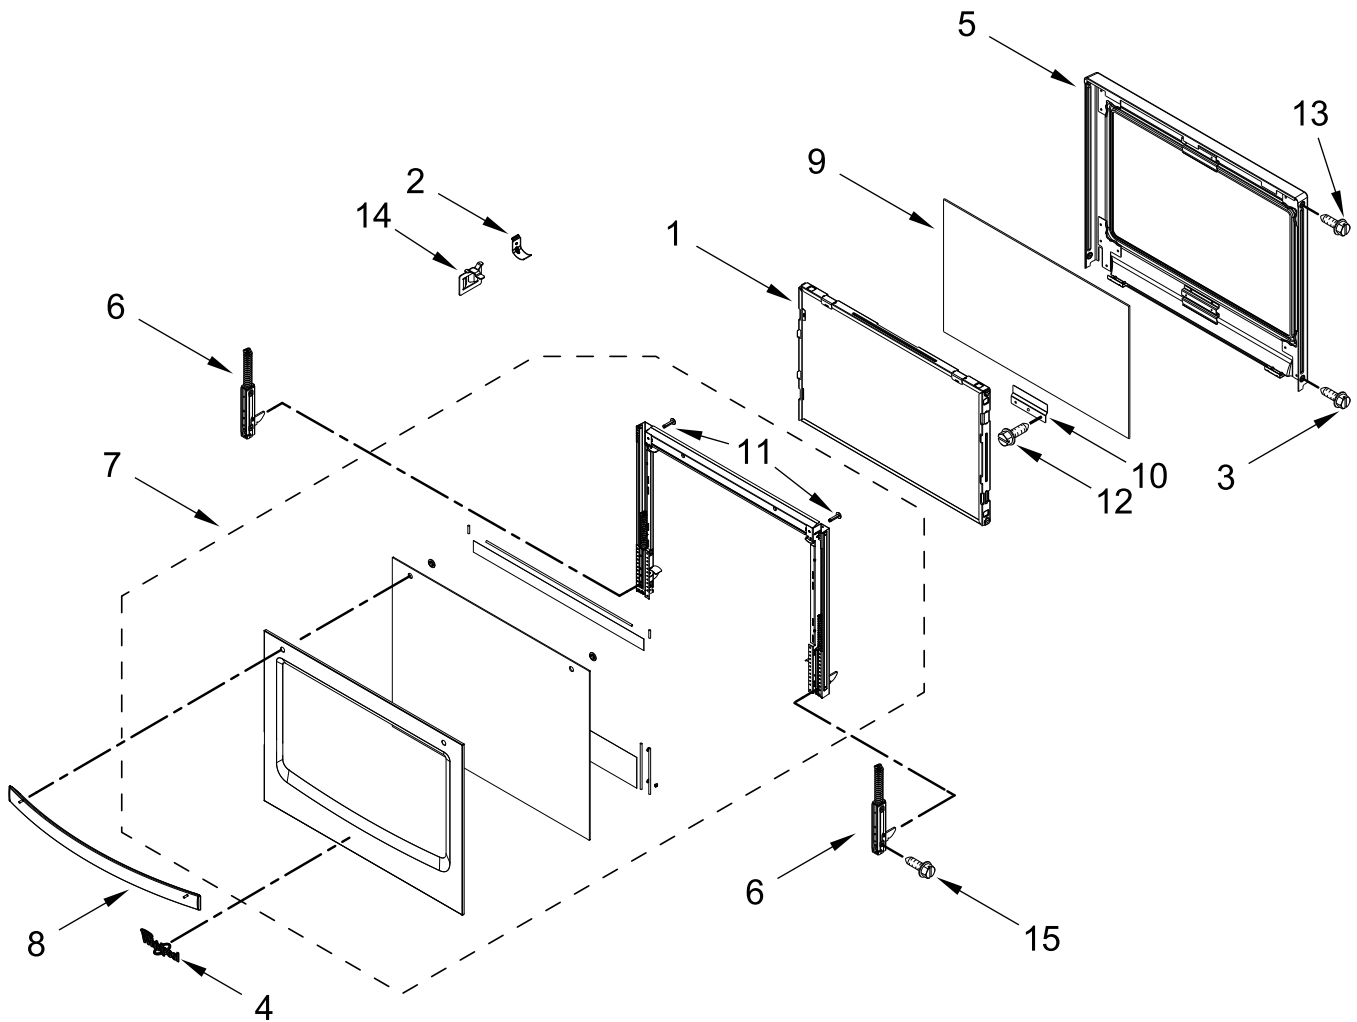




# LOWER OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10347596	Assembly, Window Pack	7		Assembly, Door Glass	9	W10618107	Glass, Inner
				W10866266	Black	10	W10284297	Bracket, Glass
2	W10284285	Spring, Door Glass Fixation		W10866267	White	11	W10480830	Screw
				W10866265	Stainless	12	7101P426-60	Screw
3	7101P635-60	Screw (Black)	8		Assembly, Door Handle	13	7101P653-60	Screw
4	W10884775	Nameplate		W11022638	Black	14	W10653954	Clip, Spring Metal
5	W10709147	Assembly, Liner		W11022639	White	15	3196183	Screw
6	W10639069	Hinge, Door		W10875206	Stainless			

# INTERNAL OVEN PARTS

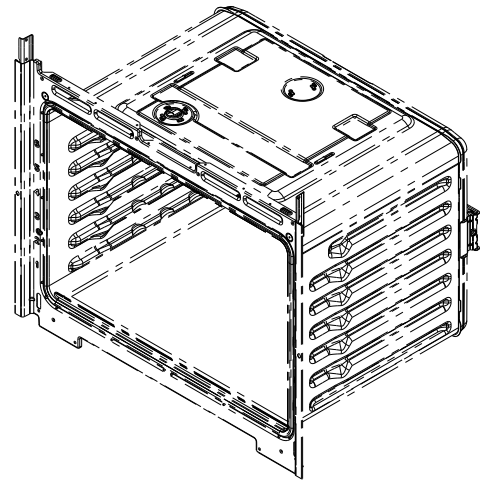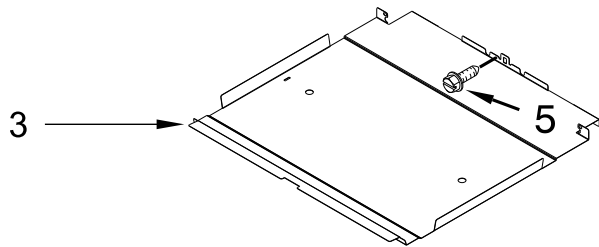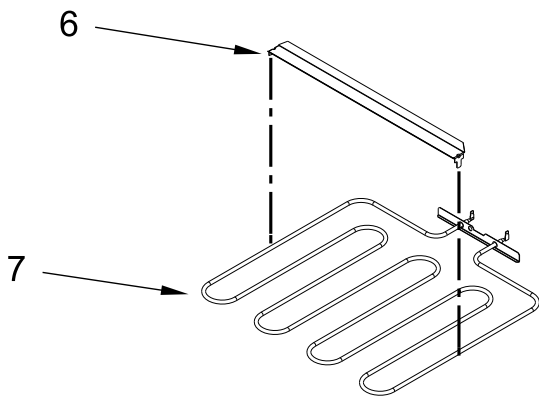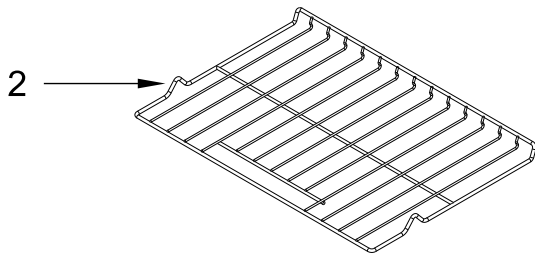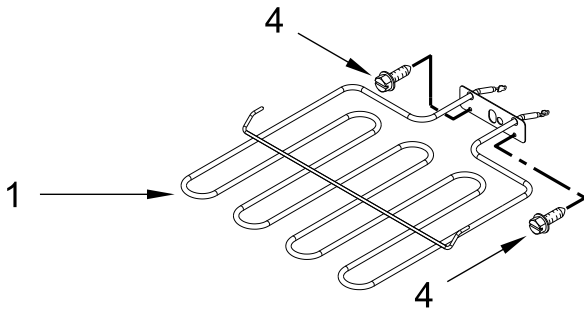

# INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10260252	Element, Broil	4	7101P434-60	Screw	6	W10282957	Crossbar, Hidden Bake Tray
2	W10317430	Rack, Oven	5	7101P426-60	Screw	7	W10546517	Element, Bake
3	W10318198	Tray, Hidden Bake						

# OPTIONAL PARTS (NOT INCLUDED)

## PAIN, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black

## PAIN, SPRAY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	261900	Citrine White
	830864	Black

## ADHESIVE

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	482338	Sealer, Silastic

## ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Grid, Broiler Pan and
	W10355016	Cleaner, Stainless Steel
	W10123240	Rack, Broiler Pan & Roasting
	W10275756	Cleaner, Granite
	W10355049	Wipes, Stainless Steel Cleaning
	W10745649	Rack, Sliding