




27" BUILT-IN ELECTRIC DOUBLE OVEN

MODELS:

WOD51EC7HB01 (Black)
WOD51EC7HW01 (White)
WOD51EC7HS01 (Stainless)


CONTROL PANEL PARTS

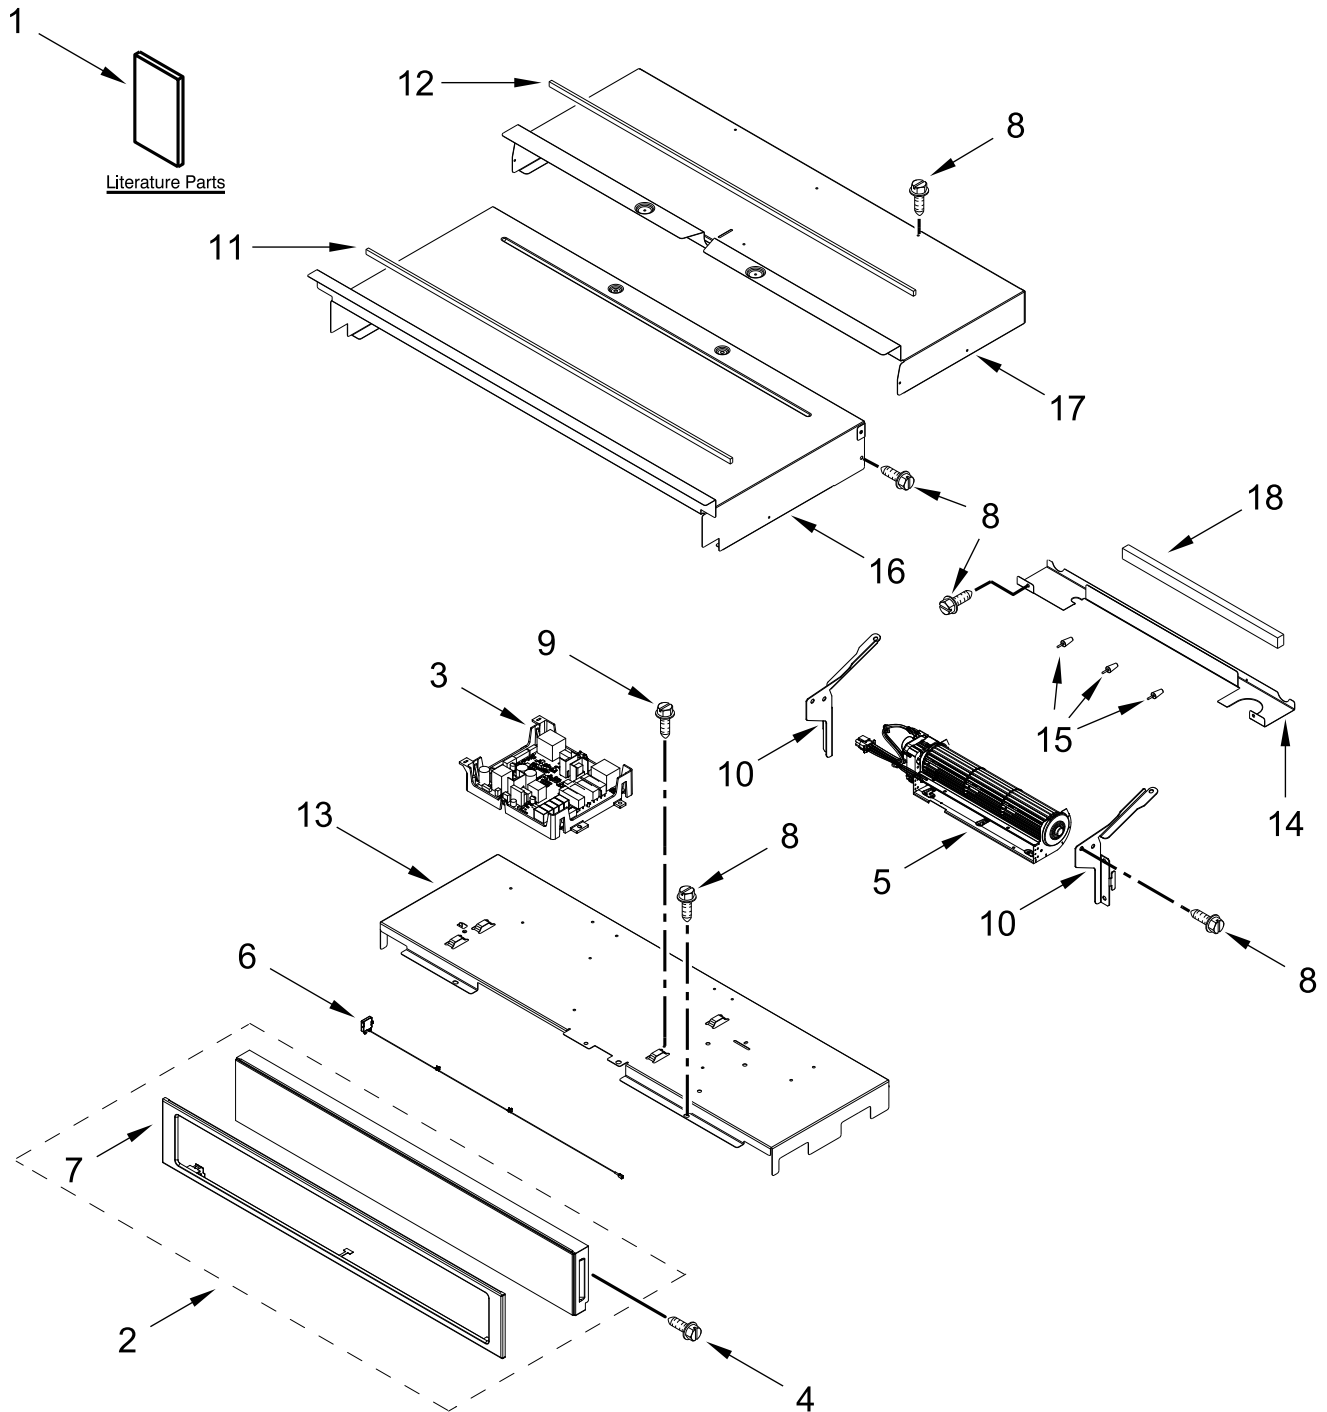

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W11200129	Blower	17	W10904157	Chassis, Cover Top Back 27"
	W11220321	Guide, Use & Care	6	W11234541	Antenna			
	W11129956	Instructions, Installation	7		Skin, Control Panel	18	4451758	Block, Foam
	W11097305	Guide, Internet Connectivity		W11026968	Black			FOLLOWING PARTS NOT ILLUSTRATED
	W11129945	Sheet, Tech		W11026967	White		W11225364	Harness, Main
	W11129950	Diagram, Wiring		W10899876	Stainless		W11225365	Harness, Signal
2		Assembly, Control Panel (Includes Overlay)	8	7101P426-60	Screw		W11132989	Harness, Door Latch
	W11105006	Black	9	7101P434-60	Screw		W10562910	Harness, EOL
	W11105010	White	10	W10655463	Bracket, Blower (Left)		W11177679	Harness, TOD Jumper
	W11105008	Stainless		W10655462	Bracket, Blower (Right)		W11233570	Harness, Console
3	W11253187	Appliance Manager, Copernicus	11	W11162062	Gasket, Rubber		4448664	Clamp, Conduit
	W11253188	Manager, Appliance (Without Power Supply)	12	W10728475	Gasket, Rubber		W10655464	Bracket, Harness
4	7101P427-60	Screw	13	W10864102	Tray, Electronic		313438	Clip, Harness
			14	W10655465	Chassis, Back Divider		4450800	Screw, Grounding
			15	W10351295	Bumper		W10487999	Clip, Harness
			16	W10318193	Chassis, Cover Top Front 27"		W10431304	Bag, Hardware


OVEN PARTS

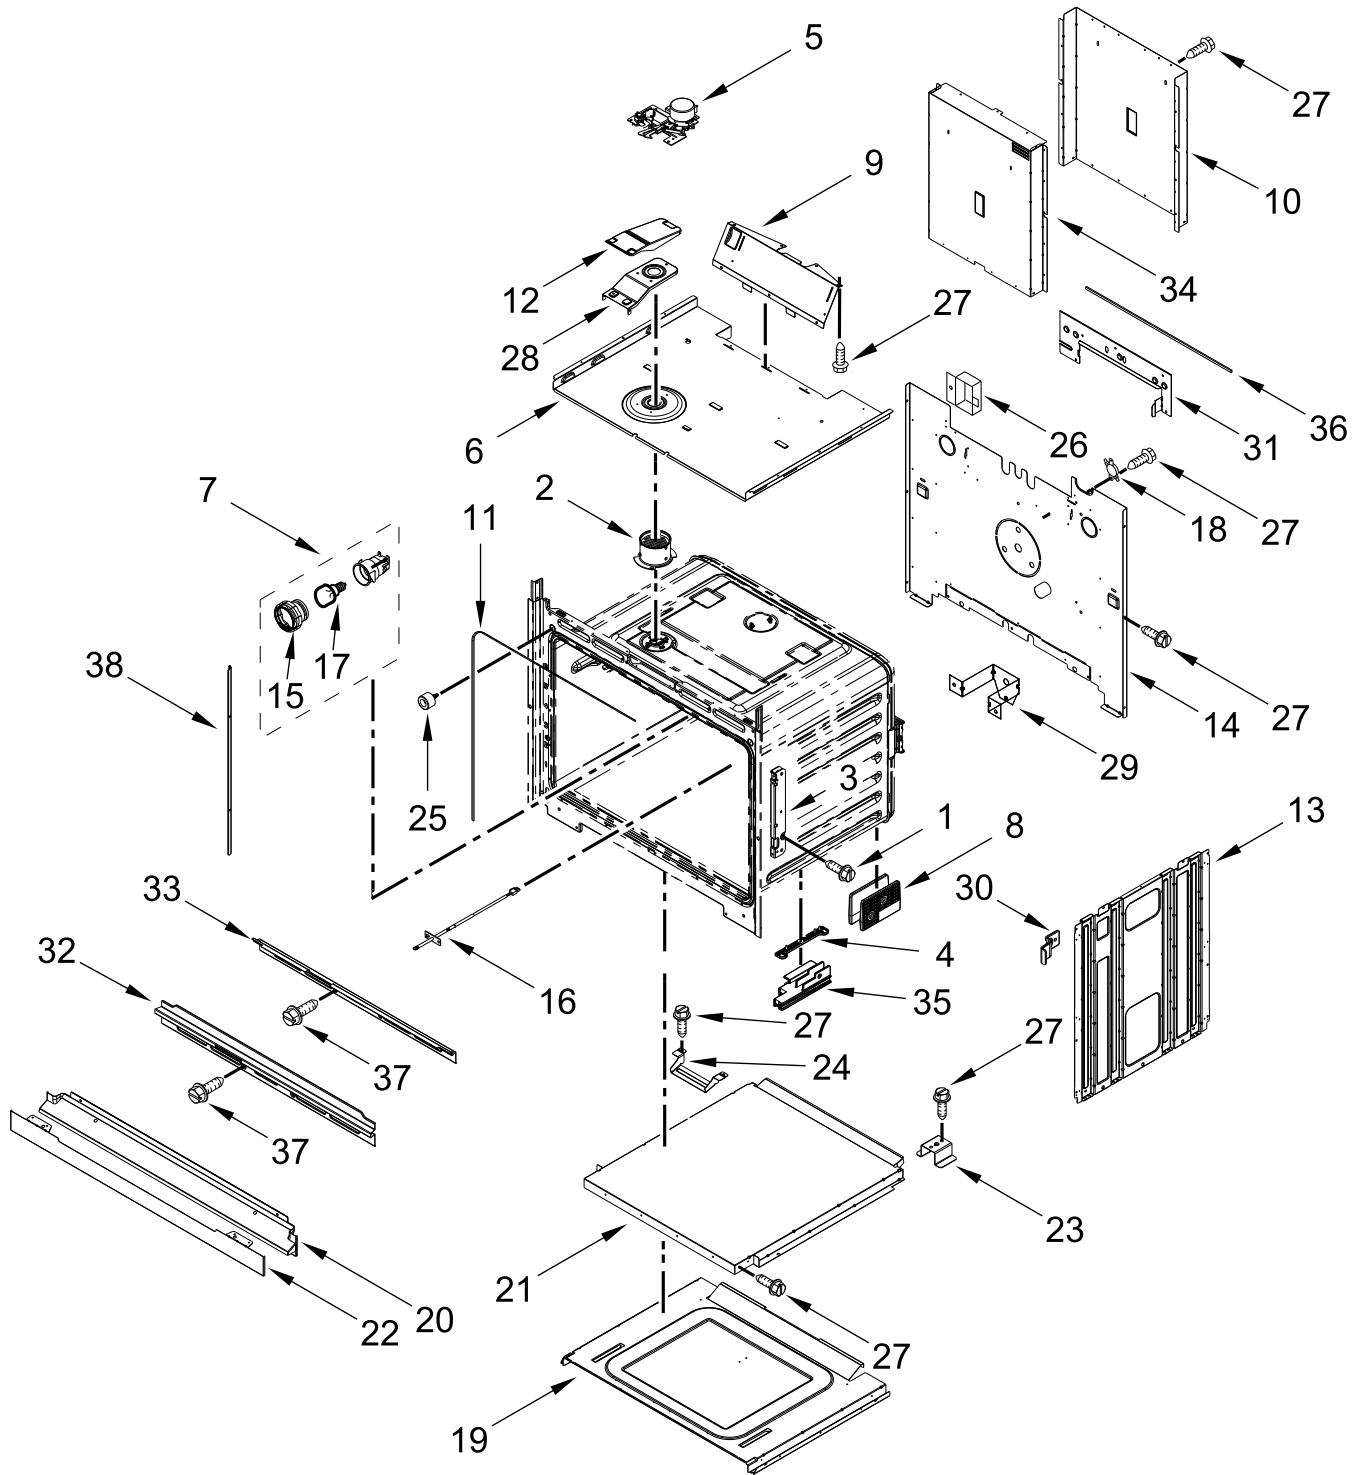

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10254050	Screw	19	W10282901	Base, Chassis	30	W10347649	Spacers, Front
2	W11085298	Tube, Vent	20		Assembly, Bottom Vent	31	W10904155	Bracket, U-Shape
3	W10616802	Receiver, Hinge		W10327375	Black	32	W10730176	Vent, Center 27"
4	W10618102	Spacer, Base		W10506345	White	33	W10283037	Vent, Top 27"
5	W10618131	Latch, Motorized		W10351280	Stainless	34	W10318196	Duct, Chassis Back
6	W10904159	Chassis, Top	21	W10283008	Chassis, Bottom Duct			(Upper)
7	W10734063	Assembly, Light	22		Trim, Bottom Vent	35	W10618103	Foot, Front (Left)
8	W10618101	Foot, Base		W10351237	Black		W10618104	Foot, Front (Right)
9	W10904163	Deflector, Blower		W10504025	White	36	W10728475	Gasket, Rubber
10	W10542857	Duct, Chassis Back (Lower)		W10327378	Stainless	37	7101P427-60	Screw
11	W10282961	Gasket	23	W10213759	Support, Air Channel	38	W10327369	Cover, Side Trim (Left)
12	W10616810	Cover, Vent Exhaust	24	W10351308	Spacer, Chassis Bottom Duct		W10327368	Cover, Side Trim (Right)
13	W10318190	Side, Chassis	25	W10351278	Bumper & Screw			FOLLOWING PARTS NOT ILLUSTRATED
14	W10904162	Back, Chassis	26	8285593	Cover, Connector		W10520716	Insulation, Wrap
15	W10412722	Lens, Light	27	7101P426-60	Screw		W10282945	Insulation, Back
16	W10622170	Probe, Sensor	28	W10616809	Base, Vent Exhaust			
17	W10412711	Bulb, Light	29	W11027314	Hat Bracket, Vent			
18	4449751	Thermostat (TOD)						


UPPER OVEN DOOR PARTS

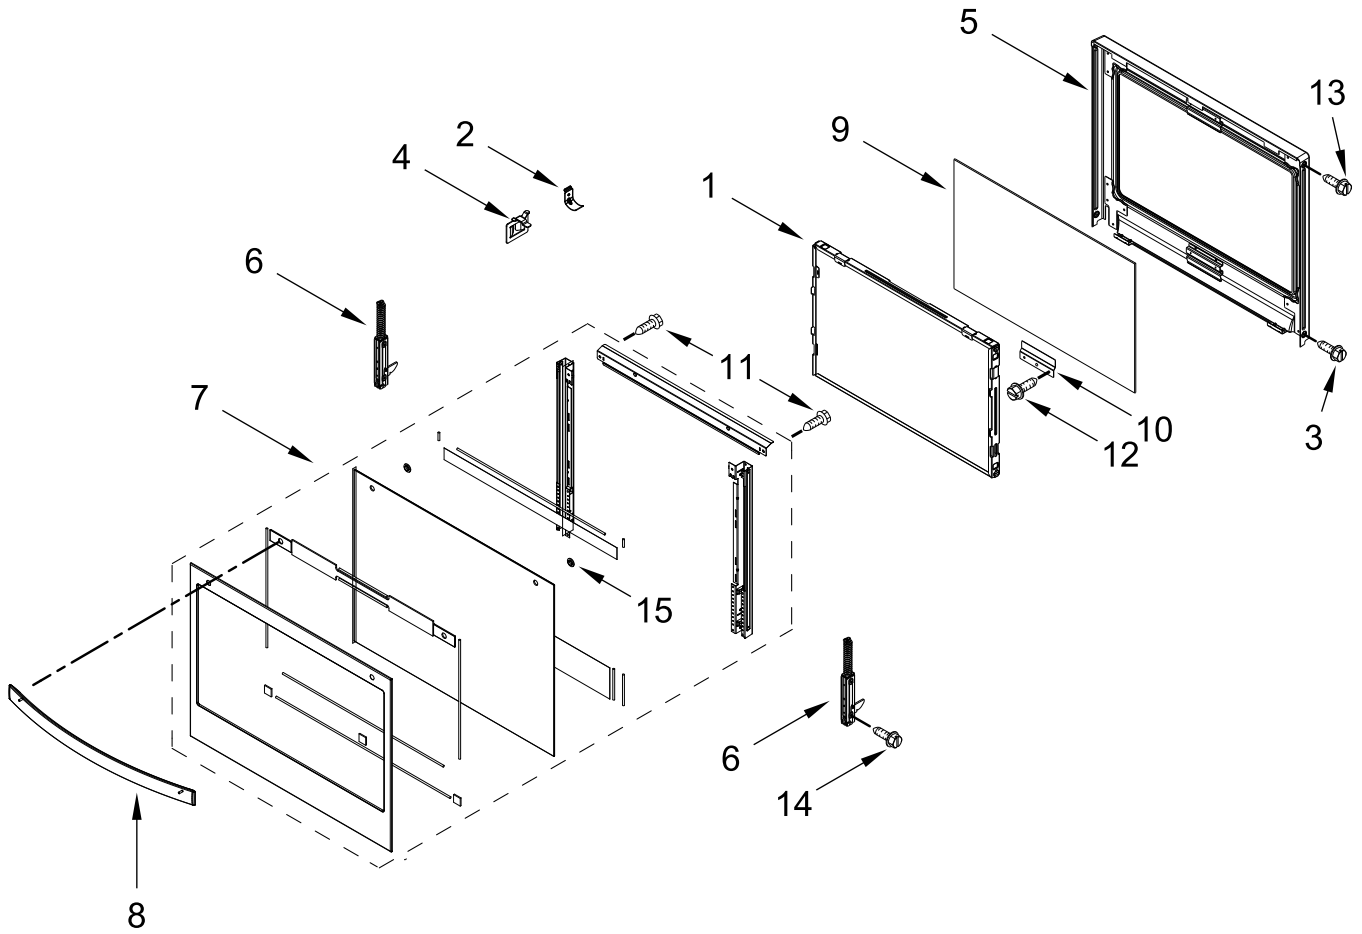

UPPER OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10347597	Assembly, Window Pack	7		Assembly, Door Glass	9	W10678525	Glass, Inner
2	W10284285	Spring, Door Glass Fixation		W10866269	Black	10	W10284297	Bracket, Glass
3	7101P635-60	Screw (Black)		W10866270	White	11	W10480830	Screw
4	W10653954	Clip, Spring Metal		W10866268	Stainless	12	7101P426-60	Screw
5	W10320793	Assembly, Liner	8		Assembly, Door Handle	13	7101P653-60	Screw
6	W10639067	Hinge, Door		W11022641	Black	14	3196183	Screw
				W11022642	White	15	W10319024	Washer, Door
				W10880280	Stainless			


LOWER OVEN DOOR PARTS

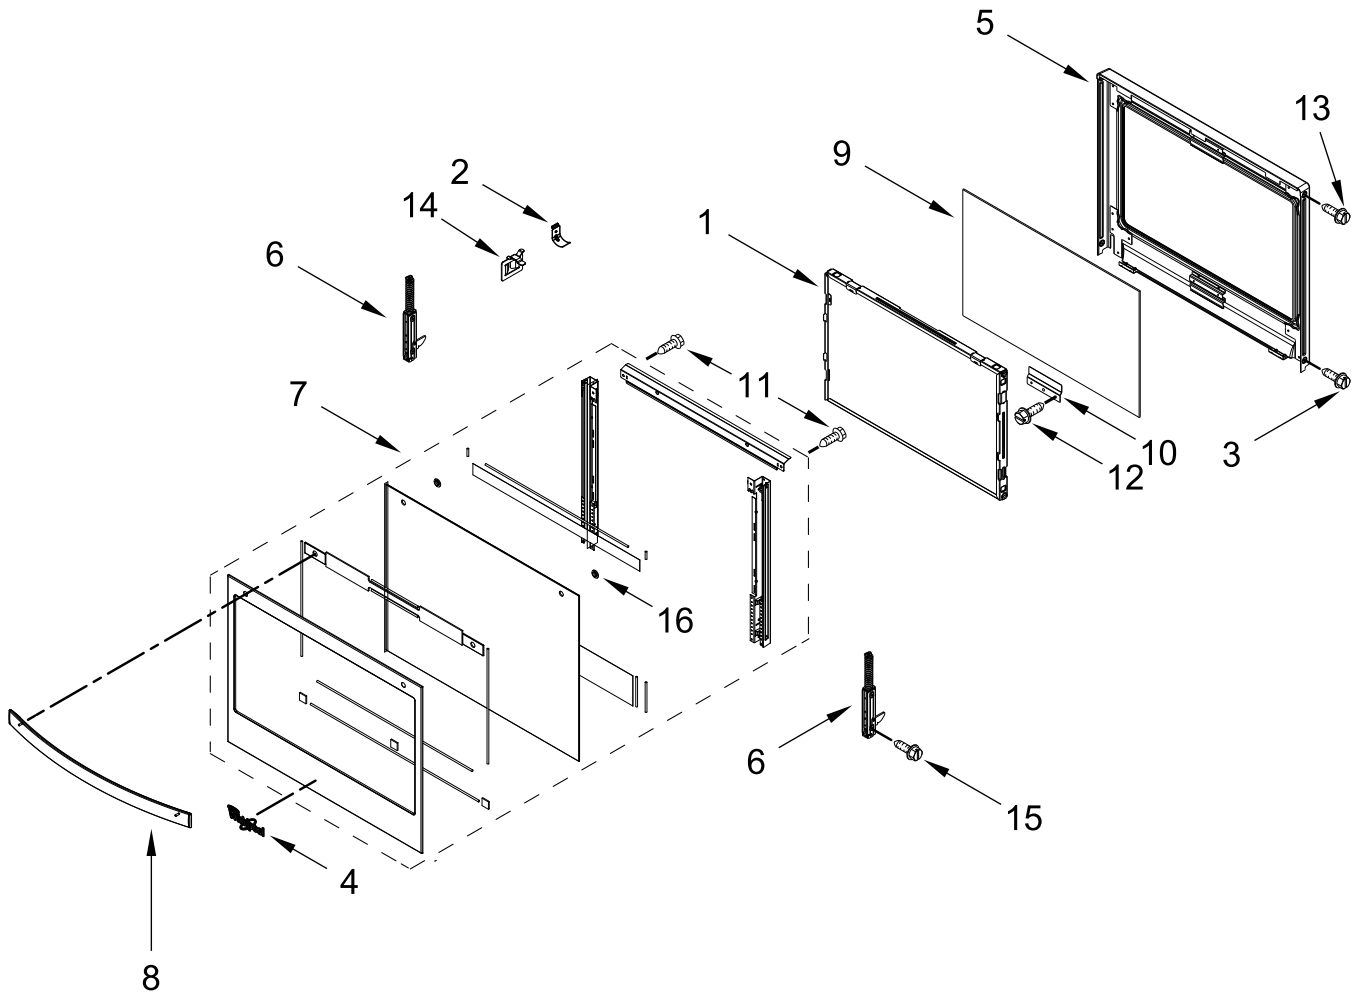

LOWER OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10347597	Assembly, Window Pack	7		Assembly, Door Glass	9	W10678525	Glass, Inner
2	W10284285	Spring, Door Glass Fixation		W10866269	Black	10	W10284297	Bracket, Glass
3	7101P635-60	Screw (Black)		W10866270	White	11	W10480830	Screw
4	W10884775	Nameplate		W10866268	Stainless	12	7101P426-60	Screw
5	W10320793	Assembly, Liner	8		Assembly, Door Handle	13	7101P653-60	Screw
6	W10639067	Hinge, Door		W11022641	Black	14	W10653954	Clip, Spring Metal
				W11022642	White	15	3196183	Screw
				W10880280	Stainless	16	W10319024	Washer, Door

INTERNAL OVEN PARTS

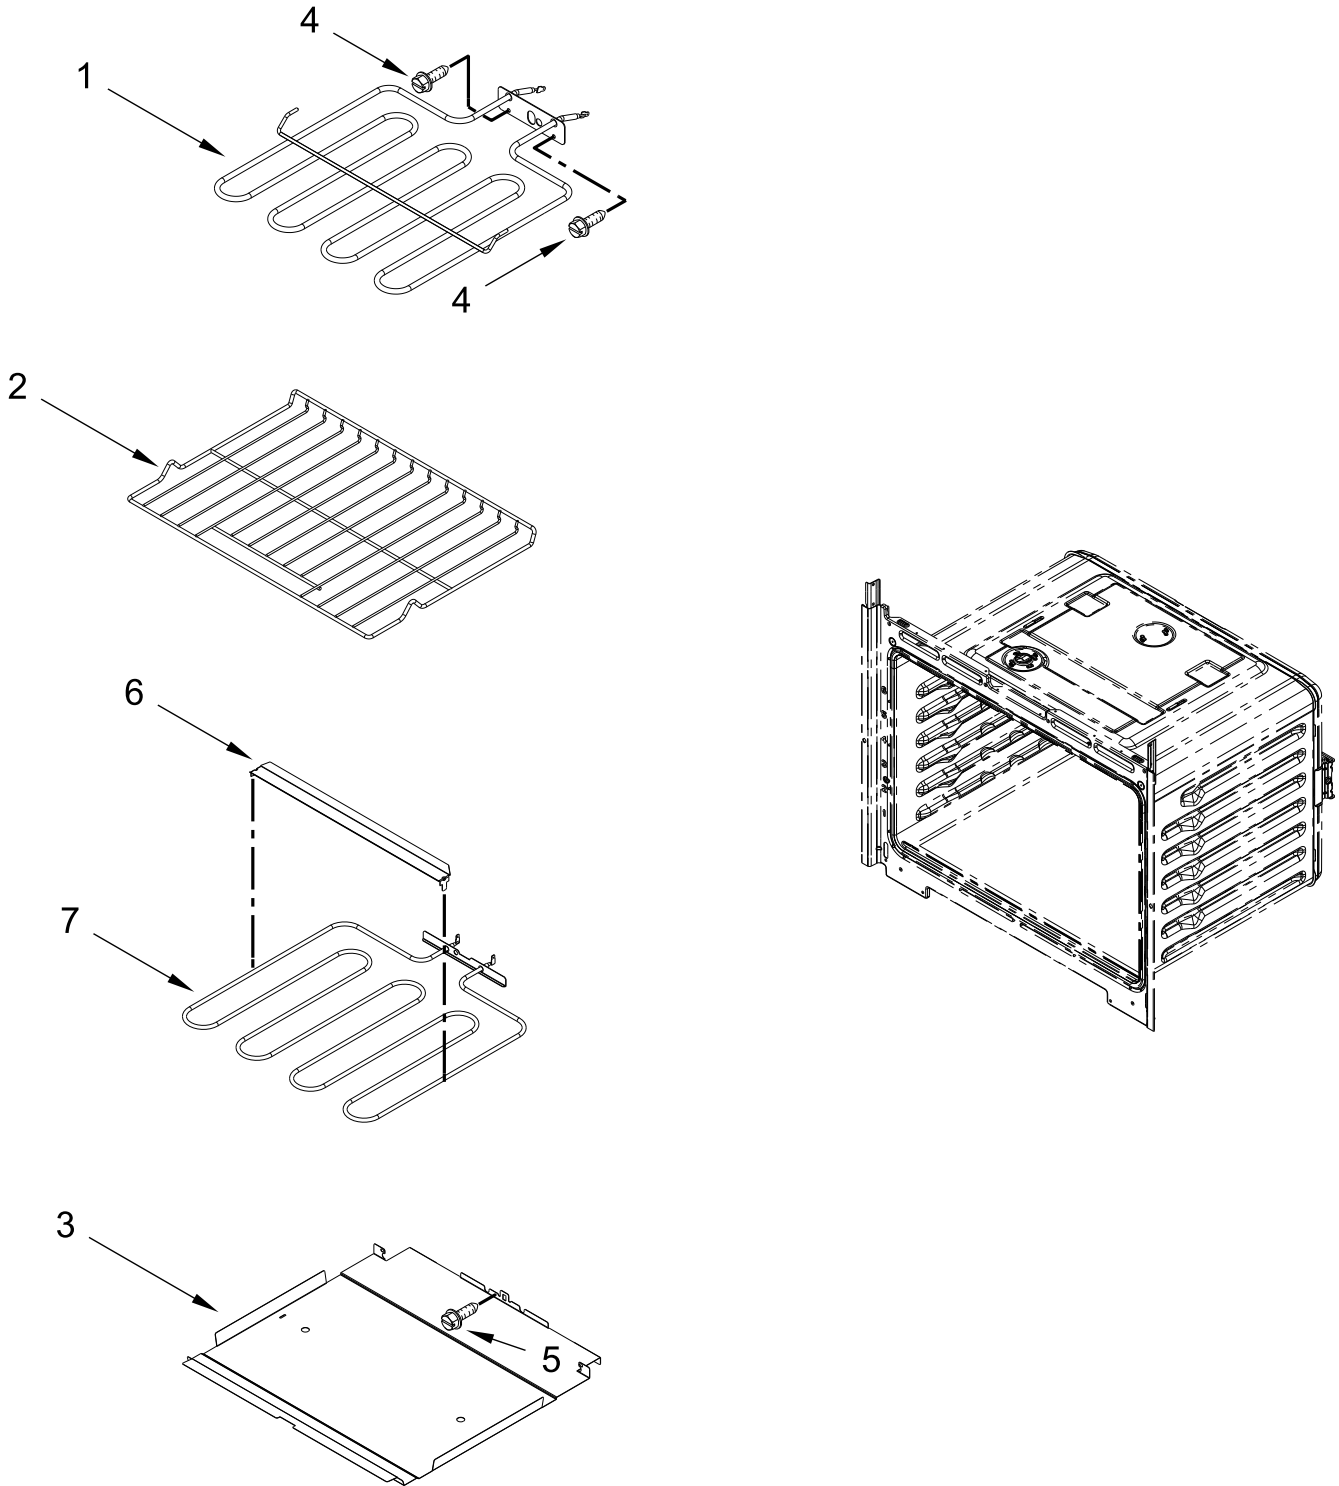

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10260252	Element, Broil	4	7101P434-60	Screw	6	W10282957	Crossbar, Hidden Bake Tray
2	W10317431	Rack, Oven	5	7101P426-60	Screw	7	W10546517	Element, Bake
3	W10318198	Tray, Hidden Bake						

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black

PAINT, SPRAY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	261900	Citrine White
	830864	Black

ADHESIVE

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	482338	Sealer, Silastic

ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Grid, Broiler Pan and
	W10355016	Cleaner, Stainless Steel
	W10123240	Rack, Broiler Pan & Roasting
	W10275756	Cleaner, Granite
	W10355049	Wipes, Stainless Steel Cleaning
	W10745649	Rack, Sliding