




30" BUILT-IN ELECTRIC COMBINATION MICROWAVE WALL OVEN

MODELS:

WOC54EC0HB00 (Black)
WOC54EC0HW00 (White)
WOC54EC0HS00 (Stainless)


CONTROL PANEL PARTS

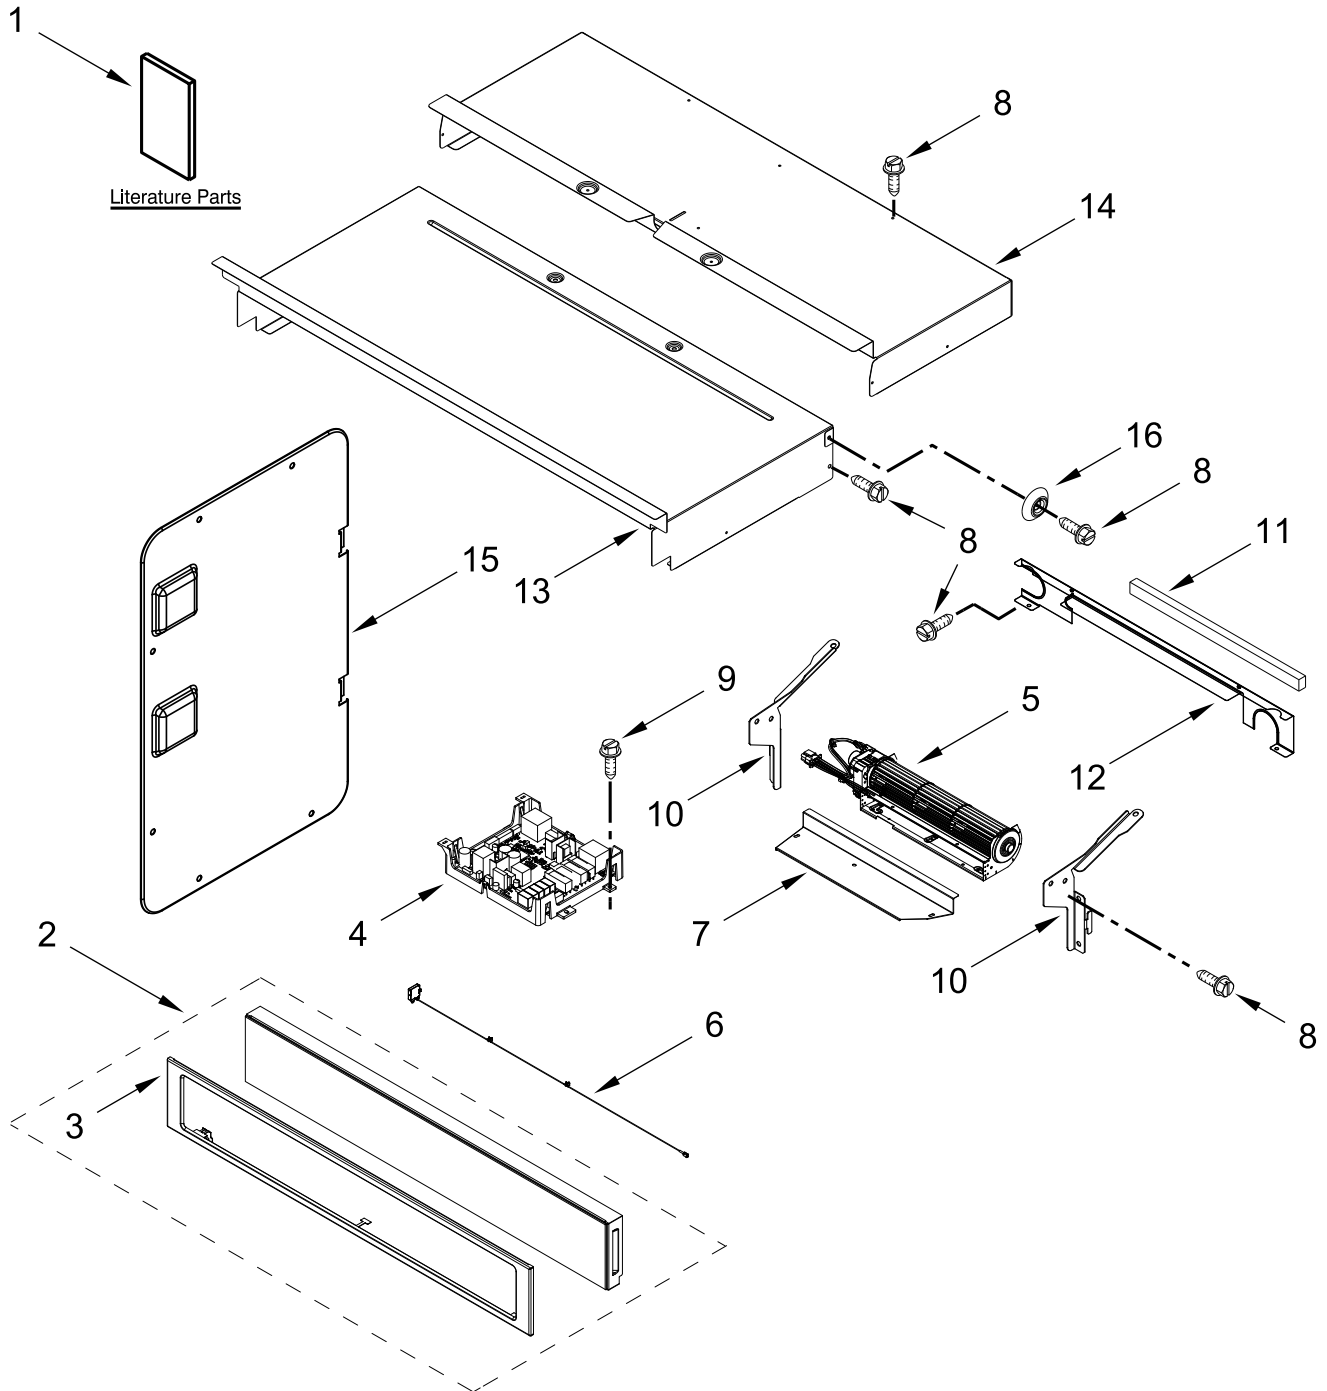

CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	
1		Literature Parts	4	W11040197	Manager, Appliance (With Power Supply)	16	W10618105	Spacer, Lateral	
	W11129957	Instructions, Installation	5	W10850518	Blower				FOLLOWING PARTS NOT ILLUSTRATED
	W11108507	Guide, Use & Care (Oven)	6	W11044576	Antenna			W10881998	Harness, Main
	W11108508	Guide, Use & Care (Microwave Oven)	7	W10681157	Cover, Combo Blower			W10874059	Harness, Fan & Turntable
	W11129946	Sheet, Tech	8	7101P426-60	Screw			W10874060	Harness, Inverter
	W11097305	Guide, Internet Connectivity	9	7101P434-60	Screw			W10709980	Harness, Solo GM
2		Assembly, Control Panel (Includes Overlay)	10	W10655463	Bracket, Blower (Left)		W10834515	Harness, Communication	
	W11105017	Black		W10655462	Bracket, Blower (Right)		W10775068	Harness, Door Latch	
	W11105018	White	11	W10728475	Gasket, Rubber		W10889134	Harness, Cable Tree Assembly	
	W11105016	Stainless	12	W10655465	Chassis, Back Divider		W10887126	Harness, Ground Console Combo	
		Skin, Control Panel	13	W10318158	Chassis, Cover Top Front 30"		313438	Clip, Harness	
3			14	W10588732	Chassis, Cover Top Back 30"		4450800	Screw, Grounding	
	W11026970	Black	15	W10655467	Chassis, Combo Side		4448664	Clamp, Conduit	
	W11026969	White							
	W10899877	Stainless							


OVEN PARTS

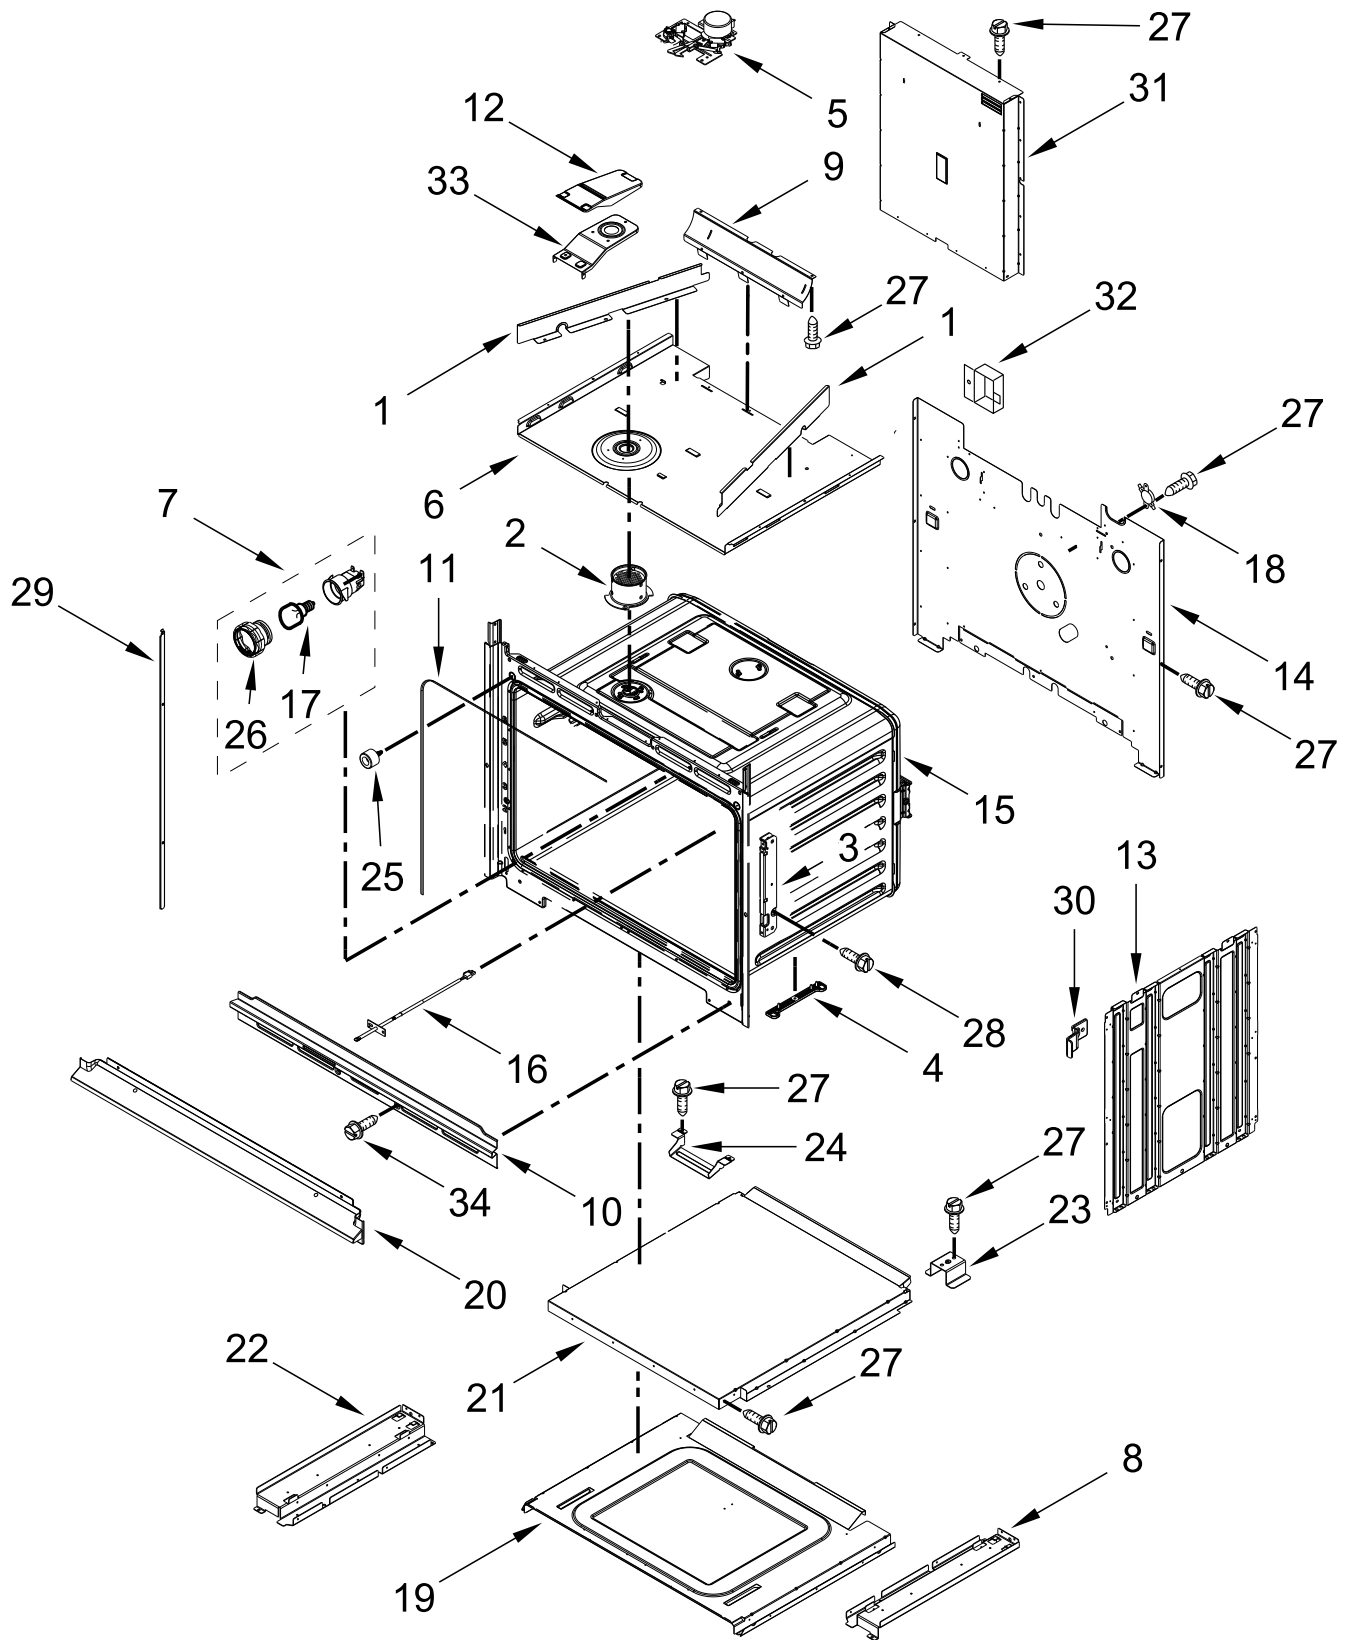

OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10681156	Deflector, Chassis	16	W10622170	Probe, Sensor	27	7101P426-60	Screw
2	W10282946	Tube, Vent	17	W10412711	Bulb, Light	28	W10254050	Screw
3	W10616802	Receiver, Hinge	18	4449751	Thermostat (TOD)	29		Trim, Side
4	W10618102	Spacer, Base	19	W10834867	Base, Chassis		W10344483	Black (Left)
5	W10618131	Latch, Motorized	20		Assembly, Bottom Vent		W10344482	Black (Right)
6	W10904158	Top, Chassis		W10327373	Black	30	W10347649	Spacers, Front
7	W10734063	Assembly, Light		W10506344	White	31	W10519707	Cover, Back Duct
8	W10283021	Support, Base (Right)		W10351279	Stainless	32	8285593	Cover, Connector
9	W10904163	Deflector, Blower	21	W10283008	Chassis, Bottom Duct	33	W10616809	Base, Vent Exhaust
10	W10495154	Vent, Center 30"	22	W10283020	Support, Base (Left)	34	W10607120	Screw
11	W10282960	Gasket						FOLLOWING PARTS NOT ILLUSTRATED
12	W10616810	Cover, Vent Exhaust	23	W10213759	Support, Air Channel		W10282944	Insulation, Cavity
13	W10318190	Side, Chassis	24	W10351308	Spacer, Chassis Bottom Duct		W10520715	Insulation, Wrap
14	W10904160	Back, Chassis	25	W10351278	Bumper & Screw		W10431303	Bag, Hardware
15		Liner, Oven (Not Serviceable)	26	W10412722	Lens, Light			



OVEN DOOR PARTS

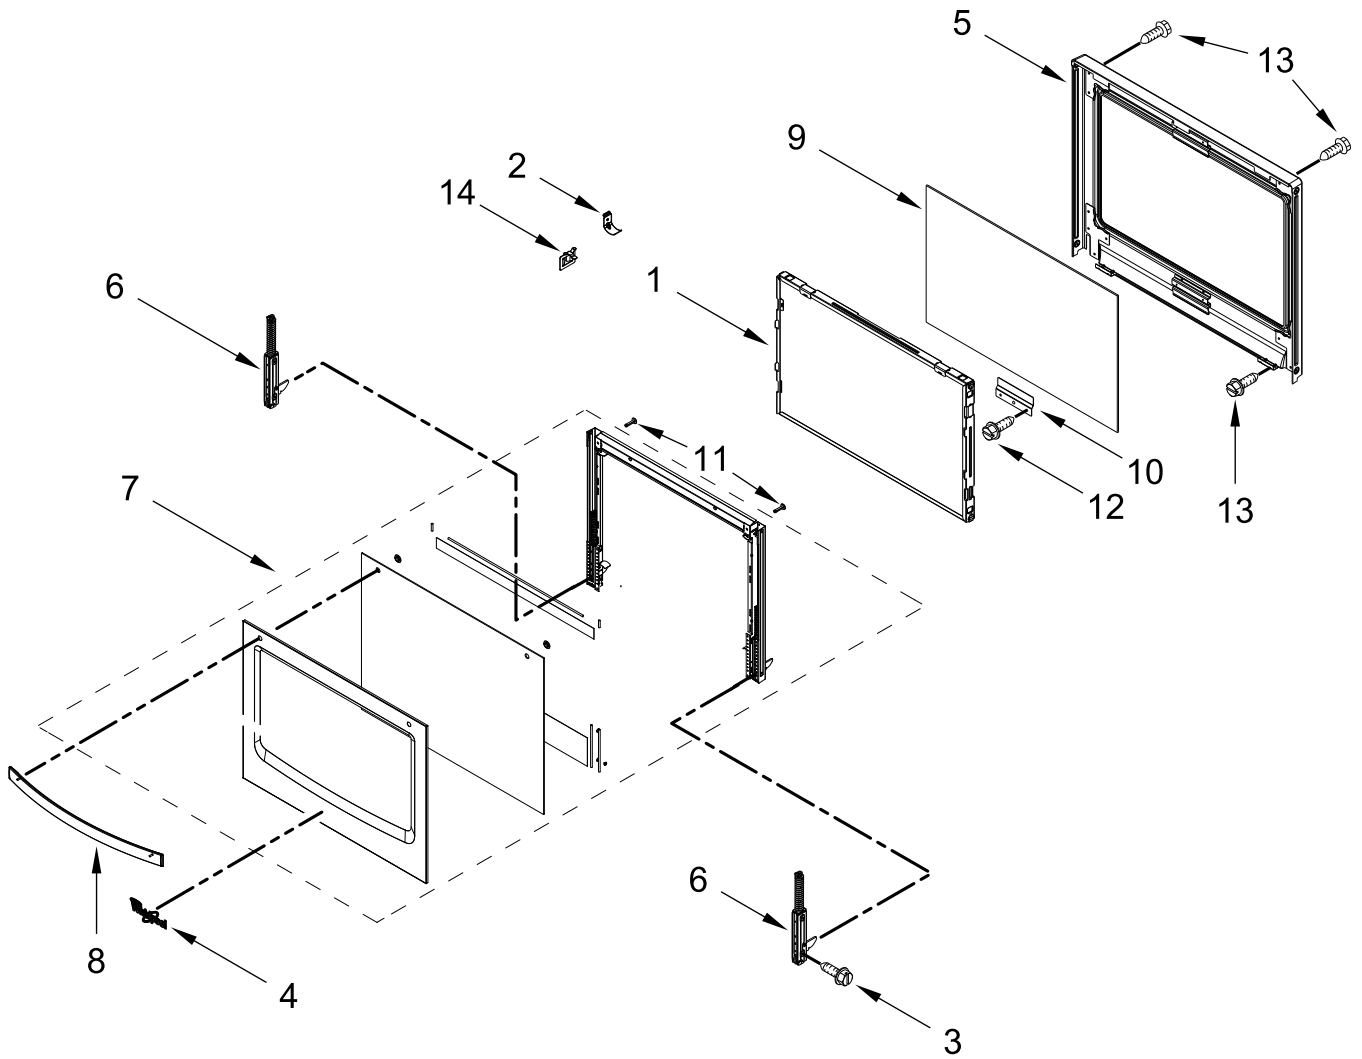

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10347596	Assembly, Window Pack	7		Assembly, Door	9	W10618107	Glass, Inner
				W10866266	Black	10	W10284297	Bracket, Glass
2	W10284285	Spring, Door Glass Fixation		W10866267	White	11	W10480830	Screw
				W10866265	Stainless	12	7101P426-60	Screw
3	3196183	Screw	8		Handle, Door	13	7101P633-60	Screw (Black)
4	W10884775	Nameplate		W11022638	Black	14	W10653954	Clip, Spring Metal
5	W10709147	Assembly, Liner		W11022639	White			
6	W10639069	Hinge, Door		W10875206	Stainless			


INTERNAL OVEN PARTS

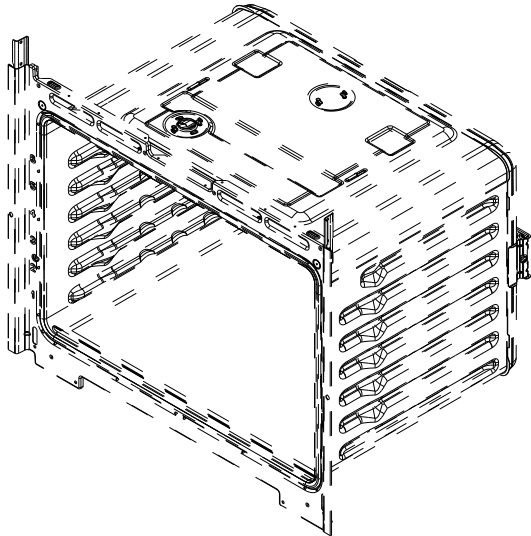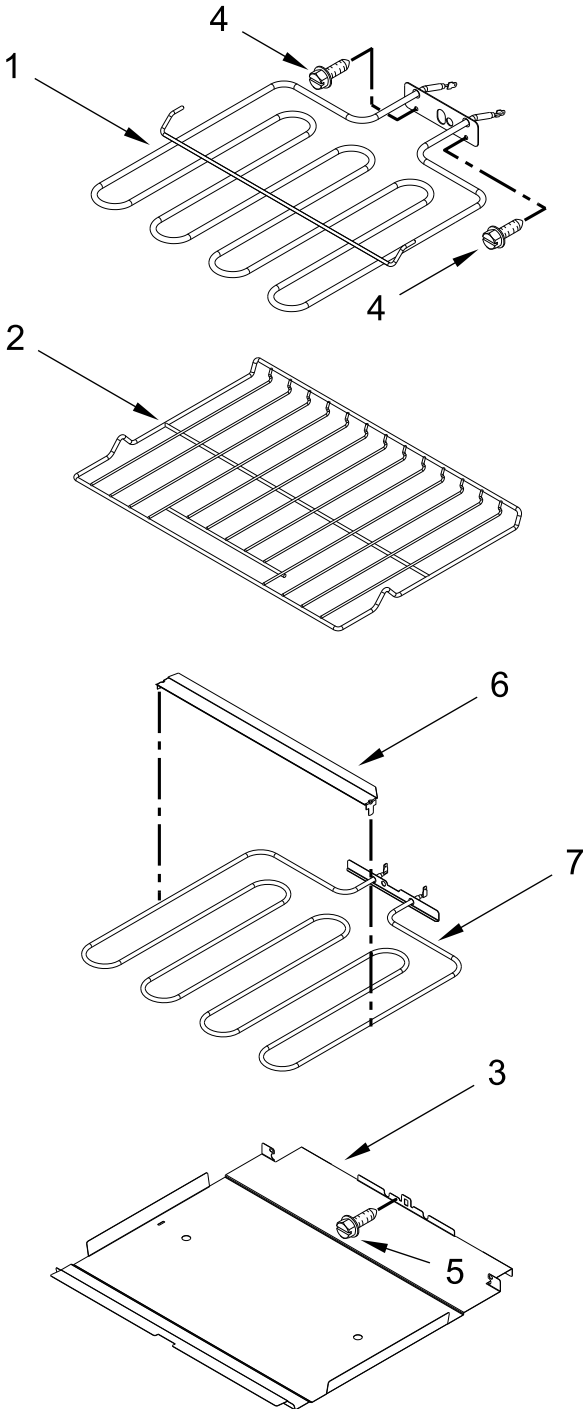

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10260252	Element, Broil	4	7101P434-60	Screw	6	W10282957	Crossbar, Hidden Bake Tray
2	W10317430	Rack, Oven	5	7101P426-60	Screw	7	W10546517	Element, Bake
3	W10318198	Tray, Hidden Bake						


MICROWAVE DOOR PARTS

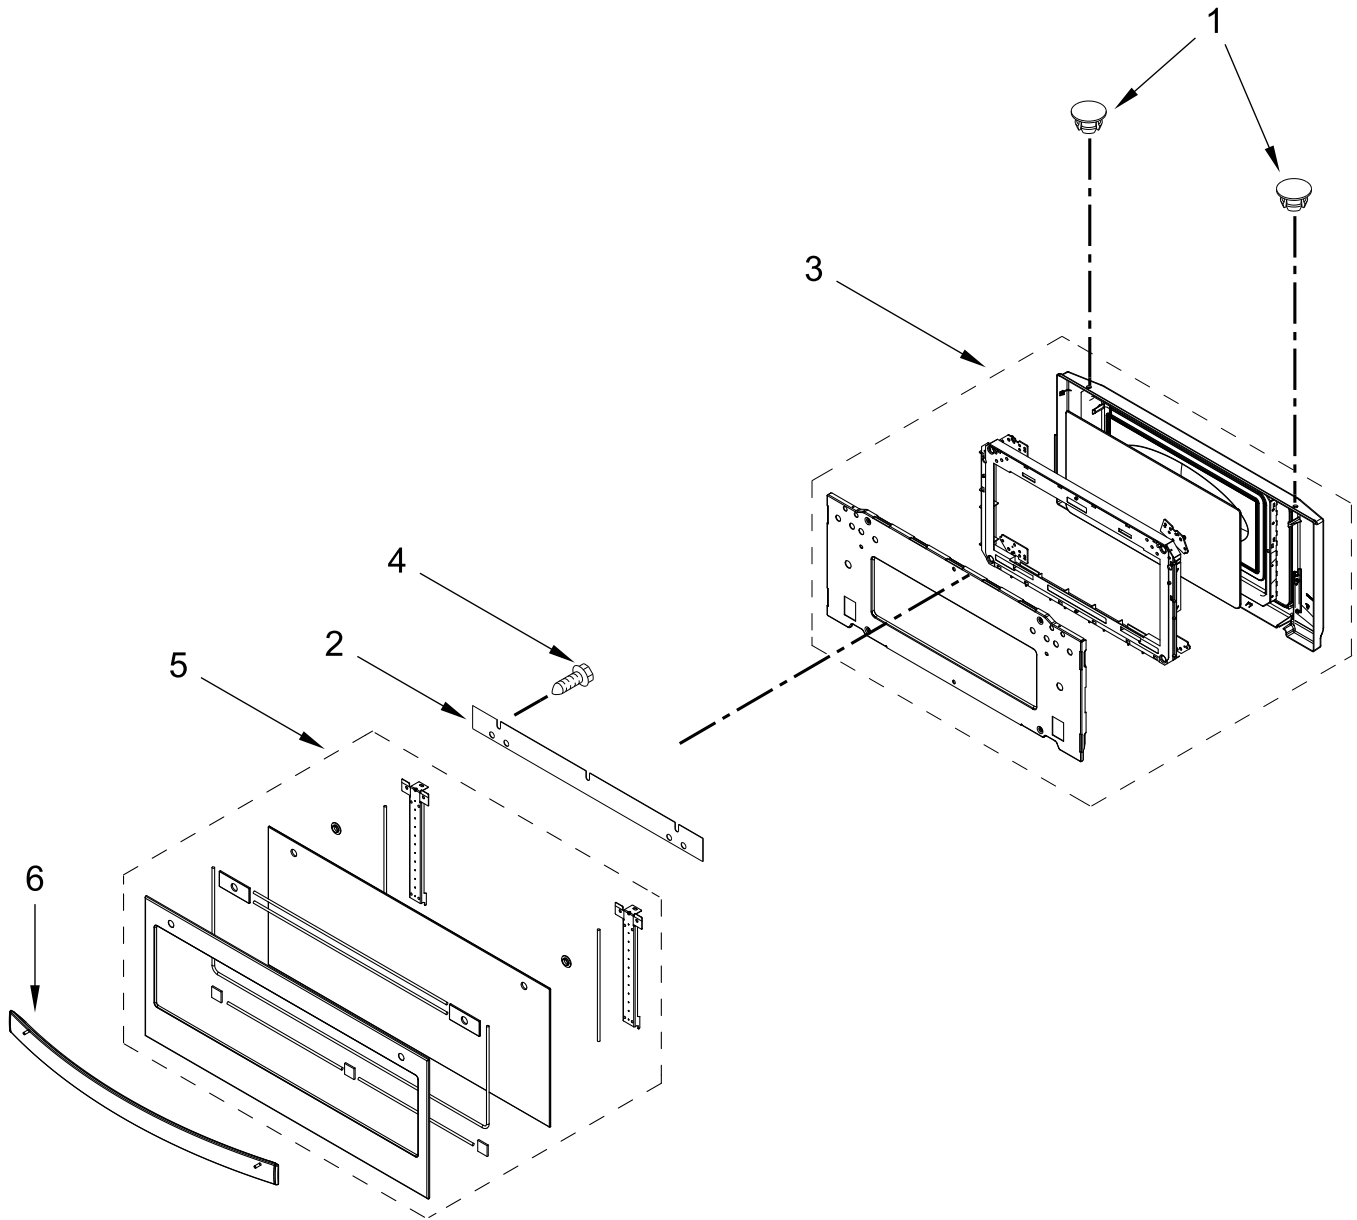

MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw	5		Assembly, Outer Door	6		Handle, Door
2	W10359769	Foam, Door Handle		W10866274	Black		W11022638	Black
3	W10687342	Assembly, Inner Door		W10866275	White		W11022639	White
4	W10480830	Screw		W10866273	Stainless		W10875206	Stainless


CABINET AND STIRRER PARTS

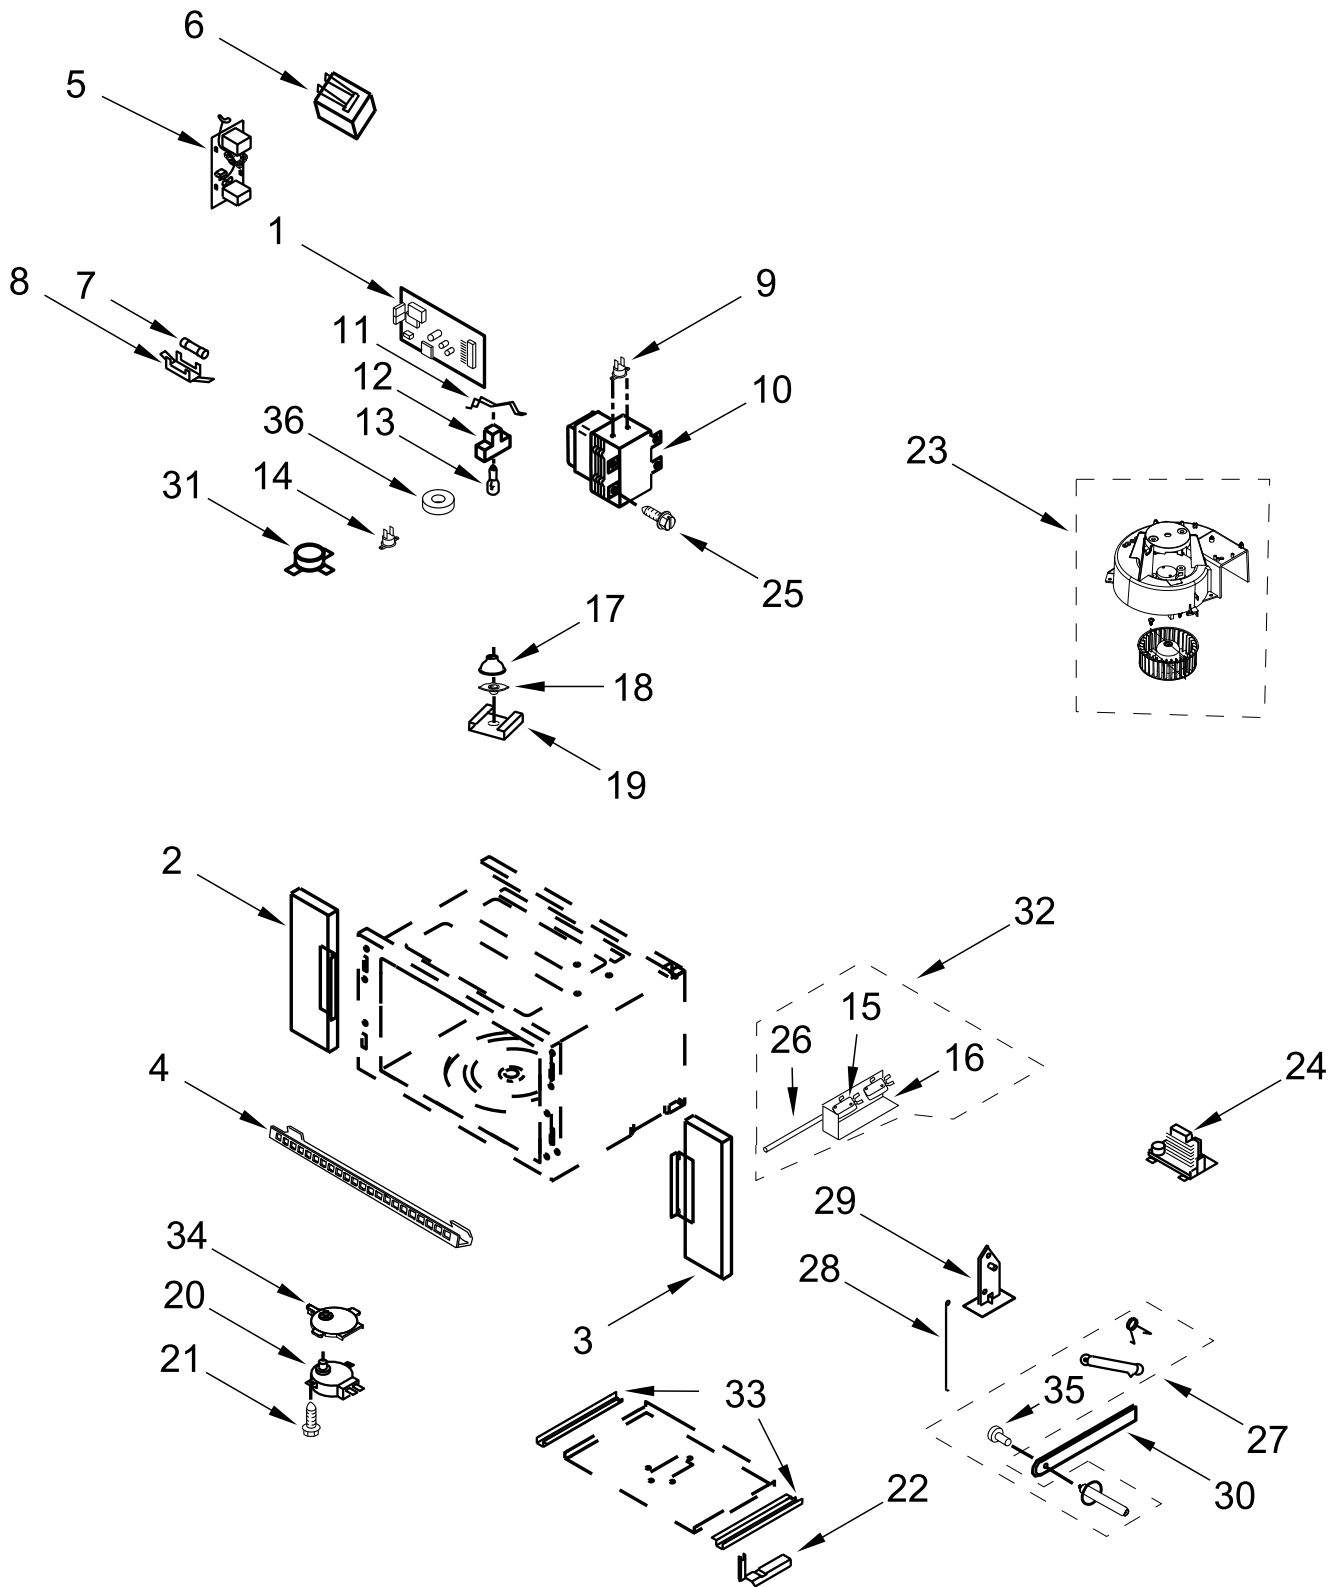

CABINET AND STIRRER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10913742	Control, Electric	14	W10389447	Thermostat	29	461967750494	Support
2	461967017491	Trim, Side (Left)	15	W10330566	Switch	30	461967750483	Arm, Sliding
3	461967017481	Trim, Side (Right)	16	8205683	Holder, Switch	31	W10460457	Sensor, Humidity
4	461968973241	Vent, Top Microwave	17	423107022541	Reflector	32	W10358241	Assembly, Interlock Switch
5	W10692851	Filter, Noise	18	423107720491	Lens, Lamp	33	461967008461	Support, Bottom
6	461967848621	Transformer, Light (20V)	19	461967010591	Clip, Spring	34	461967753742	Adapter, Turntable Motor
7	241908600053	Fuse	20	461967848971	Motor, Turntable	35	461967510191	Bushing
8	4375231	Block, Fuse	21	461967825321	Screw	36	W10769147	Sealing, Lamp
9	461967846741	Thermostat, Magnetron	22	46196897960	Hinge, Door			
10	461967847321	Magnetron	23	461968969271	Assembly, Cooling Fan			
11	W10465869	Spring, Lamp	24	W10468206	Inverter			
12	W10490593	Holder, Lamp	25	461967825971	Screw			
13	W10795595	Lamp, Halogen	26	W10120235	Rod, Release			
			27	W10128850	Assembly, Sliding Arm			
			28	461967570351	Spring, Torsion			


TOP VENTING PARTS

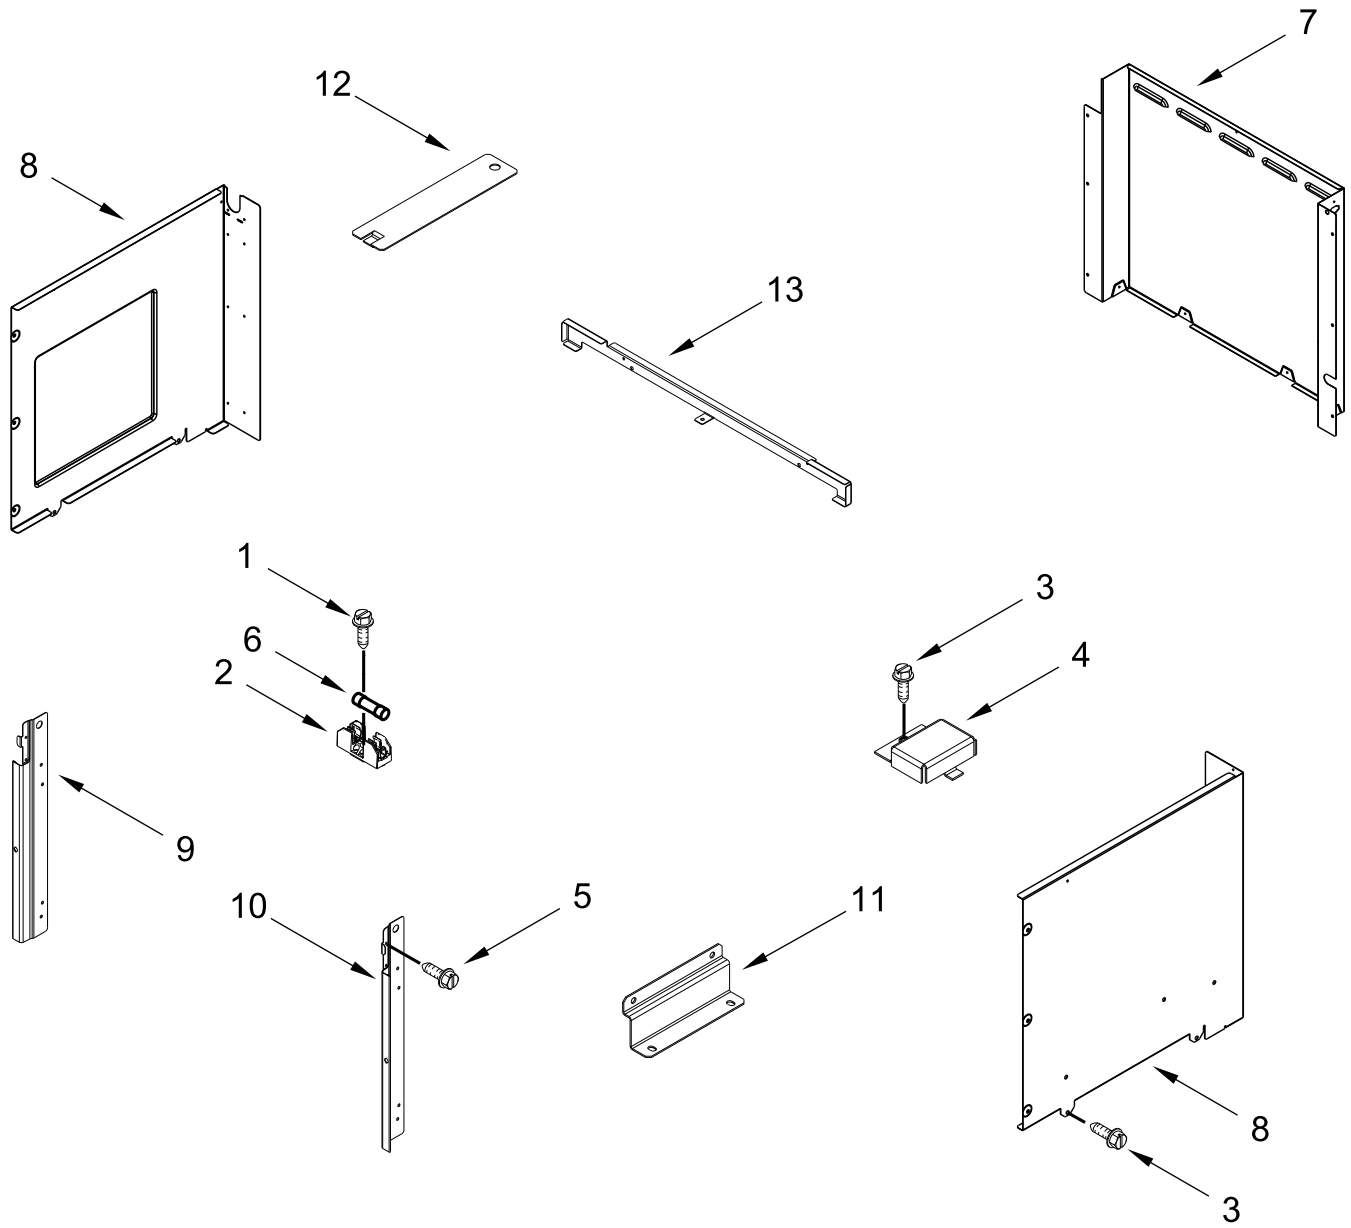

TOP VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	7101P060-60	Screw	7	W11037653	Cover, Combo Chassis Back Duct (With Hole)	9	W10360516	Rail, Side (Left)
2	4454949	Holder, Fuse				10	W10360518	Rail, Side (Right)
3	7101P426-60	Screw	8	W10655466	Chassis, Combo Side (Left)	11	W10283024	Side, Bracket
4	8285593	Cover, Connector		W11037649	Chassis, Combo Side (Right)	12	W10356437	Cover, Slot Module
5	7101P633-60	Screw (Black)				13	W10283022	Support, Crossbar
6	W10017410	Fuse, Time Delay						

INTERNAL MICROWAVE PARTS

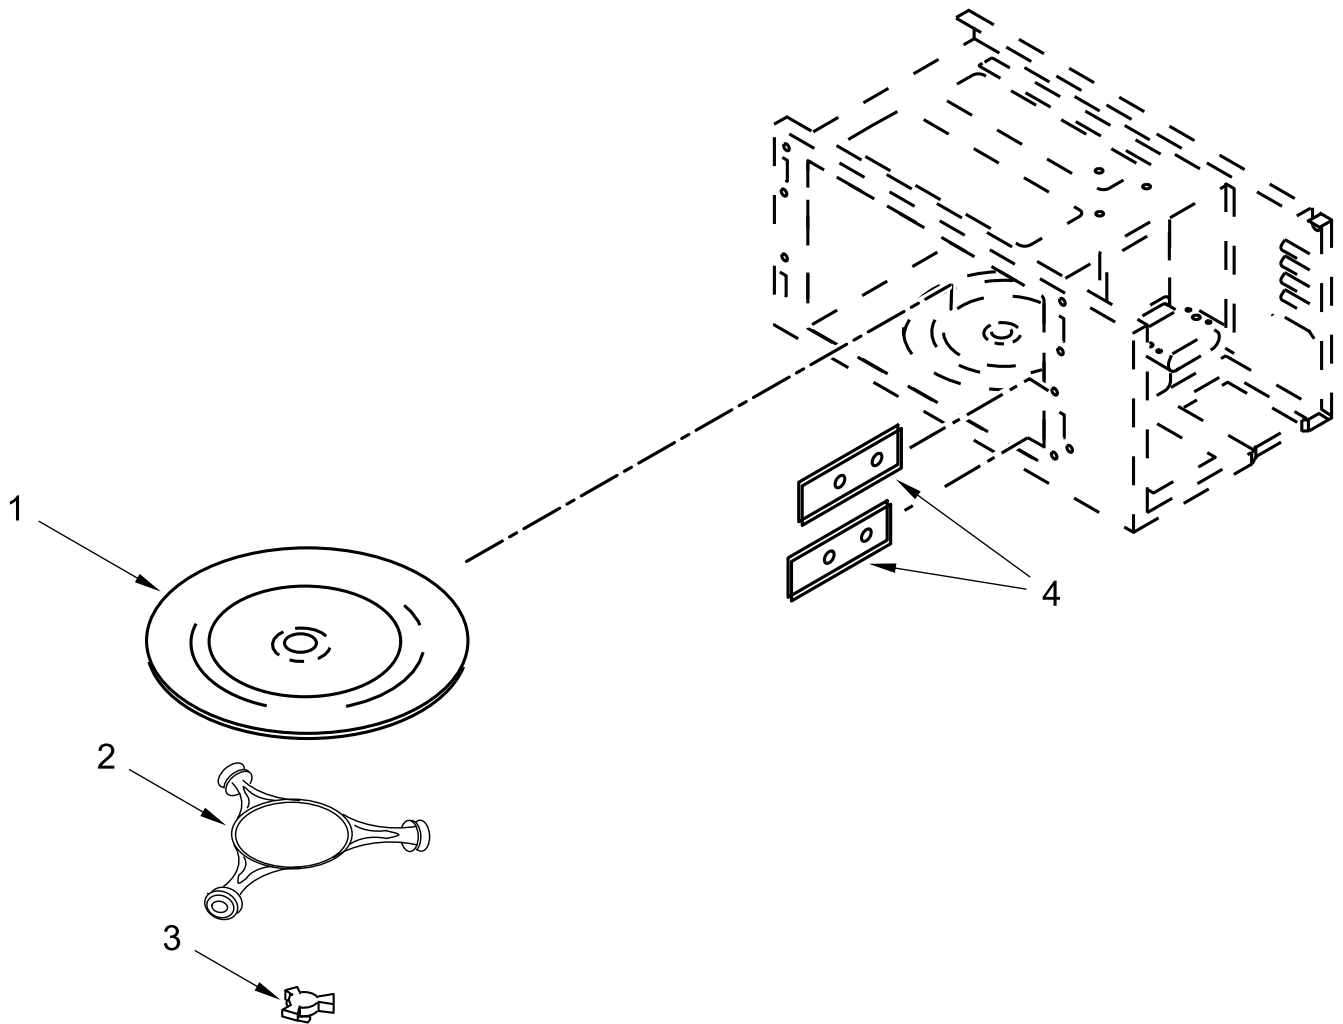

INTERNAL MICROWAVE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	461967720541	Tray, Cook
2	W10367316	Ring, Turntable

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10545578	Drive, Turntable
4	461967451001	Plate, Cover

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black

PAINT, SPRAY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	261900	Citrine White
	830864	Black

ADHESIVE

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	482338	Sealer, Silastic

MISCELLANEOUS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4448950	Screw, Door Installation