



RC-0001 DCBL Remote Installation Instructions

⚠ CAUTION: Hood must be disconnected from main power prior to performing the conversion instructions listed below. Failure to do so could result in personal injury or damage the hood.

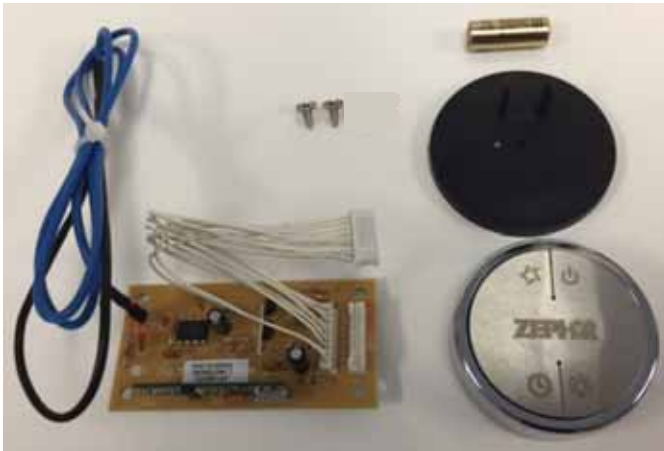


Included Materials: 1 Remote Module w/antenna wire, 1 Remote control, 1 Remote control holder, 1 battery, 2 screws.

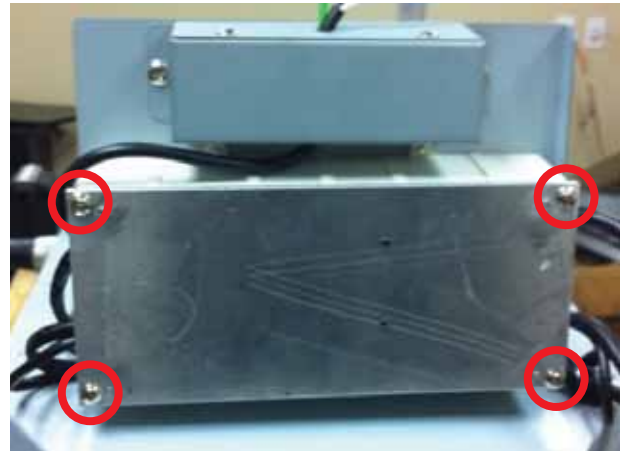


1. Locate Main PC Board on top of blower housing of hood body. Remove (4) Main PC Board cover screws.



2. Remove Main PC Board from PC Board box. Use caution when removing Main PC Board as to not disconnect any wires

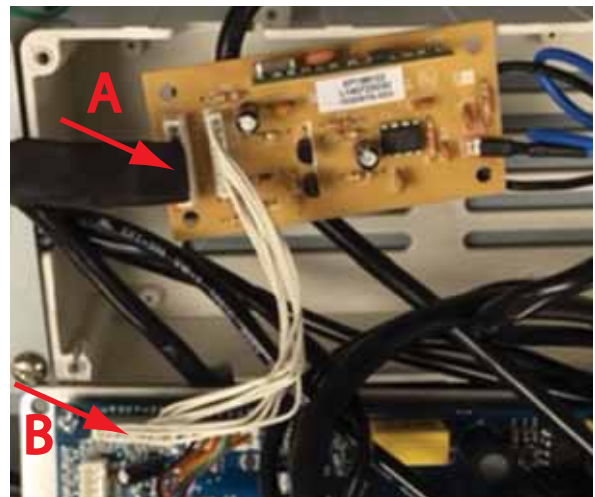

3. Disconnect black switch cable A from Main PC board and connect it to the Remote Module terminal. Connect white cable B from Remote Module to Main PC board switch terminal.

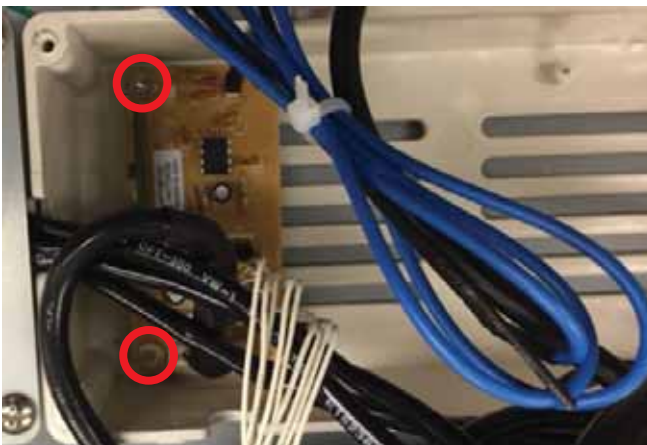

4. Install Remote Module into Main PC Board box by (2) screws.




5. Re-install Main PC Board into PC Board box. Be sure blue antenna wire from Remote Module is outside of PC Board box. Turn to page 2 for remote synchronization & features.

FCC Caution: To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral device. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions. (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. This remote control may operate in humid environments, but not when placed on a wet surface.

SYNCHRONIZATION: To create a unique link between your range hood and remote control please follow the below steps:
1. With range hood off, press and hold the "lights" button on the range hood until the LCD screen blinks on and off.
2. Press the "lights" button on the remote, the lights on the hood will turn on. The synchronization is complete.

RF REMOTE FUNCTIONS:

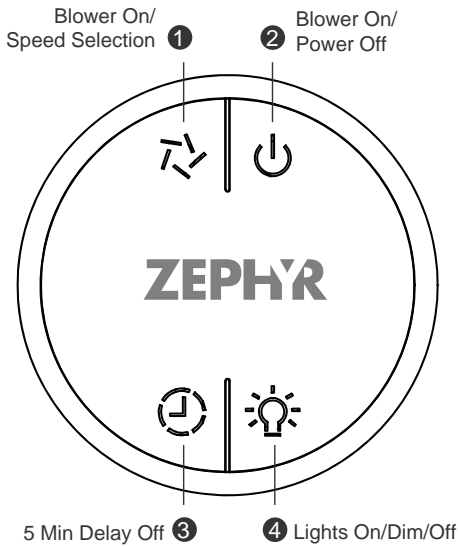

1 Blower On / Speed Selection

Press to power on blower and cycle through all six blower speeds.

2 Blower On / Power Off

By pressing , the blowers will power on at the last speed setting. Press again and the entire hood will power off, including lights.

3 Delay Off

By pressing , the blower and lights will enter Delay Off mode. The graphic will illuminate on the hood indicating the function is on. The blower will change to speed 1 and shut down after 5 minutes.

4 Lights On / Dim / Off

Switch lights On by pressing once, again to dim and again to switch Off.

RF REMOTE FEATURES:

The RF remote control is equipped with a magnet on the back for easy storage. The remote may be placed on any magnetic surface such as a refrigerator or the Zephyr remote holder, FIG. 1. The remote holder can be inserted into a standard electrical outlet for easy storage. Note: The remote holder does not charge the RF remote.

Maximum remote control communication distance is 15 feet from the hood.

RF REMOTE MAINTENANCE:

Clean the remote control using non abrasive detergents

Follow instructions below for replacing battery.

Using a small flat head screwdriver, raise the cover of the battery door (A) in order to access the battery compartment. FIG. 2.

Remove the battery and replace with battery type **A23 12V**.

Negative end of battery should face the spring inside the remote.

Re-install battery door and recycle old battery.

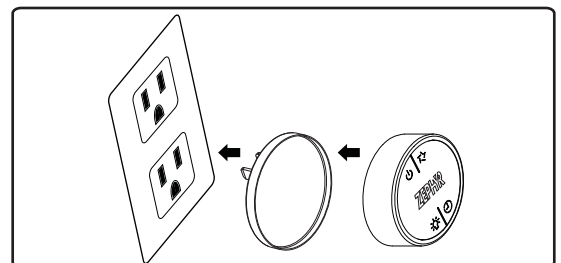


FIG. 1

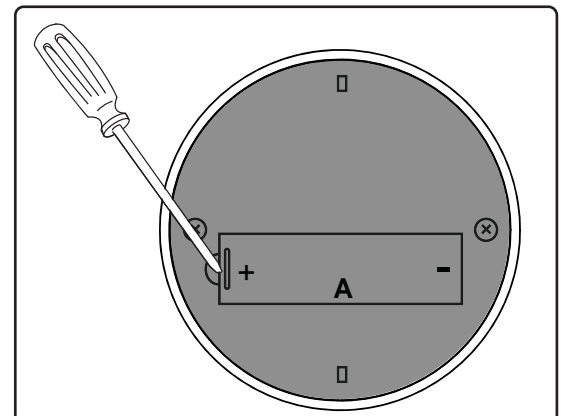


FIG. 2