

Installation Instructions
30" French Door Built-in Double Wall Ovens

Questions? Call GE Appliances at 1.800.GE.CARES (1.800.432.2377) or visit www.GEAppliances.com.

BEFORE YOU BEGIN
Read these instructions completely and carefully.
IMPORTANT — Save these instructions for local inspector's use.
IMPORTANT — Observe all governing codes and ordinances.
Note to installer – Be sure to leave these instructions with Consumer.
ATTENTION INSTALLER: All electric wall ovens must be hard-wired (direct-wired) into an approved junction box. A plug and receptacle is NOT permitted on these products.

FOR YOUR SAFETY:
WARNING
Before beginning the installation, switch power off at the service panel and lock the service disconnecting means to prevent power from being switched on accidentally.
Be sure the oven is securely installed in a cabinet that is firmly attached to the house structure.
Make sure the wall coverings, counters and cabinets around the oven can withstand the heat.

MATERIALS YOU MAY NEED TOOLS YOU MAY NEED
Junction Box
Wire Nuts
Strain Relief Clamp for 1/2" Conduit
1/8" Drill Bit and Electric or Hand Drill
3/16" hex key
1/8" hex key
Phillips Screwdriver
Wire Strippers

1 REMOVE PACKAGING MATERIALS
Failure to remove packaging materials could result in damage to the appliance.
DESIGN INFORMATION
A French door double oven may be installed in a cabinet alone or above a warming drawer.
IMPORTANT: Always refer to individual installation instructions packed with each product for specific requirements.

2 PREPARE THE OPENING
NOTE: If the cabinet does not have a solid bottom, two braces or runners must be installed to support the weight of the oven.
NOTE: If marks, blemishes or the cutout opening are visible above the installed oven, it may be necessary to add wood shims under the runners until the marks or opening are covered.
NOTE: If the cabinet does not have a front frame and the sides are less than 3/4" (1.9 cm) thick, shim both sides equally to establish the cutout width.

2A CUTOUT FOR DOUBLE OVENS (2 THERMAL OVENS)
NOTE: If the cabinet does not have a front frame and the sides are less than 3/4" (1.9 cm) thick, shim both sides equally to establish the cutout width.
Table with dimensions for 30" Double Oven with Pedestal and 30" Double Oven without Pedestal.
Continue to Section 3.

2B CUTOUT FOR INSTALLATION OVER A WARMING DRAWER
NOTE: Install the oven only with specific models listed on the label located on top of the oven.
NOTE: Additional clearances between cutouts may be required.
When installing a Warming Drawer below a double oven, a separate 120V, 60 Hz, properly grounded receptacle must be installed.

3A DETERMINING WHEN TO USE THE PEDESTAL
WHEN TO USE THE PEDESTAL
When replacing an older GE Appliances 30" double wall oven with a new GE Appliances model, Cutout height = 51-13/16" to 51-15/16".
WHEN NOT TO USE THE PEDESTAL
When replacing a 30" double wall oven from another manufacturer (ie. Whirlpool) with a new GE Appliances 30" double wall oven. Cutout height = 50-1/4".

3B PEDESTAL RAIL INSTALLATION
A. Position the pedestal rails with the top cutout toward the front of the opening and the flanges on the bottom, pointing toward the center.
B. Drill pilot holes and attach rails to runner or bottom of cabinet with provided hardware.

4 LOWER DOOR REMOVAL (RECOMMENDED)
NOTE: Door removal is not a requirement for installation of the product but is an added convenience.
To remove the lower oven door:
A. Open the oven door as far as it will go.
B. Remove hinge bracket, if equipped, from front frame and set aside.
C. Push both hinge locks down toward the door frame to the unlocked position.
D. Place hands on both sides of the door and close the oven door to the removal position.
E. Lift the door up and out until the hinge arms clear the slots.

5 ELECTRICAL REQUIREMENTS
WARNING
This appliance must be properly grounded.
WARNING
To prevent fire or shock, do not use an extension cord with this appliance.
WARNING
To prevent shock, remove house fuse or open circuit breaker before beginning installation.
WARNING
Improper connection of aluminum house wiring to copper leads can result in an electrical hazard or fire.


5 ELECTRICAL REQUIREMENTS (CONT.)
This appliance must be supplied with the proper voltage and frequency and connected to an individual, properly grounded branch circuit, protected by a circuit breaker or fuse.
Rating plate is located on left side trim.
Connected Appliance Information is located on left side trim.
Use the chart below to determine the minimum recommended dedicated circuit protection:
Table with KW Rating, Recommended Circuit Size (Dedicated).
DO NOT shorten the flexible conduit. The conduit strain relief clamp must be securely attached to the junction box and the flexible conduit must be securely attached to the clamp.

6 MAKE ELECTRICAL CONNECTIONS

▲WARNING

Switch power off at the service panel and lock the service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

Place oven on table or platform even with the cutout opening. For a double oven, the platform must support 400 lbs. (181 kg). Connect the flexible conduit to the electrical junction box as shown below*. Position the conduit in such a manner that it will lie behind the unit in a natural loop when the oven is installed. You will need to purchase an appropriate strain relief clamp to complete the connection of the conduit to the junction box.

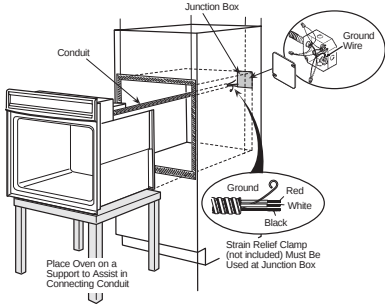


*Ovens come equipped with a 40" long conduit. If a longer conduit is desired, there may be one available for your model. To check availability or order parts, call GE Appliances at 1.800.GE.CARES.

7 THREE-CONDUCTOR BRANCH CIRCUIT CONNECTION

NOTE: If residence leads are aluminum conductors, see WARNING in Section 5, Electrical Requirements.

When connecting to a three-conductor branch circuit, if local codes permit:

- Connect the oven ground conductor along with the neutral (white) lead to the branch circuit neutral (white or gray in color), using a wire nut.
- Connect the oven red lead to the branch circuit red lead and the oven black lead to the branch circuit black lead in accordance with local codes, using wire nuts.
- Install proper strain relief clamp.
- Install junction box cover.

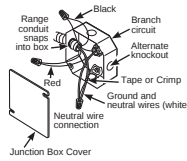


8 FOUR-CONDUCTOR BRANCH CIRCUIT CONNECTION

NOTE: If residence leads are aluminum conductors, see WARNING in Section 5, Electrical Requirements.


When connecting to a four-conductor branch circuit, if local codes permit:

- Free the neutral (white) lead from being restrained to any other wires. If necessary, cut the neutral (white) lead and then re-strip it to expose the proper length of conductor.
- Attach the appliance grounding lead (green or bare copper) in accordance with local codes.
- Connect the oven neutral (white) lead to the branch circuit neutral (white or gray) in accordance with local codes, using a wire nut.
- Connect the oven red lead to the branch circuit red lead and the oven black lead to the branch circuit black lead in accordance with local codes, using wire nuts.
- Install proper strain relief clamp.
- Install junction box cover.

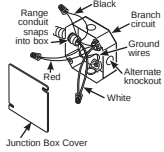

9 SLIDE OVEN INTO OPENING

- Lift oven into cabinet cutout using the oven opening as a grip. Carefully push against oven front frame. Do not push against outside edges.

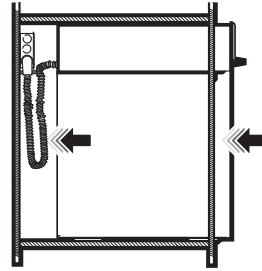

10 MOUNT THE OVEN

▲WARNING


Mounting screws must be used. Failure to do so could result in the oven falling out of the cabinet, causing serious injury.

NOTE: During oven mounting step, ensure that no damage is done to oven gasket which lines the edge of oven cavity.

NOTE: Before drilling the pilot holes, make sure the oven is pushed as far back into the opening as it will go and is centered.

NOTE: If the cabinet is particle board, you must use #8 x 3/4" particle board screws. These may be purchased at any hardware store.

- Drill through the mounting holes (top and bottom) of the side trim for the #8 mounting screws provided.
- Secure the oven cabinet with the screws provided.

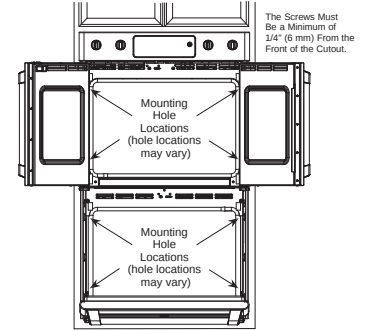

1" = 2.5 cm; 1' = 0.3 m

1" = 2.5 cm; 1' = 0.3 m


11 BOTTOM TRIM INSTALLATION

With oven installed, attach the bottom trim through its mounting holes in front vertical brace using two trim screws provided. Bottom trim lip must be placed under flange of bottom air duct.

Installations without a Pedestal




Installations with a Pedestal

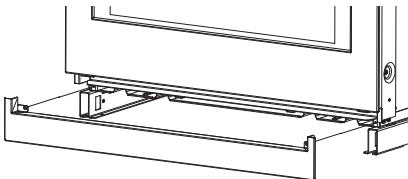

IMPORTANT: If this unit is ever removed from the cabinet or the oven is ever pulled out for service, the bottom trim must be removed first or damage to the trim will occur.

12 OVEN RACK GUIDE INSTALLATION

- Locate included oven rack guide mounting hardware.
- Place oven rack guides on cavity wall studs with L bracket towards back of cavity as shown.
- Install guides using the 8 provided mounting nuts.

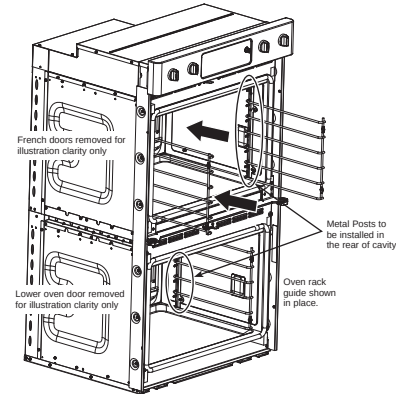


13 DOOR ADJUSTMENT MECHANISM

Door Adjustment Mechanism is located on both the right and left doors at the bottom hinges. Only the left side Adjustment Mechanism is shown in this manual.


NOTE: Adjust the doors inward until the center gap is even. Over-adjusting can damage the center seals and make the doors more difficult to open.

- Using 3/16" hex key, tighten Vertical Adjustment Screw to adjust door up and loosen to adjust door down.
- Horizontal Adjustment Screws pivot the door about an axis. Using a 1/8" Hex Key, loosen both screws, then tighten appropriate screw to pivot door. Once door is in place, verify both screws are tightened.



EXAGGERATED EXAMPLES FOR LEFT DOOR ADJUSTMENT

Example 1: Left door low, center gap even.

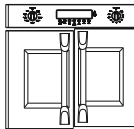


Steps for adjustment:
A. Tighten left Vertical Adjustment Screw.

B. If left door is still low, loosen right Vertical Adjustment Screw.

C. If left door is still low, tighten left Vertical Adjustment Screw.

D. Tighten inside Horizontal Adjustment Screw.

Example 2: Left door low, center gap larger at bottom.

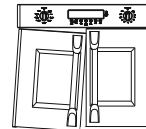


Steps for adjustment:
A. Loosen inside Horizontal Adjustment Screw.

B. Tighten outside Horizontal Adjustment Screw until center gap even.

C. If left door is still low, tighten left Vertical Adjustment Screw.

D. Tighten Inside Horizontal Adjustment Screw.

Example 3: Left door high, center gap larger at top.

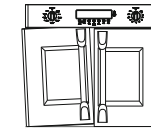

Steps for adjustment:
A. Loosen outside Horizontal Adjustment Screw.

B. Tighten Outside Horizontal Adjustment Screw until center gap even.


C. If left door is still low, tighten Left Vertical Adjustment Screw.

D. Tighten Inside Horizontal Adjustment Screw.

14 REPLACING THE LOWER OVEN DOOR

NOTE: The oven door is heavy. You may need help lifting the door high enough to slide it into the hinge slots. Do not lift the door by the handle.

- Lift the oven door by grasping each side.
- With the door at the same angle as the removal position (approximately 1"-2" [2.5 cm-5.1 cm] from the closed position), seat the notch of the hinge arm into the bottom edge of the hinge slot. The notch of the hinge arm must be fully seated into the bottom of the slot.
- Fully open the door. If the door will not fully open, the indentation is not seated correctly in the bottom edge of the slot.
- Push the hinge locks up against the front frame of the oven cavity, to the locked position.
- Replace hinge bracket, if equipped, to ensure proper door functionality.
- Close the oven door.

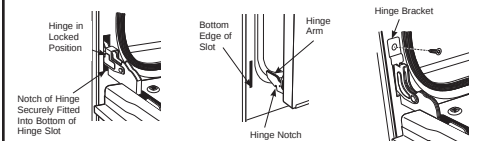

15 FINAL INSTALLATION CHECKLIST

- Check to make sure the circuit breaker is closed (RESET) or the circuit fuses are replaced.
- Be sure power is in service to the building.
- Check that all packing material and tape have been removed. Failure to remove these materials could result in damage to the appliance once the appliance has been turned on and surfaces have heated.
- Remove all items from inside the oven.
- Check to be sure that the mounting screws are installed and flush with the side trim (see Section 10).
- Check that the bottom trim is installed properly (see Section 11).
- Ensure that air duct opening at bottom of unit is free of obstructions.
- Check that oven rack guides are installed correctly and oven racks function smoothly.

OPERATION CHECKLIST

- Turn on the power to the oven (refer to your Owner's Manual). Verify that the bake and broil units and all cooking functions operate properly.
- See your Owner's Manual for the troubleshooting list.
- Be sure all of the oven controls are OFF before leaving the oven.

1" = 2.5 cm; 1' = 0.3 m

31-11065-2 08-18 GEA (sheet 2)

1" = 2.5 cm; 1' = 0.3 m