

Power Adapter for BSH Clothes Washers and Dryers Only. NEMA 14-30P to 6-15R configuration.

⚠ IMPORTANT SAFETY INSTRUCTIONS!
READ CAREFULLY, FOLLOW ALL INSTRUCTIONS BEFORE USE AND SAVE THESE INSTRUCTIONS.

This power adapter can be plugged onto a 208/240V 60Hz NEMA 14-30 receptacle (4-prong). The adapter has two NEMA 6-15 receptacles (load side) that are intended only to supply electrical power to the BSH Clothes Washers and Dryers. All load side circuits are individually protected with an internal fuse.

WARNING:


- Use only the BSH replacement fuse, part number 10013781, in this adapter.
- Only plug this adapter into a grounded NEMA 14-30 receptacle.
- **DO NOT OPEN THE ADAPTER. DO NOT CHANGE OR MODIFY ANY PART OF THIS ADAPTER.**
- Do not use the adapter if it is damaged.
- Do not use extension cords attached to either the line or load side of this adapter.
- Do not use the adapter when wet. Do not clean adapter with a damp or moist cloth or wipe.
- Use indoors and in dry locations only.
- To reduce risk of electrical shock disconnect adapter or appliance cords before servicing any appliances connected to the adapter.
- Fully insert plugs into receptacles.

CAUTION:

- Ensure appliance's power switch/button is in the off position before connecting or disconnecting adapter to receptacle or appliance power cords to adapter.
- Risk of fire or electric shock. Do not use with appliances that block access to the outlet for disconnection.


Technical:

- Line side: 208/240V, 60 Hz, 24A max.
- Load side: 208/240V, 12A max. per each outlet

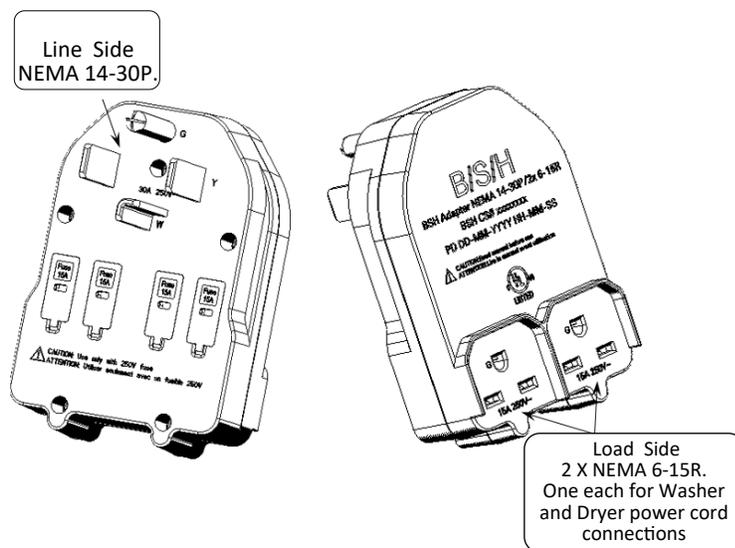

Fuse Replacement:

- Disconnect the Power Adapter from the wall outlet.
- Remove fuse holder using a pointed tool as shown.
- Replace suspected bad fuse with a known good one.
USE ONLY THE BSH REPLACEMENT FUSE,
PART NUMBER 10013781.
- Reinstall the fuse and fuse holder in the Power Adapter ensuring it snaps into place.

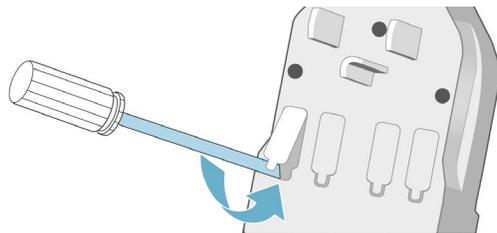

Adaptateur secteur pour laveuses et sècheuses BSH uniquement.

Configuration NEMA 14-30P à 6-15R.

⚠️ CONSIGNES DE SÉCURITÉ IMPORTANTES!

LISEZ ATTENTIVEMENT, SUIVEZ TOUTES LES INSTRUCTIONS AVANT UTILISATION ET CONSERVEZ CES INSTRUCTIONS.

Cet adaptateur secteur peut être branché sur une prise NEMA 14-30 208/240 V 60 Hz (4 broches). L'adaptateur possède deux prises NEMA 6-15 (côté charge) qui sont uniquement destinées à alimenter en électricité les laveuses et les sècheuses BSH.

Tous les circuits côté charge sont protégés individuellement par un fusible interne.

AVERTISSEMENT :


- Utilisez uniquement le fusible de remplacement BSH, numéro de pièce 10013781, dans cet adaptateur.
- Branchez cet adaptateur uniquement dans une prise NEMA 14-30 mise à la terre.
- **N'OUVREZ PAS L'ADAPTATEUR. NE CHANGEZ NI MODIFIEZ AUCUNE PARTIE DE CET ADAPTATEUR.**
- N'utilisez pas l'adaptateur s'il est endommagé.
- N'utilisez pas de rallonges attachées au côté ligne ou côté charge de cet adaptateur.
- N'utilisez pas l'adaptateur lorsqu'il est mouillé. Ne nettoyez pas l'adaptateur avec un chiffon mouillé ou un chiffon humide.
- Utilisez à l'intérieur et dans des endroits secs uniquement.
- Pour réduire le risque de choc électrique, débranchez l'adaptateur ou les cordons de l'appareil avant de réparer tout appareil connecté à l'adaptateur.
- Insérez complètement les fiches dans les prises.

MISE EN GARDE :

- Assurez-vous que l'interrupteur/bouton d'alimentation de l'appareil est en position d'arrêt avant de connecter ou de déconnecter l'adaptateur à la prise ou les cordons d'alimentation de l'appareil à l'adaptateur.
- Risque d'incendie ou de choc électrique. Ne pas utiliser avec des appareils qui bloquent l'accès à la prise pour la déconnexion.


Technique :

- Côté ligne: 208/240 V, 60 Hz, 24 A max.
- Côté charge: 208/240 V, 12 A max. pour chaque sortie

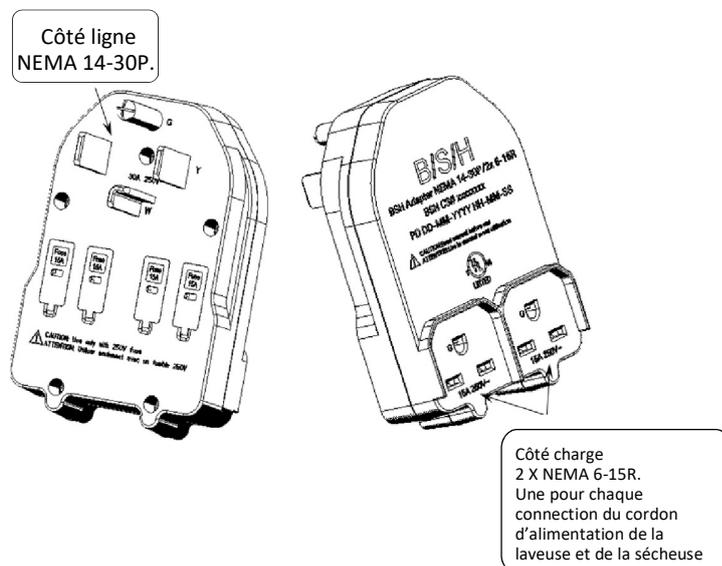

Remplacement des fusibles :

- Débranchez l'adaptateur secteur de la prise murale.
- Retirez le porte-fusible à l'aide d'un outil pointu, comme illustré.
- Remplacez le mauvais fusible suspect par un bon connu. **UTILISEZ UNIQUEMENT LE FUSIBLE DE REMPLACEMENT BSH, RÉFÉRENCE 10013781.**
- Réinstallez le fusible et le porte-fusible dans l'adaptateur secteur en vous assurant qu'il s'enclenche en place.

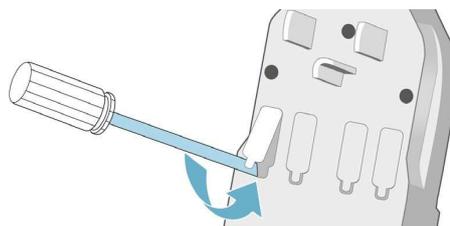

0005/8001181446

