

CAUTION: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.

CIRCUIT IDENTIFICATION


1. Oven Light- all models equipped with an oven light.
2. Clock- all models equipped with a clock.
3. Electric Ignition- all ranges equipped with electric ignition source.

NOTE: Refer only to options equipped with range.

COLOR CODE

W- White R- Red
Bk- Black Bl- Blue

SERVICE: If replacement of terminals and/or wiring becomes necessary, use comparable wire type, gauge and terminals.

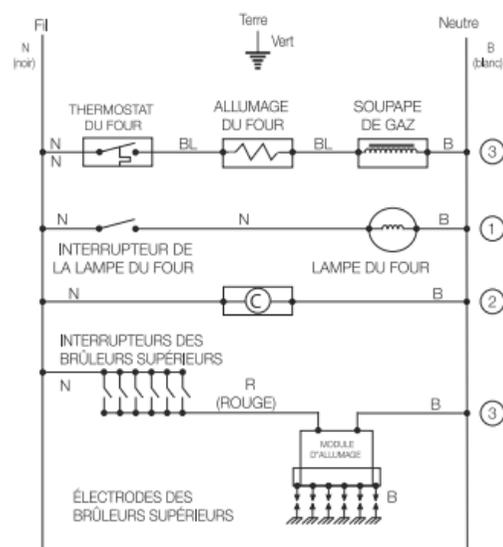

Attention: Étiqueter tous les fils avant de les débrancher pour effectuer l'entretien des régulateurs. Une erreur de câblage peut entraîner une utilisation inappropriée ou dangereuse. S'assurer du bon fonctionnement de l'appareil après l'entretien.

IDENTIFICATION DE CIRCUIT

1. Lampe de four – tous les modèles sont équipés d'une lampe de four.
2. Horloge – tous les modèles sont équipés d'une horloge.
3. Allumage électrique – toutes les cuisinières sont équipées d'une source d'allumage électrique.

REMARQUE : Ne consulter que les options comprises avec la cuisinière.

CODE DE COULEUR

B – Blanc
N – Noir
BL – Bleu

ENTRETIEN : Si le remplacement des bornes ou du câblage s'avère nécessaire, utiliser un type de fil, calibre et bornes équivalent.