



DRILL TWO HOLES DIMENSION 10 mm (7/16")

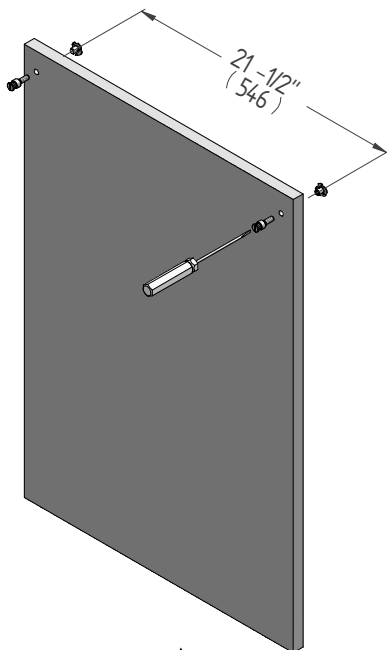


1

DRILL TWO HOLES DIMENSION 10 mm (7/16")


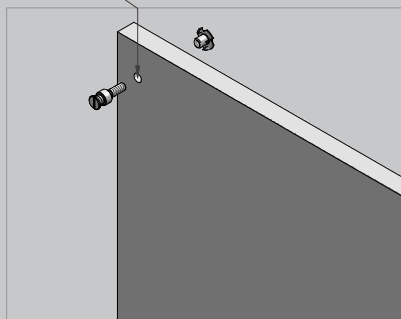


FIXING THE T-NUT INTO THE PANNEL
AND THEN SCREWING THE STUD INTO THE T-NUT

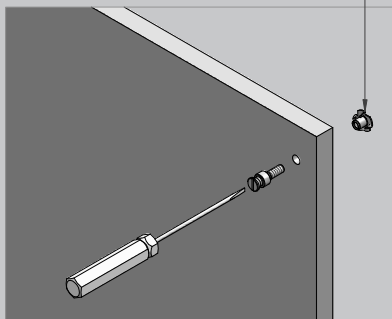



HANDLE WITH CARE

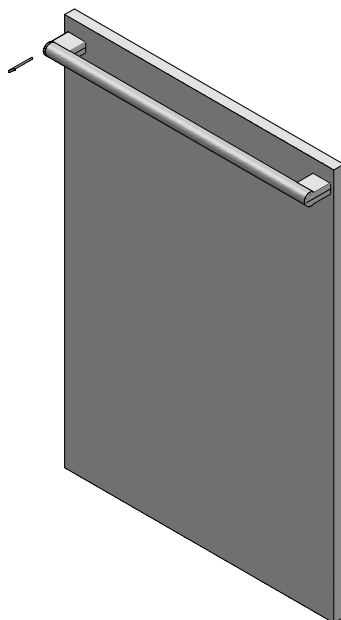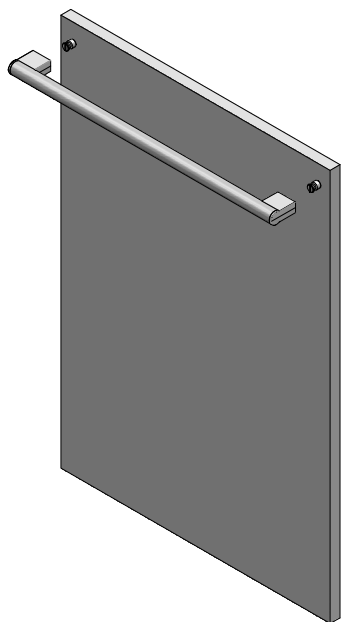

2

