

# Installation Instructions

## 36-3/4"-38" High Countertop Kit

### Tools Required:

- #2 Phillips screw driver
- 1 7/16" Adjustable wrench


### Parts Supplied:

- 4 Modified Plastic Leg Levelers
- 4 Leg spacers
- 4 Washers
- 4 Metal Leg Levelers
- 2 Screws
- 1 Toe Plate

## A Installing the Kit for Slide-In Ranges

- A1** Prepare the location for the range by following the Installation Instructions for a Slide-In Range.
- A2** The 4 extended leveling leg assemblies consist of the washer, leg spacers, modified plastic leg levelers and the metal leg levelers.
- A3** The following is the order of assembly:

- Place the plastic leg leveler supplied in the kit through the hole in the plastic leg spacer followed by the metal washer.
- Remove the 4 existing leg levelers and replace with the 4 assemblies in (a).
- With the adjustable wrench, slightly over hand tighten the assemblies into the range base assembly.
- Screw the metal leg levelers into the tapped holes in the end of the plastic leg levelers.
- Adjust the levelers so the glass and support flanges of the cooktop clear the countertop.

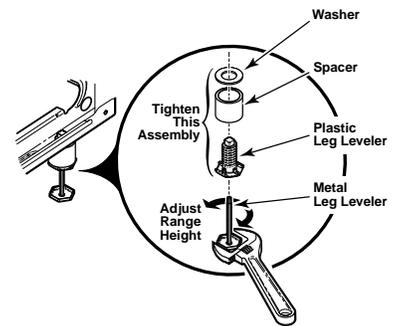

Then follow the Slide-In Installation Instructions for proper installation of the range.

## B Install the Toe Plate

- B1** Put the toe plate in place.
- B2** Secure the toe plates in place using the two screws supplied in the kit.

