



# Installation Instructions

## Stainless Steel Door Panel Kit

**Before you begin - Read these instructions completely and carefully.**

**Note to Installer:** Be sure to leave these instructions with the Consumer.

**Note to Consumer:** Keep these instructions with your Installation Instructions for future reference.

### ⚠ WARNING



#### Tip Over Hazard.

These appliances are top heavy, especially with any doors open, and must be secured to prevent tipping forward which could result in death or serious injury. Read and follow the entire installation instructions for securing the appliance with the anti-tip system before installing door panel kit.

### ⚠ AVERTISSEMENT



#### Risque de basculement

Ces électroménagers sont lourds dans le haut, en particulier avec une porte ouverte, de sorte qu'ils doivent être fixés afin de prévenir un basculement vers l'avant pouvant occasionner des blessures graves ou la mort. Veuillez lire et suivre la totalité des instructions d'installation afin de fixer votre électroménager par un dispositif antibasculement avec le système anti-basculer avant d'installer le kit de panneau de porte..

### ⚠ ADVERTENCIA



#### Riesgo de Caídas

Estos electrodomésticos son inestables, especialmente cuando una puerta se encuentre abierta, y deben estar asegurados a fin de evitar caídas hacia adelante que podrían resultar en la muerte o en lesiones graves. Lea y siga todas las instrucciones de instalación para asegurar el aparato con el sistema antivuelco antes de instalar el kit del panel de la puerta.

### ⚠ WARNING



#### Door Trim Pinch Point Hazard

Improper installation can lead to a finger pinch point hazard between the side door trim and the cabinets when operating the door, especially with children. To minimize this risk you must follow the installation instructions for cabinet dimensions, trim assembly, and door stop angle.

### ⚠ AVERTISSEMENT



#### Risque de pincement sur la garniture de porte

Une installation mal effectuée représente un risque de pincement de doigts entre la garniture latérale de porte et les armoires lors de la manipulation de la porte, spécialement pour les enfants. Pour minimiser le risque, vous devez respecter les instructions d'installation selon les dimensions de l'armoire, l'assemblage de garniture et l'angle de butée de la porte.

### ⚠ ADVERTENCIA



#### Riesgo de Lastimadura con el Borde de la Puerta

Una instalación inadecuada puede conducir a riesgos de pellizcos de dedos entre el borde lateral de la puerta y los gabinetes al utilizar la puerta, especialmente con los niños. A fin de minimizar este riesgo, usted deberá seguir las instrucciones de instalación para dimensiones de gabinetes, ensambles de bordes y ángulos de detención de puertas.

This kit provides for the installation of the Stainless Steel Door Panel Assemblies and Stainless Steel Toe Kicks

ZK1SN189NLH	LH 18" STAINLESS STEEL DOOR PANEL
ZK1SN184NRH	RH 18" STAINLESS STEEL DOOR PANEL
ZK1SN249NLH	LH 24" STAINLESS STEEL DOOR PANEL
ZK1SN244NRH	RH 24" STAINLESS STEEL DOOR PANEL
ZK1SN309NLH	LH 30" STAINLESS STEEL DOOR PANEL
ZK1SN304NRH	RH 30" STAINLESS STEEL DOOR PANEL
ZK1SN369RLH	LH 36" STAINLESS STEEL DOOR PANEL
ZK1SN364RRH	RH 36" STAINLESS STEEL DOOR PANEL
ZKSP1H1CNSS	MINIMALIST HANDLE FOR STAINLESS STEEL PANELS ONLY
ZKSP1H1PNSS	STATEMENT HANDLE FOR STAINLESS STEEL PANELS ONLY

#### Tools and Materials Required:

T10, T20 and T30 Torx driver / bits


#### Components Included

Components Included	Quantity
Stainless Steel Wrap	1
Stainless Steel Toe Kick	1



# Installation Instructions

## INSTALL STAINLESS PANEL

- Remove bottom hinge cover and retain the 4 T30 Torx screws for later installation.
- With the door fully closed, carefully slide the panel towards the cabinetry with the goal gap of 1/8".

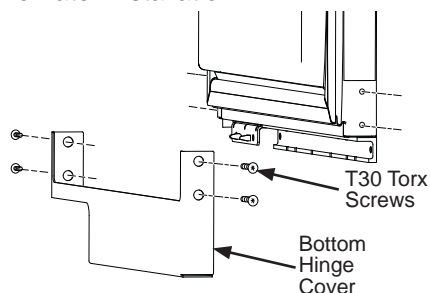


- Open door to 90°. Slide the panel onto the door with the panel brackets interlocking on top and bottom with the door brackets (make sure not to slide the panel into the cabinetry surround). Center the panel on the door, then slowly close the door while watching to make sure the panel does not contact the surrounding cabinetry.

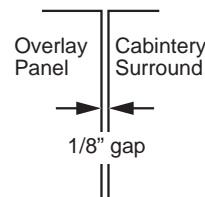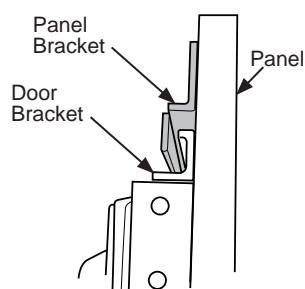

FOLLOW THE REMAINDER OF THE STAINLESS DOOR PANEL INSTALLATION INSTRUCTIONS IN THE UNIT INSTALLATION INSTRUCTIONS TO ADJUST AND SECURE THE DOOR PANEL.

## INSTALL TOE KICK

- Insert Toe Kick into the slot in the Front Access Cover by rotating it toward you.
- Push the bottom portion of the Toe Kick towards the product and slide into place.

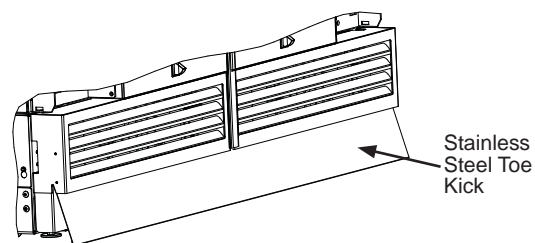

Instructions for this kit are also included in the full installation instructions included with the unit.

For the full owner's manual, visit our website at [monogram.com](http://monogram.com).

Pour une version française du manuel du propriétaire complet, visitez notre site Web à [monogram.com](http://monogram.com).

Para obtener una versión en español del manual del propietario completo, visite nuestro sitio web en [monogram.com](http://monogram.com).