



Installation Instructions

30", 36", 60", 66" and 72" Brass and Titanium Toe Kick

Brass: ZKK30BV, ZKK36BV, ZKK60BV, ZKK66BV, ZKK72BV

Titanium: ZKK30TV, ZKK36TV, ZKK60TV, ZKK66TV, ZKK72TV

BEFORE YOU BEGIN

Read these instructions completely and carefully.

- **Note to Installer** – Be sure to leave these instructions with the Consumer.
- **Note to Consumer** – Keep these instructions with your Owner's Manual for future reference.

⚠ WARNING




Tip Over Hazard.

These appliances are top heavy, especially with any doors open, and must be secured to prevent tipping forward which could result in death or serious injury. Read and follow the entire installation instructions for securing the appliance with the anti-tip system before installing toe kick.

PRODUCT DIMENSIONS

Designated Width	Actual Width
30	29-9/16"
36	35-9/16"
60	59-1/4"
66	65-1/4"
72	71-1/4"

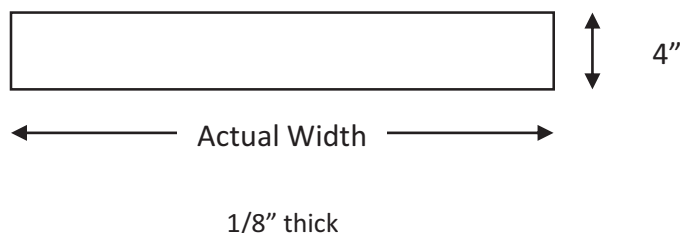

- After properly installing the column(s) into the cabinets, install the Toe Kick as follows.
- Insert Toe Kick into the slot in the Front Access Cover by rotating it toward you.
- Push the bottom portion of the Toe Kick towards the product and slide into place.

