

# Installation Instructions

## ZKR42N - 42" Trim Retro Kit ZKR48N- 48" Trim Retro Kit

**Before you begin - Read these instructions completely and carefully.**

**Note to Installer:** Be sure to leave these instructions with the Consumer.

**Note to Consumer:** Keep these instructions with your Installation Instructions for future reference.

### **⚠ WARNING** **Electrical Shock Hazard.**

To avoid the risk of electric shock, make sure the power cord is not plugged into the wall outlet.

### **⚠ WARNING** **Tip Over Hazard.** This appliance is top heavy. Use extreme caution with moving to prevent tipping over which could result in death or serious injury.

This kit provides for the installation of trim retro kit components needed for 2 Column models side by side in a 41-1/2" or 47-1/2" opening which is 24" deep.

#### **Parts List:**

- Water line jumper
- Water fitting tee
- 2 power cords
- RH and LH Case side trims
- 42" or 48" Case top trim
- #8 Phillips head trim screws
- 2 corner keys
- #6 Phillips head corner key screws

#### **Tools and Materials Required:**

- Adjustable wrench
- #2 Phillips screwdriver
- 1/4" driver / socket

## INSTALL WATER LINE JUMPER/TEE

### **⚠ WARNING** **Connect to potable water supply only.**

- Connect the jumper water line from the ZKR42N or ZKR48N Trim Retro Kit to the house cold water line. Tighten the compression nut hand tight, then tighten one additional turn with a wrench. Overtightening can cause leaks!
- Connect the other end of the jumper water line to the water fitting tee supplied in the trim retro kit. Tighten the compression nut hand tight, then tighten one additional turn with a wrench. Overtightening can cause leaks!


## CHANGE POWER CORD

Longer power cords are required for retro fit installation. Power cords are included in 42" ZKR42N and 48" ZKR48N.

Replace power cords on both units. Both units can be plugged into the same electrical supply receptacle.

### **Remove existing short power cord with string assembly:**

- Remove 1/4" hex screws attaching rear access cover.
  1. Unplug 3-pin power cord connector inside the machine compartment (press on sides to release locking tabs).
  2. Remove power cord green ground 1/4" hex screw.
  3. Remove strain relief 1/4" hex screw.

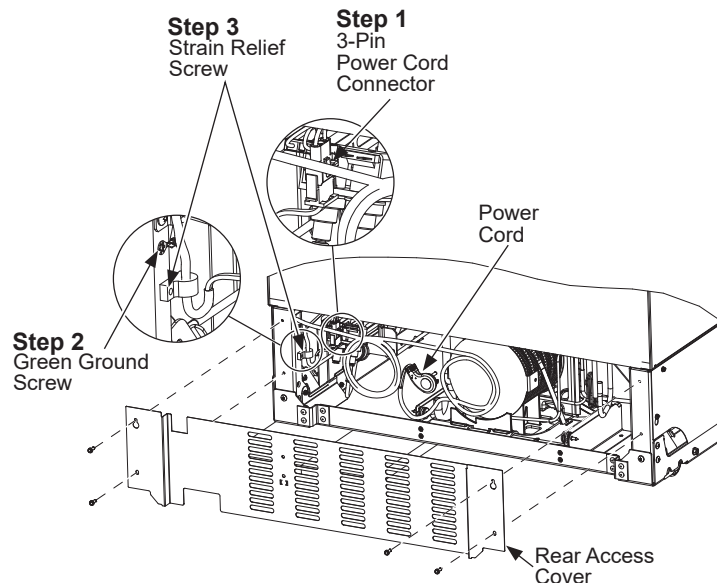


# Installation Instructions

## CHANGE POWER CORD (CONT.)

### Install new longer power cord:

1. Plug in the 3-pin connector (make sure locking tabs are engaged).
2. Install the power cord green ground screw.
3. Install the power cord strain relief.

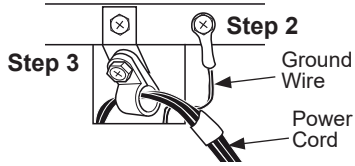

### **⚠ WARNING** **Electrical Shock Hazard.**


To avoid the risk of electric shock, make sure to re-install the ground screw after changing the power cord.

- Replace rear access cover. Make sure the power cord and ground wire are properly routed through the access cover cut-out.

**Repeat all steps for second unit.**


## CASE TRIM INSTALLATION

- Install the trim kit side rails to the exposed right and left case walls using the provided #8 Phillips head screws - 7 screws per side.

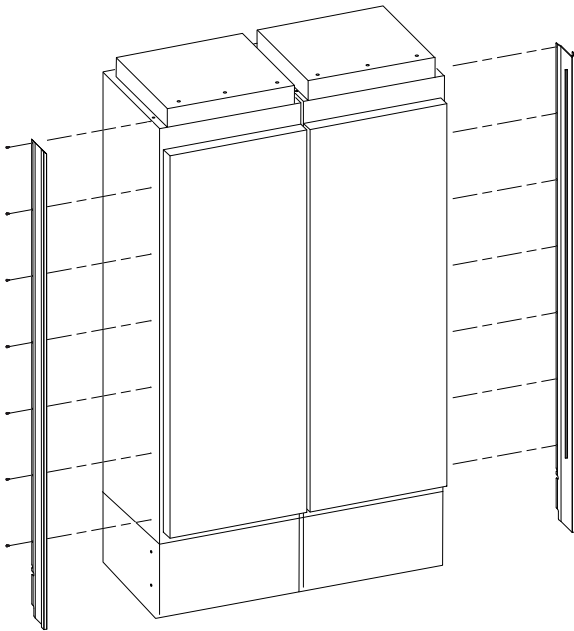


## CASE TRIM INSTALLATION (CONT.)

- Pre-assemble the trim kit top rail and corner keys. One corner key should be installed to each end of the top trim. Use the provided #6 Phillips head screw in the corner key to ensure that the key is snugly fit to the top trim, but be sure not to overtighten the screw to prevent damage to the parts.

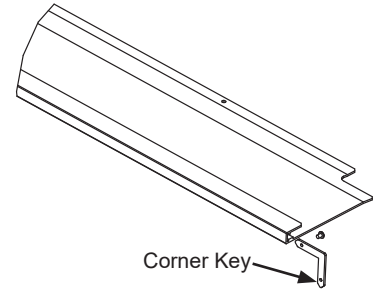

- Fit the top trim and side trim rails together by sliding the exposed edges of the corner trim into the right and left trim kit side rails. Press downward on the top trim until each corner key is fully seated in each side rail. Use the provided #6 Phillips head screws to ensure each corner key is snugly fit to each trim kit side rail.

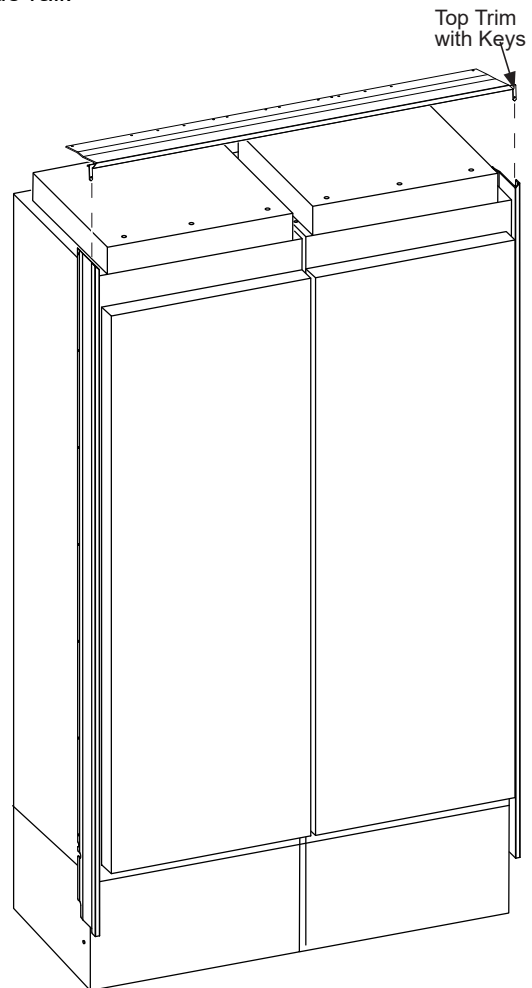

- Secure the top trim to the case by using the provided 1/4" hex head screws (6 screws).

FOLLOW ALL INSTALLATION INSTRUCTIONS PROVIDED WITH THE APPLIANCE  
TO COMPLETE THE DUAL INSTALLATION