



Use, Care and Installation Guide

Europa Series Carbon Filter Kit

Z0F-C022 - 2 Pack

Z0F-C023 - 3 Pack

Z0F-C042 - 2 Pack

Z0F-C043 - 3 Pack

LIST OF MATERIALS _____ 2

SPECIFICATIONS _____ 3

INSTALLATION _____ 4

**CLEANING AND
CONTACT INFORMATION** _____ 5

Table of Contents



Z0F-C022, Z0F-C042

- 2 - Carbon Filters
- 2 - Metal Filter Brackets

Z0F-C023, Z0F-C043



- 3 - Carbon Filters
- 3 - Metal Filter Brackets

Note: If any parts are missing, please call
1-888-880-8368 for replacements.

The following is the list of models that each carbon filter kit is designed for.

Z0F-C022 (2pk)	Z0F-C023 (3pk)	Z0F-C042 (2pk)	Z0F-C043 (3pk)
ZFI-M90S	ZVE-E36S	ZTO-M79S	ZTA-E36S
ZPA-M90S	ZVE-E42S	ZTR-M90s	
ZMI-M90x	ZNA-M90S	ZTA-E30S	
ZVE-E30S	ZNA-E42S		
ZPY-E30x	ZPY-E36x		
ZSA-M90S			
ZML-M90x			
ZML-E42x			

Note: The only model hoods which will use the metal carbon filter brackets are the **ZPY-E30x, ZPY-E36x, ZTA-E30x, ZTA-E36x and ZSA-M90S**. The rest of the above Zephyr hoods have diffuser panels built into them behind the metallic filter. You may discard the metal bracket which came with your carbon filter kit if you are using the carbon filters on a hood which has a diffuser panel. To install carbon filters, just snap them into the diffuser panels..

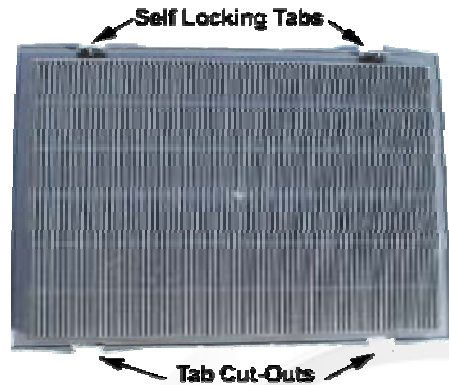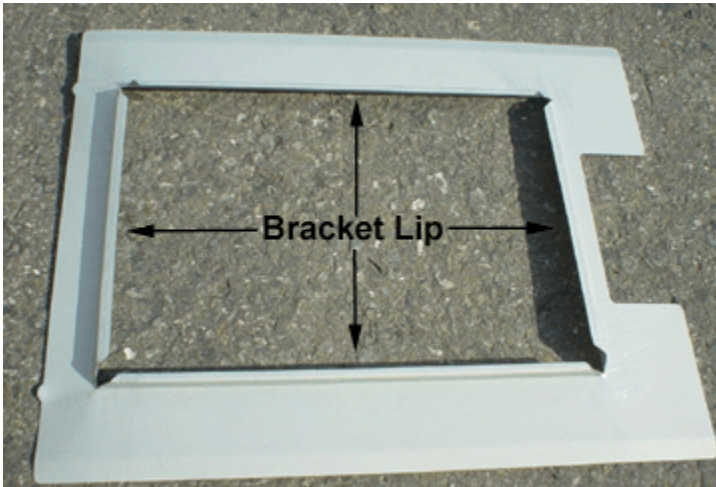

Follow the instructions below for installing the carbon filters to your metallic filters.



1. Install metal bracket onto metallic filter from hood by sliding one end of the metal bracket underneath the backside of the gray handle as shown above.



2. Push two corner tabs into metallic filter frame to lock it in. If pushing tabs in is difficult, gently lift up on the corner lip of the bracket near the gray handle and push down on the corner tab.



3. Install carbon filter onto metal bracket with plastic side up. Insert bottom side of carbon filter where the tab cut-outs are first.



4. Push carbon filter down and click locking tabs in place.



5. Installation complete.



Carbon filters are not meant to be cleaned. DO NOT place carbon filters in the dishwasher or soak them in soapy water. Under normal usage, carbon filters should be replaced every 4 - 6 months.

Carbon filters may need to be replaced more frequently if you do much deep frying or if cooking odors are more noticeable.

Zephyr Corporation
395 Mendell Street
San Francisco, CA 94124
1-888-880-8368
www.zephyronline.com

