


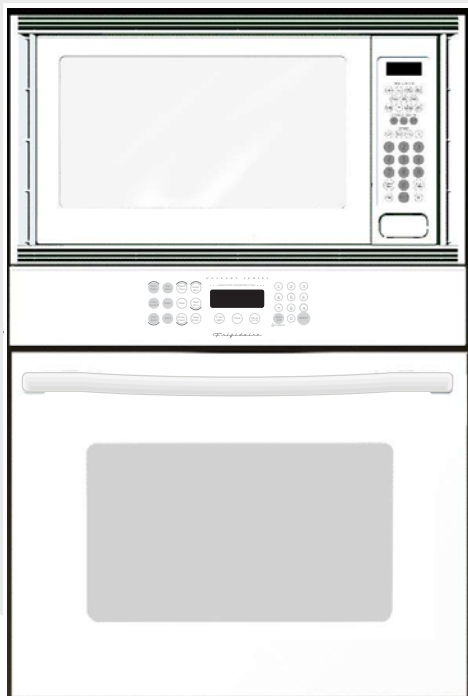

Frigidaire

Factory Parts Catalog

Product No.	GLEB30M9EBA	GLEB30M9EQA	GLEB30M9ESA
	39256391G5061	39256391G5041	39256391G5011
Series	30" elec	30" elec	30" elec
Color	black	bisque	white
Market	North America	North America	North America
Wiring Diagram	318046238	318046238	318046238
Owner's Guide	318200941	318200941	318200941
Installation Instructions	318201521	318201521	318201521
Service Data Sheet	318047418	318047418	318047418

Electrolux

Electrolux Major Appliances
North & Latin America
P.O. BOX 212378
AUGUSTA, GA 30917


Publication No.
5995452157
05/10/24
(EN/SERVICE/ECL)
377

**WALL OVEN/
MICROWAVE COMBO**

**Model No.
GLEB30M9E**

Copyright © 2005 Electrolux Home Products, Inc.
All rights reserved.

CONTROL PANEL

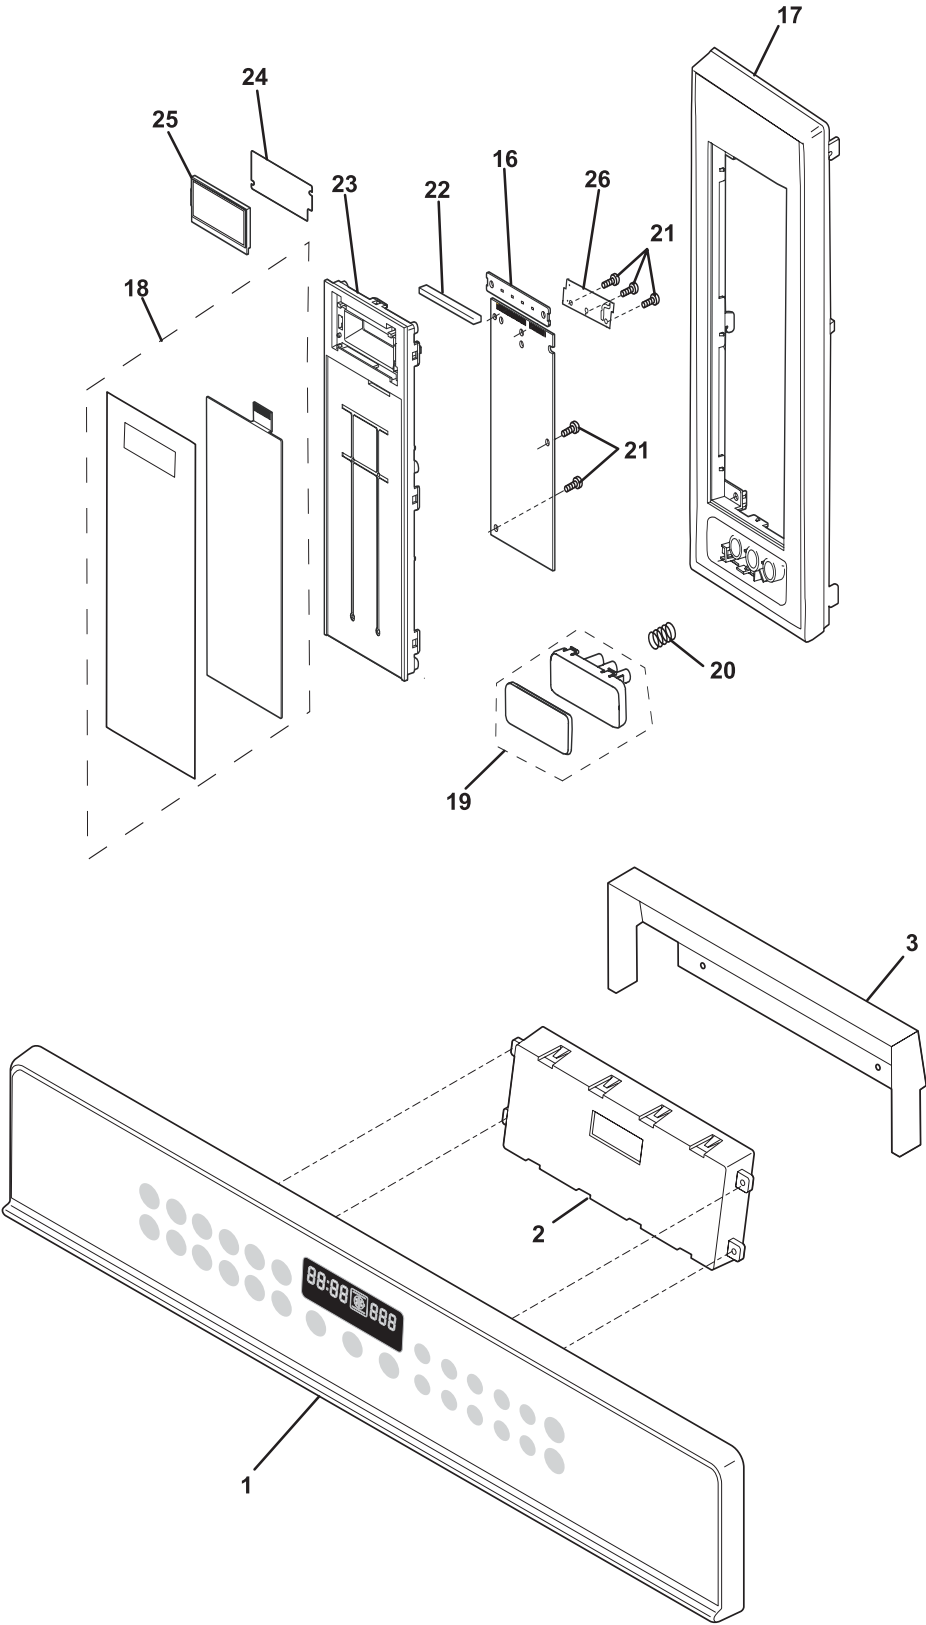


CGLEB27M9ESA

CONTROL PANEL

Model Index: **A** GLEB30M9E (GLEB30M9ESA)
B GLEB30M9E (GLEB30M9EBA)
C GLEB30M9E (GLEB30M9EQA)

POS. NO	PART NO.		DESCRIPTION
1	318331311	A - -	Control Panel Assembly, glass, white, w/touch pad
1	318331310	- B -	Control Panel Assembly, glass, black, w/touch pad
1	318331312	- - C	Control Panel Assembly, glass, bisque, w/touch pad
2 #	316418720	A B C	Clock/Timer, electronic, ES510W1
*	316021107	A B C	Screw, hex head, 8-32, silver
3	318295701	A B C	Deflector, timer
16 #	5304440820	A B C	Control Board, printed circuit
17	5304442127	A - -	Frame, control panel, white
17	5304440821	- B -	Frame, control panel, black
17	5304440823	- - C	Frame, control panel, bisque
18 #	5304452254	A - -	Switch Assy, touch control, white, w/touch pad
18 #	5304440824	- B -	Switch Assy, touch control, black
18 #	5304440826	- - C	Switch Assy, touch control, bisque
19	5304442133	A - -	Push Button, door opener, white
19	5304440827	- B -	Push Button, door opener, black
19	5304440829	- - C	Push Button, door opener, bisque
20	5304442134	A B C	Spring, button
21	5304440282	A B C	Screw, control board, 3mm x 10mm
22	5304440832	A B C	Connector, rubber, control board
23	5304440833	A B C	Panel, touch pad mount
24 #	5304440834	A B C	LED Sheet, backlight
25 #	5304440835	A B C	LCD, display
26	5304440836	A B C	Bracket, PCB support
*	5303211311	A B C	Screw, 8 x 0.500

UPPER OVEN

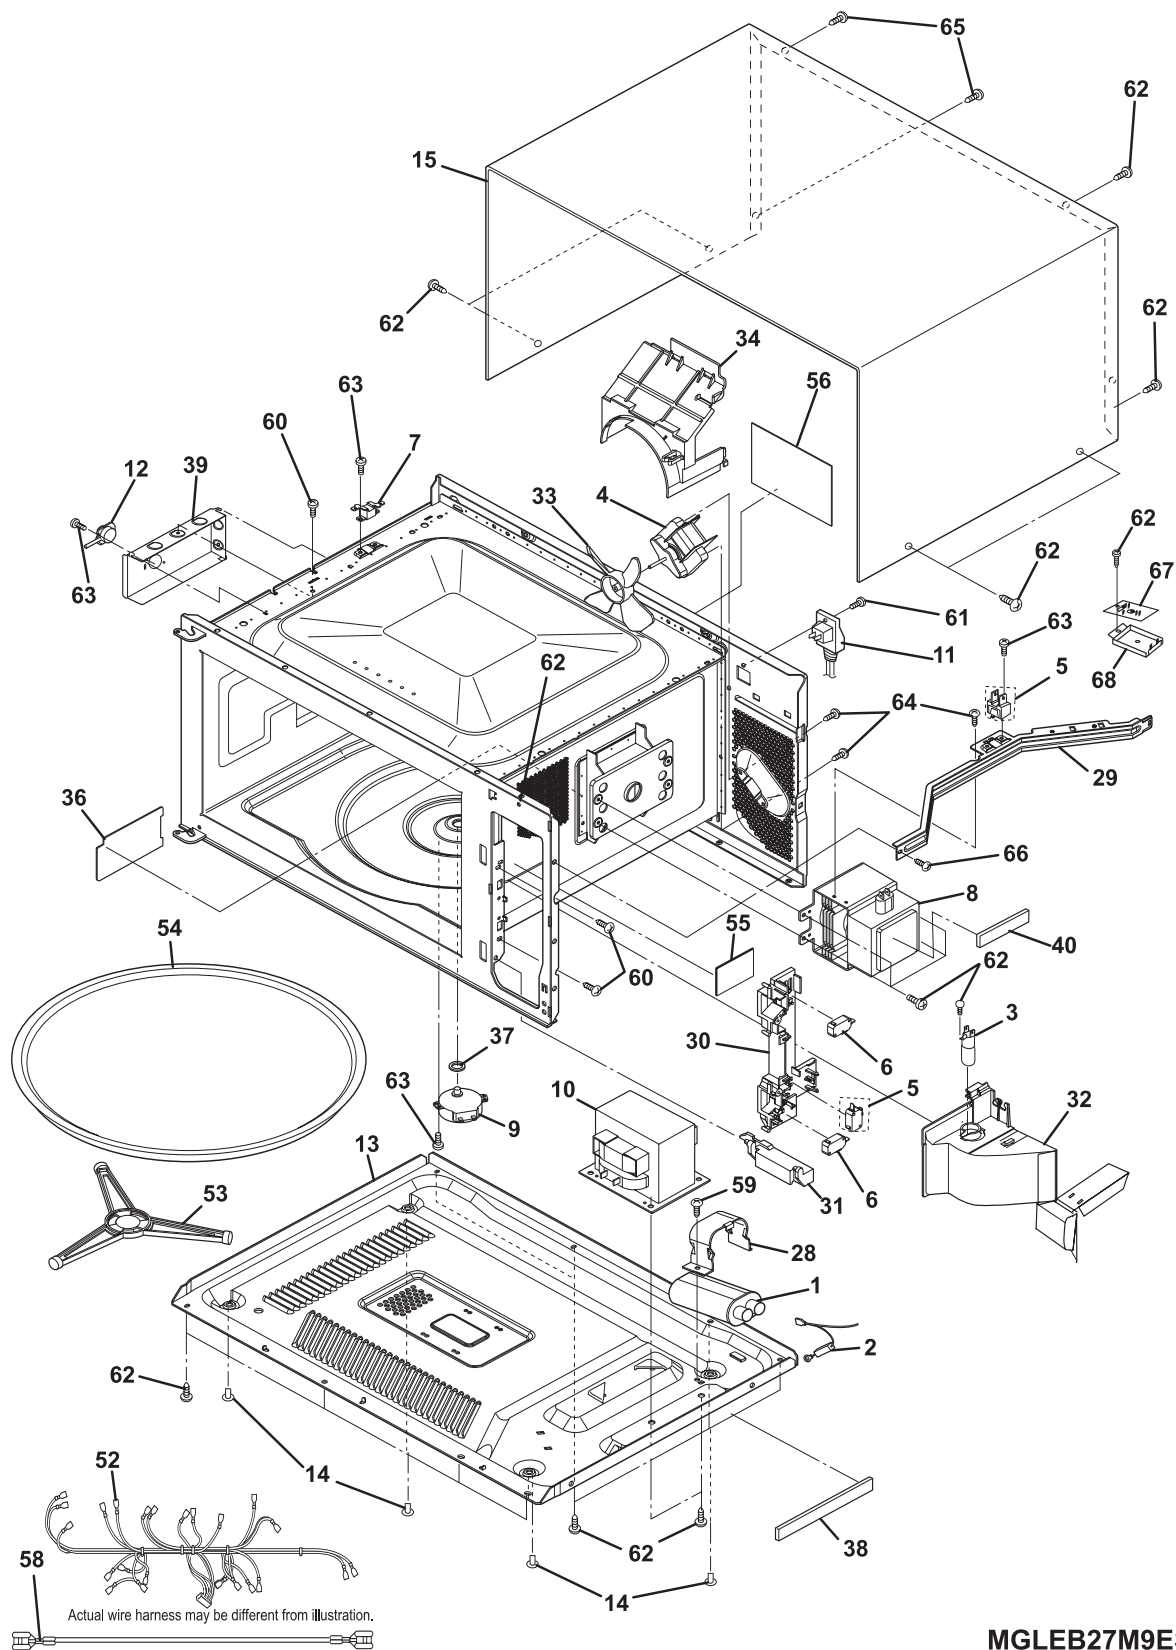


MGLEB27M9ESA

UPPER OVEN

Model Index: **A** GLEB30M9E (GLEB30M9ESA)
B GLEB30M9E (GLEB30M9EBA)
C GLEB30M9E (GLEB30M9EQA)

POS. NO	PART NO.		DESCRIPTION
1 #	5304440777	A B C	Capacitor, high voltage
2 #	5304440778	A B C	Rectifier, high voltage
3 #	5304440779	A B C	Lamp Assy, with socket
4 #	5304448490	A B C	Motor, cooling fan
5 #	5303319559	A B C	Switch, monitor, with CT fuse
6 #	5304440026	A B C	Switch, sec. interlock, door
7 #	5304440780	A B C	Fuse, cavity temp, 20 Amp, 250 V
8 #	5304440781	A B C	Magnetron
9 #	5304448832	A B C	Motor, turntable
10 #	5304440783	A B C	Transformer, power
11 #	5304440784	A B C	Power Cord, electric
12 #	5304440785	A B C	Sensor, abs. humidity, cook control
13	5304440814	A B C	Base, unit chassis
14	5304442125	A B C	Insert, threaded, (4)
15	5304440817	A - -	Cabinet, outer casing, white
15	5304440816	- B -	Cabinet, outer casing, black
15	5304440818	- - C	Cabinet, outer casing, bisque
28	5304440838	A B C	Retainer, capacitor strap
29	5304440839	A B C	Bracket, chassis support
30	5304440840	A B C	Latch Hook
31	5304440841	A B C	Lever, door release
32	5304442135	A B C	Duct, magnetron
33 #	5304440843	A B C	Fan Blade, cooling fan
34	5304440844	A B C	Duct, cooling fan
36	5304440845	A B C	Cover, waveguide
37	5304440288	A B C	Bushing, motor shaft, turntable
38	5304441909	A B C	Cushion, base plate pad
39	5304440847	A B C	Duct, AH sensor
40	5304441910	A B C	Cushion, magnetron pad
52	5304452260	A B C	Harness, wiring
53	5304440284	A B C	Support Assy, turntable
54	5304440868	A B C	Tray, turntable, glass
55	5304440334	A B C	Label, Caution-monitor
56	5304440333	A B C	Label, Caution-DHHS
58 #	5304440870	A B C	Wire, high voltage-A
59	5303319636	A B C	Screw
60	5303319641	A B C	Screw
61	5304440871	A B C	Screw, 4mm x 12mm, ground
62	5304440340	A B C	Screw, 4mm x 12mm
62	5304452261	A B C	Screw, outer casing
63	5303319633	A B C	Screw, 3mm x 8mm
64	5304440872	A B C	Screw, 4mm x 8mm
65	5304440873	A B C	Screw, torx head, tamper proof
66	5304440874	A B C	Screw
67 #	5304451818	A B C	Filter, noise, electronic
68	5303322975	A B C	Bracket, noise filter, angle


LOWER OVEN

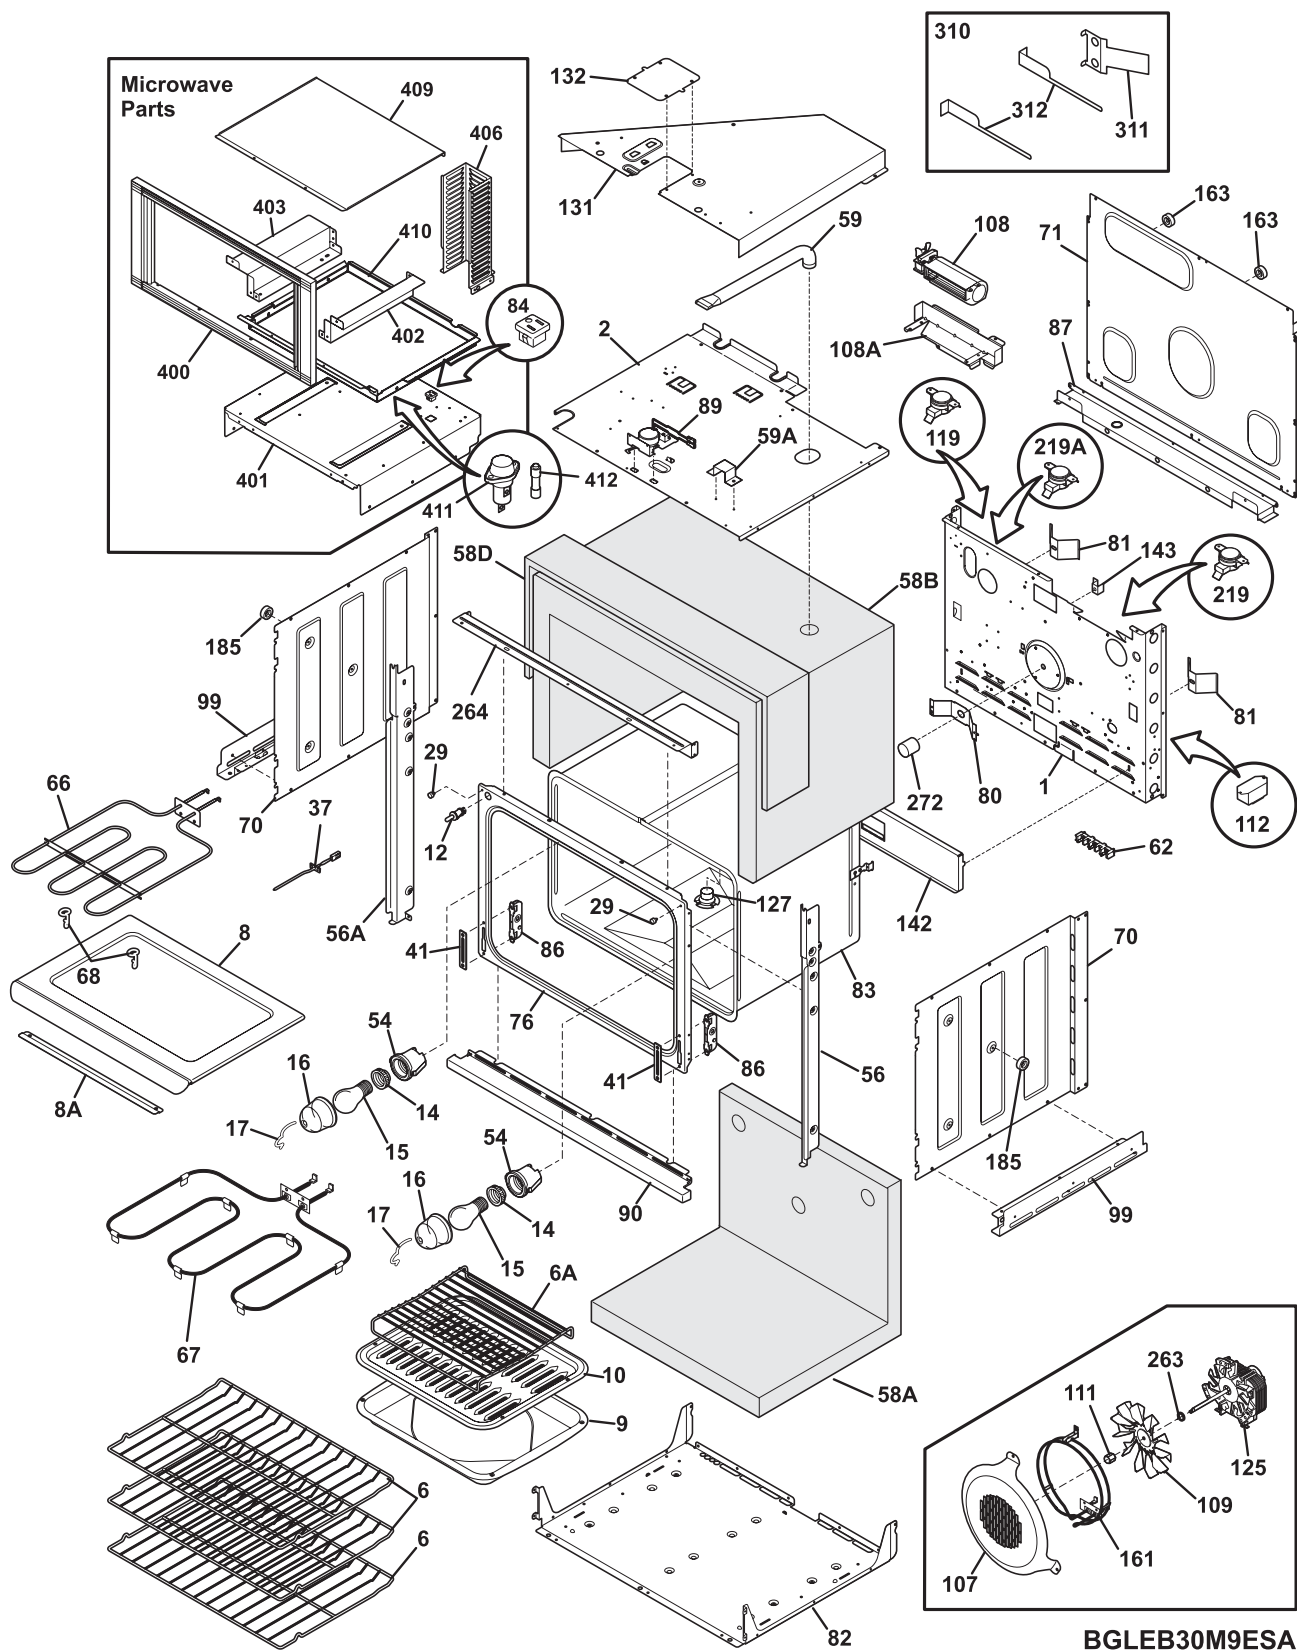

LOWER OVEN

Model Index: **A** GLEB30M9E (GLEB30M9ESA)
B GLEB30M9E (GLEB30M9EBA)
C GLEB30M9E (GLEB30M9EQA)

POS. NO	PART NO.		DESCRIPTION
1	318259202	A B C	Back, main
2	318258900	A B C	Shield, insulation, upper
6	318262503	A B C	Rack, oven
6A	318219500	A B C	Rack, broiler pan
8	318262001	A B C	Cover, element
8A	318318600	A B C	Bracket, element, hidden bake
9	5303317977	A B C	Pan, broiler
10	5303317976	A B C	Insert, broiler pan
12 #	318089917	A B C	Switch, light
14	318224000	A B C	Receptacle, oven light
14*	318268099	A B C	Insulation, oven light
15	5303013071	A B C	Bulb/Lamp, light
16	3201911	A B C	Cover, oven light, glass
17	5304400195	A B C	Retainer, light cover
29	318147411	A B C	Bumper, (2)
37 #	316217002	A B C	Probe, oven temp
41	5303310526	A B C	Cover, hinge cutout
*	5303325980	A B C	Screw, 10-32 x 0.437
54	318222400	A B C	Housing, oven light
56	318276302	A - -	Trim, side filler, white, RH
56	318276304	- B -	Trim, side filler, black, RH
56	318276306	- - C	Trim, side filler, bisque, RH
56A	318276303	A - -	Trim, side filler, white, LH
56A	318276305	- B -	Trim, side filler, black, LH
56A	318276307	- - C	Trim, side filler, bisque, LH
58A	318285055	A B C	Insulation, oven wrapper
58B	318285056	A B C	Insulation, oven back
58D	318285058	A B C	Insulation, 1/2" thick, 43 x 9.5
59	318072560	A B C	Duct, oven vent
59A	318261600	A B C	Bracket, vent tube
62	316056000	A B C	Terminal Block
62*	5303323139	A B C	Screw, 10-24 x 0.906
62*	5303323144	A B C	Nut, 10-32
66 #	318255600	A B C	Element, broil, 2750W
67	318254901	A B C	Element, bake, 3400W, 8 pass
68	5304403015	A B C	Support, hanger, (2), broil element
70	318259100	A B C	Shield, insulation, sides, (2)
71	318260007	A B C	Panel, rear box
76	318056217	A B C	Front, oven
80	5303320846	A B C	Plate, oven mtg
81	318192400	A B C	Spring, oven
82	318258707	A B C	Shield, insulation, lower
83	318261400	A B C	Liner, oven assy
84 #	318146828	A B C	Outlet-electrical, miniature, black-glossy
86	5303310524	A B C	Receptacle, hinge
87	318260600	A B C	Bracket, cable mtg.
89#	318261202	A B C	Motor, latch assy
90	318259700	A - -	Trim, oven front, white, bottom

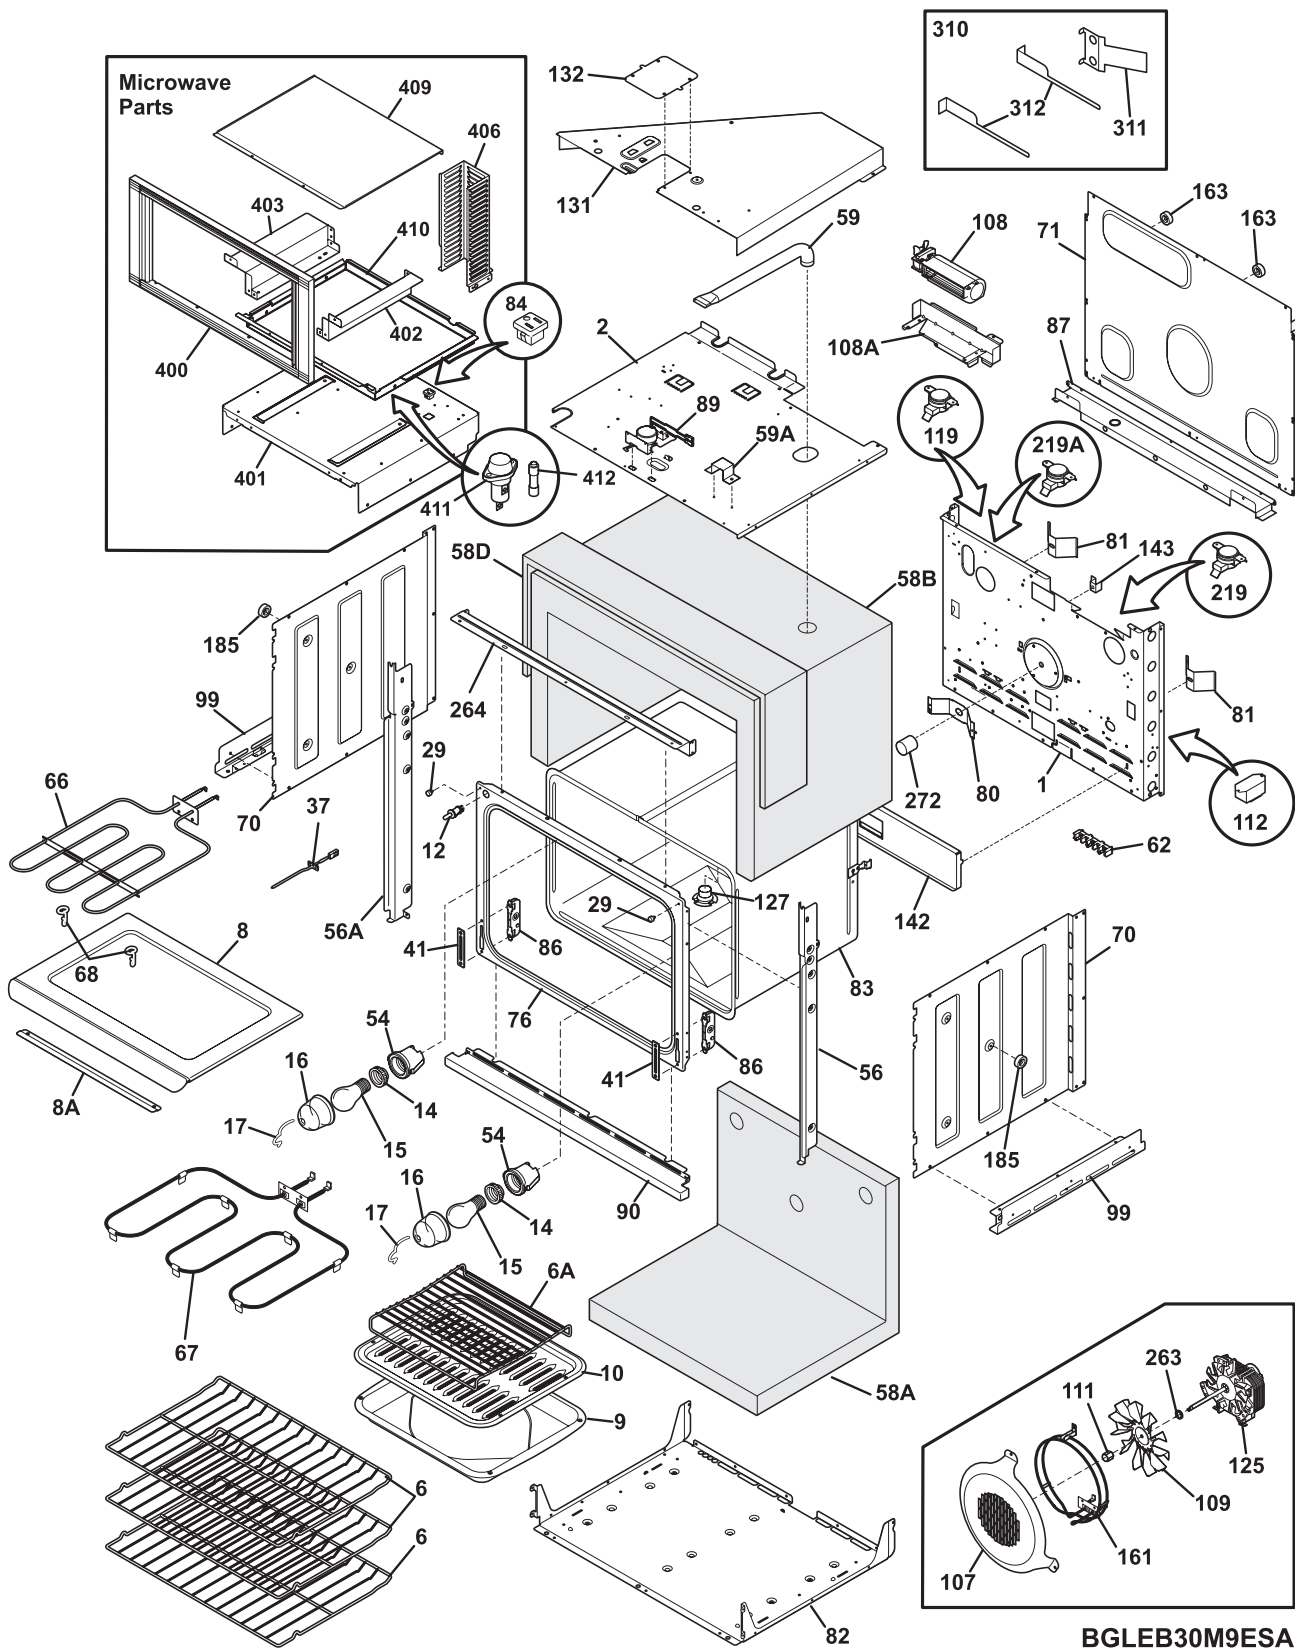
LOWER OVEN**BGLEB30M9ESA**

LOWER OVEN

Model Index: **A** GLEB30M9E (GLEB30M9ESA)
B GLEB30M9E (GLEB30M9EBA)
C GLEB30M9E (GLEB30M9EQA)

POS. NO	PART NO.		DESCRIPTION
90	318259701	- B -	Trim, oven front, black, bottom
90	318259702	- - C	Trim, oven front, bisque, bottom
99	318256200	A B C	Bracket, side, bottom, (2)
107	318219401	A B C	Cover, fan
108#	318073018	A B C	Motor, blower
*	08016432	A B C	Screw, truss head, 8-18 x 0.375
108A	318251300	A B C	Bracket, fan support
109	316136400	A B C	Blade, fan
111	316136600	A B C	Nut, fan retainer
112#	318112701	A B C	Relay
119#	318004900	A B C	Switch, thermal
125#	316415800	A B C	Motor, fan
125*	5303316994	A B C	Insulation, 3.81 x 3.13
127	318317100	A B C	Adapter Assembly, vent tube, w/converter
131	318272900	A B C	Box, vent
132	318003000	A B C	Plate, shield
142	318123910	A B C	Deflector
143	318172904	A B C	Support, wire
161#	318255503	A B C	Element, convection, 350 W
163	318014111	A B C	Spacer
185	318014700	A B C	Spacer, oven shield, (4)
219#	318003614	A B C	Thermostat, safety
219A	318003613	A B C	Thermostat, safety
263	316136500	A B C	Washer, flat
264	318257701	A B C	Trim, oven, black, front
272	318249401	A B C	Tube, protector
310	5304440067	A B C	Cabinet Mounting Kit
311	318246010	A B C	Bracket, cabinet mtg, (2)
311*	5304438005	A B C	Screw, 6 x 1, black
312	318246702	A B C	Tool, cabinet bracket, RH
312	318246703	A B C	Tool, cabinet bracket, LH
400	318275700	- B -	Trim Assembly, microwave, 30", black
400	318275701	A - -	Trim Assembly, microwave, 30", white
400	318275702	- - C	Trim Assembly, microwave, 30", bisque
401	318297201	A B C	Plate, support, microwave, 30"
402	318276202	A B C	Bracket, base pad, RH
403	318276203	A B C	Bracket, base pad, LH
406	318277200	A B C	Shield, microwave rear
409	318295300	A B C	Bracket, top trim
410	318297101	A B C	Flue, black
411#	5304442354	A B C	Holder, fuse
412#	5304442353	A B C	Fuse, 20 Amp
* #	318078543	A B C	Box & wires assy
*	318231737	A B C	Harness, wiring, main
*	5303323136	A B C	Screw ground
*	5303211311	A B C	Screw, 8 x 0.500
*	5303323277	A B C	Screw, 8-18 X 13/32
*	5303324184	A B C	Screw, 8-18 x 5/16, black, (4)
*	5304436875	A B C	Screw, 8-18 X 1/2, black

DOORS

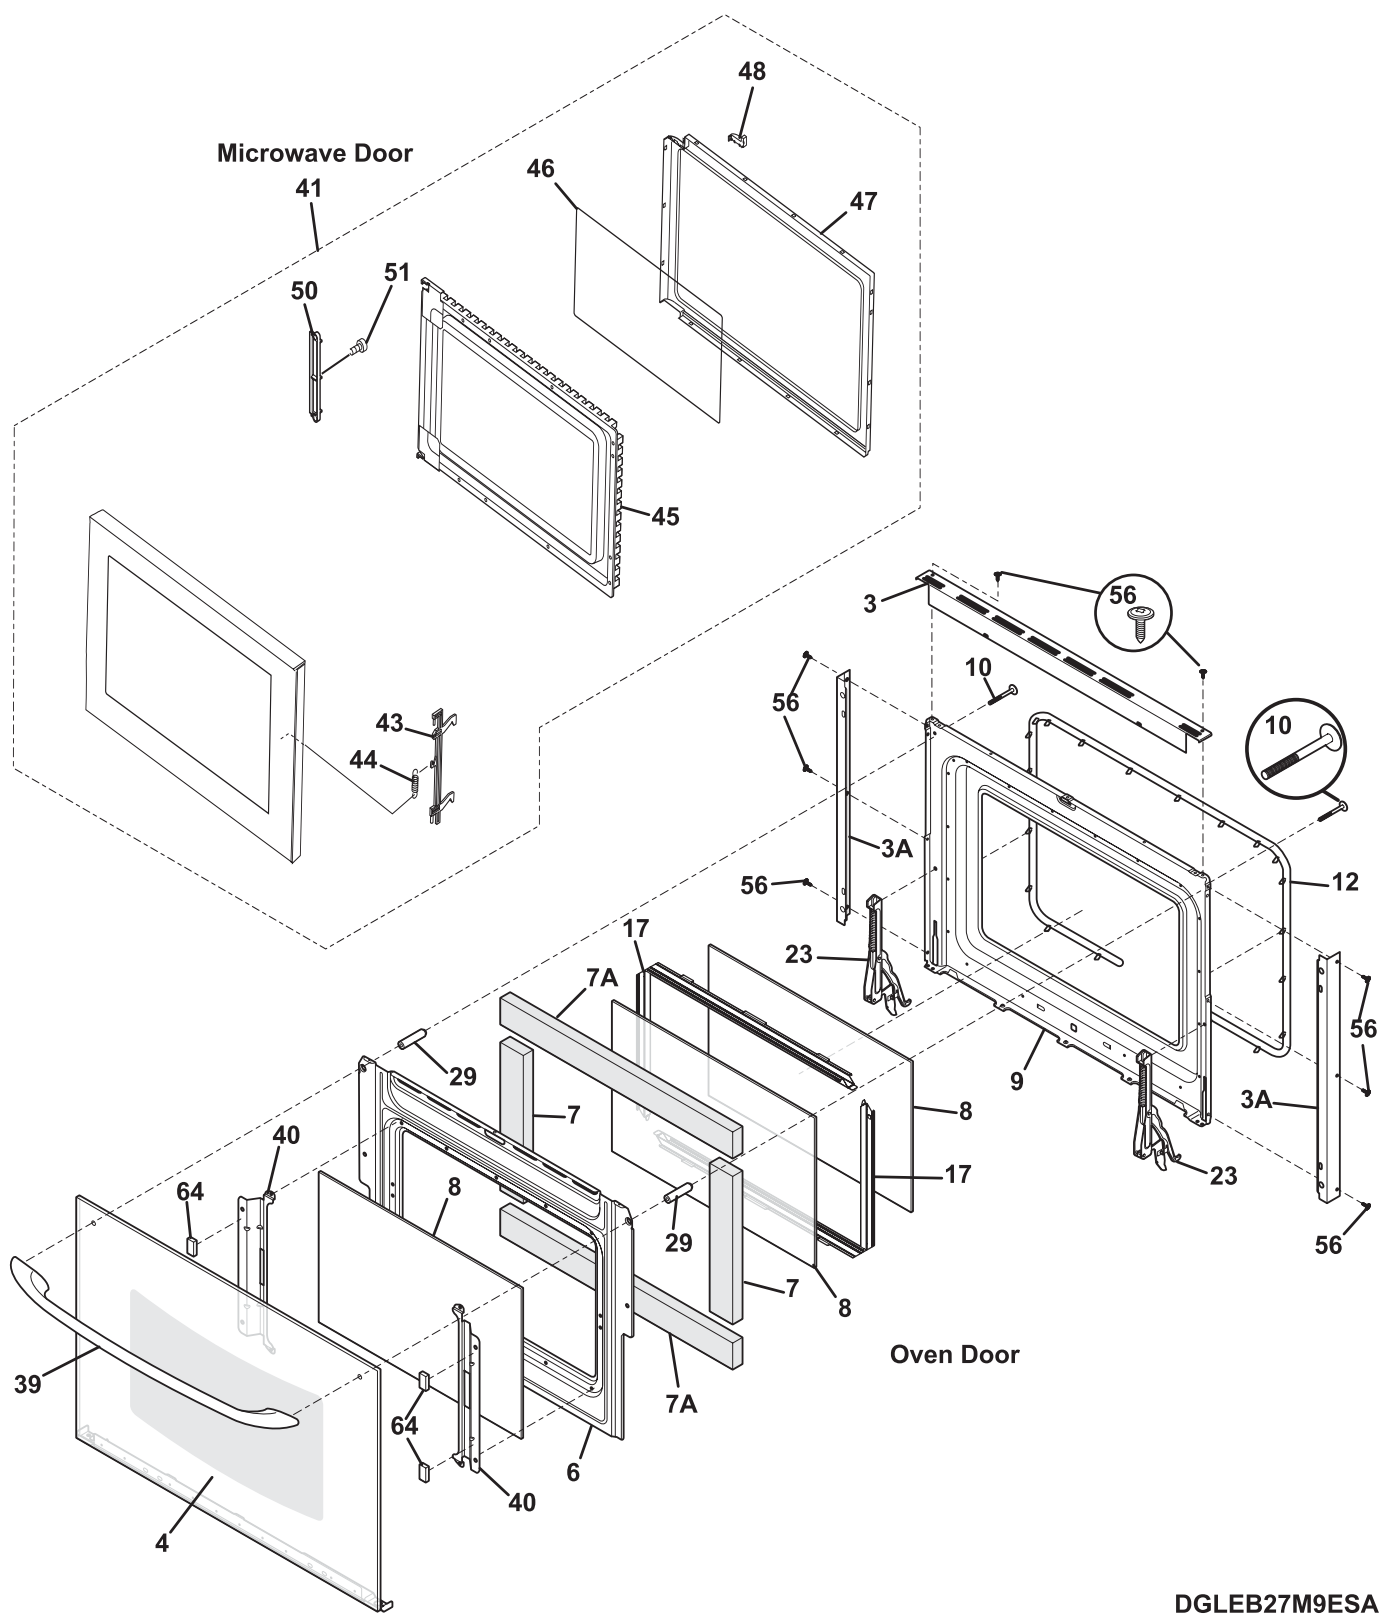

DGLEB27M9ESA

DOORS

Model Index: A GLEB30M9E (GLEB30M9ESA)
 B GLEB30M9E (GLEB30M9EBA)
 C GLEB30M9E (GLEB30M9EQA)

POS. NO	PART NO.		DESCRIPTION
3	318260201	A B C	Trim, oven door, black, upper
3A	318260401	A B C	Trim, oven door, side, (2)
4	318261301	A - -	Glass Assy., oven door, white, outer, w/trim
4	318261300	- B -	Glass Assy., oven door, black, outer, w/trim
4	318261302	- - C	Glass Assy., oven door, bisque, outer, w/trim
6	318260500	A B C	Baffle, door
7	318285057	A B C	Insulation, oven door
7A	318285062	A B C	Insulation, oven door
8	316117500	A B C	Glass, oven door, heat barrier
9	318259601	A B C	Liner, oven door
10	5304416408	A B C	Screw, 10-24 x 1.750, handle mtg
12	318053130	A B C	Seal, oven door
17	316402403	A B C	Spacer, door glass, (2)
23	5303310828	A B C	Hinge, oven door, (2)
29	318014402	A B C	Spacer, door
39	316203001	A - -	Handle, door, white
39	318231200	- B -	Handle, black
39	316203003	- - C	Handle, door, bisque
40	318242700	A B C	Bracket, glass holder, (2)
41	5304452255	A - -	Door Assembly, complete, white
41	5304452257	- B -	Door Assembly, complete, black
41	5304452256	- - C	Door Assembly, complete, bisque
43	5304440856	A B C	Latch, door
44	5304440316	A B C	Spring, door latch
45	5304442144	A - -	Panel, inner door, white
45	5304440857	- B -	Panel, inner door, black
45	5304440859	- - C	Panel, inner door, bisque
46	5304440860	A B C	Seal, door, film
47	5304440861	A B C	Frame, choke cover, inner door
48	5304442145	A B C	Door Stop
50	5304440862	A B C	Door Stop
51	5304452259	A B C	Screw
56	5304436875	A B C	Screw, 8-18 X 1/2, black
64	318165800	A B C	Spacer, (2)
*	5303323277	A B C	Screw, 8-18 X 13/32

WIRING DIAGRAM

