

JENN-AIR® Freestanding Electric Range with Double Oven

PRODUCT MODEL NUMBERS

JER8895BA


Electrical: Range must be connected to the proper electrical voltage and frequency as specified on the model/serial number rating plate. The model/serial number rating plate is located behind the control panel or on the oven frame behind the storage drawer panel.

This range is manufactured with the neutral terminal connected to the cabinet. Use a 3-wire, UL listed, 40- or 50-amp power supply cord (pigtail). If local codes do not permit ground through the neutral, use a 4-wire power supply cord rated at 250 volts, 40 or 50 amps and investigated for use with ranges.

A time-delay fuse or circuit breaker is recommended.

The range can be connected directly to the fused disconnect (or circuit breaker box) through flexible or nonmetallic sheathed, copper or aluminum cable.

PRODUCT DIMENSIONS

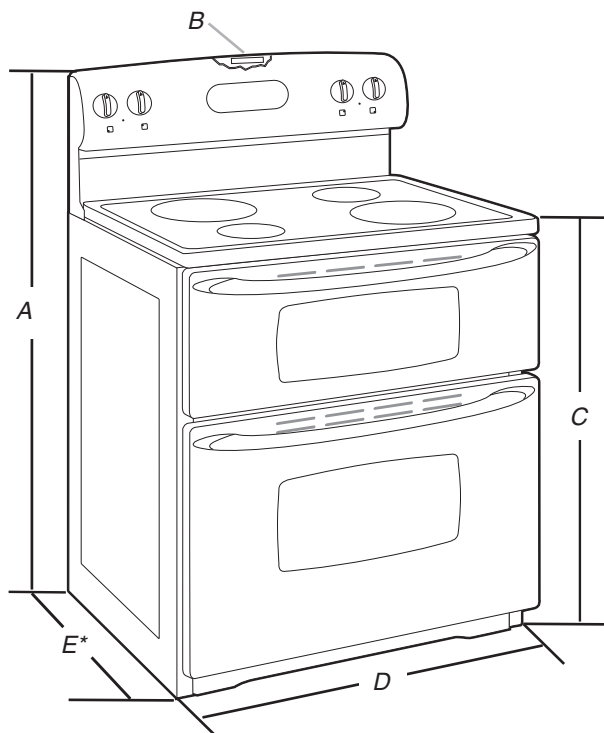


- A. 46-7/8" (119.9 cm)
- B. Model/serial number plate (located behind the control panel)*
- C. 35-7/8" (91.4 cm)
- D. 29-7/8" (75.9 cm)
- E. 26-5/16" - 27-1/4" (66.8 - 69.2 cm)**

*Serial number plate may be rotated up from behind the control panel for viewing from the front of the range.

**Excludes handle. Dimension given is from wall to front of oven door and will vary based on electric outlet receptacle installation.

CABINET OPENING DIMENSIONS

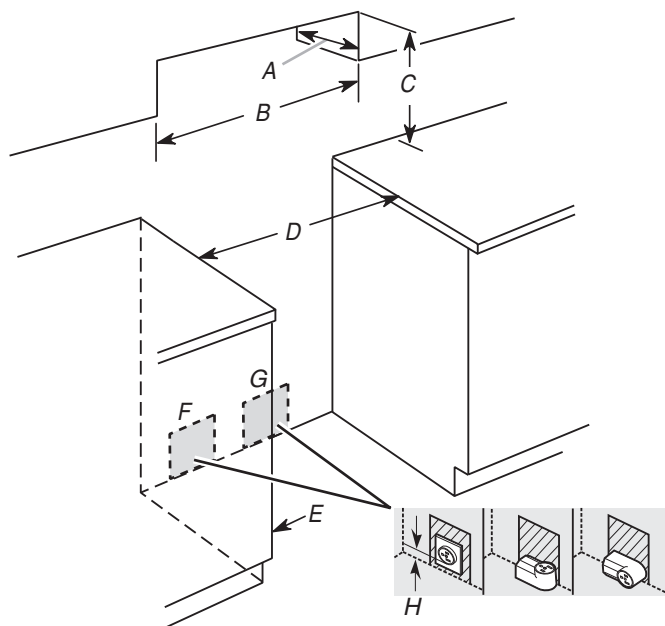

Cabinet opening dimensions shown are for 25" (64 cm) countertop depth, 24" (61 cm) base cabinet depth and 36" (91.4 cm) countertop height. If installing a range hood or microwave hood combination above the range, follow the range hood or microwave hood combination installation instructions for dimensional clearances above the cooktop surface. A freestanding range may be installed next to combustible walls with zero clearance.

- A. 13" (33 cm) upper cabinet depth
- B. 30" (76.2 cm) min. opening width
- C. For minimum clearance to the top of the cooktop, see NOTE.
- D. 30" (76.2 cm) min. opening width
- E. Cabinet door or hinge should not extend into cutout.
- F. 3-wire shaded area* - 7" (17.8 cm) min. from left side cabinet, 5-3/4" (14.6 cm) max. from floor, 6" (15.2 cm) max. width
- G. 4-wire shaded area* - 10" (25.4 cm) min. from right side cabinet, 5-3/4" (14.6 cm) max. from floor, 6" (15.2 cm) max. width
- *Nothing located in shaded areas can extend more than 1-1/2" (3.8 cm) from wall or range will not slide all the way back.
- H. 1-1/2" (3.8 cm) min. from floor if using a flush mount outlet.

NOTE: 24" (61 cm) minimum when bottom of wood or metal cabinet is protected by not less than 1/4" (0.64 cm) flame retardant millboard covered with not less than No. 28 MSG sheet steel, 0.015" (0.4 mm) stainless steel, 0.024" (0.6 mm) aluminum or 0.020" (0.5 mm) copper. 30" (76.2 cm) minimum clearance between the top of the cooking platform and the bottom of an unprotected wood or metal cabinet.