# 24" Scoop Handle Dishwasher

300 Series - Stainless Steel SHS53CD5N





SHS53CD5N Stainless Steel

Also available in:

White SHS53CD2N

The 3rd rack provides the perfect space for silverware and large utensils while its V shape leaves room below for taller items.

#### **Features & Benefits**

So quiet at 46 dBA, InfoLight® shines on the floor so you know the dishwasher is running.

With PrecisionWash\*, intelligent sensors and precision spray arms target every item of every load, so dishes come out sparkling clean every time.

Enhance your cleaning experience with Wi-Fi enabled Home Connect\*. Access additional wash cycles and options or choose the right one for your needs using Smart Cycle.

	5 0 11::: 1:
Number of wash cycles	5 + 3 additional in Home Connect®
Number of options	3 + 4 additional in Home Connect®
dBA	46
Wash system	PrecisionWash®
Drying system	PureDry®
Third rack	Standard 3rd Rack
Rack adjustability	Rackmatic®
Tub material	Stainless Steel
Control type	Touch Controls
Concealed water heating element	Yes
Leak protection system	24/7 AquaStop®
Home Connect® (WiFi enabled)	Yes
NSF®-certified* sanitize option	Yes
Water softener	No
Five-level wash	Yes
Child Lock button suspension	No
Anti-Fingerprint Finish	Yes
Special features	InfoLight®, Extra Dry Option
Efficiency	
Water usage per cycle	3.5
ENERGY STAR® qualified	No
Total annual energy consumption	269 kWh
Capacity	
Number of place settings	16

Q	Home Connect
---	--------------



Technical Details		
Watts	1440 W	
Current	12 Amps	
Volts	120 V	
Frequency	60 Hz	
Power cord full length	67"	
Power cord install length from edge of unit when facing the door	Left – 45" Right – 56"	
Minimum water pressure	14 lb/sin	
Length outlet hose	78 3/4"	
Dimensions & Weight		
Overall appliance dimensions (HxWxD)	33 7/8" x 23 9/16" x 23 3/4"	
Required cutout size (HxWxD)	33 7/8" x 24" x 24"	
Adjustable feet	Yes	
Net weight	81 lbs	
Accessories-Optional		
Junction Box	SMZPCJB1UC	
Junction Box + Supply Hose Kit	SMZ3IN1UC	
Bosch Dishwasher Water Supply Hose	SMZSH1ABUC	
Drain Hose Extension Kit	SGZ1010UC	
Silverware Basket	SMZ4000UC	
Dishwasher Accessory Kit	SMZ5000	
Anti-Tarnish Silverware Cassette	SMZ5002UC	
Edge Protector + Power Cord Clip Install Kit	SMZEPCC1UC	



Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.

Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.


<sup>\*</sup>Certification to NSF/ANSI Standard 184 for residential dishwashers


# 24" Scoop Handle Dishwasher


300 Series - Stainless Steel SHS53CD5N





### **Installation Details**

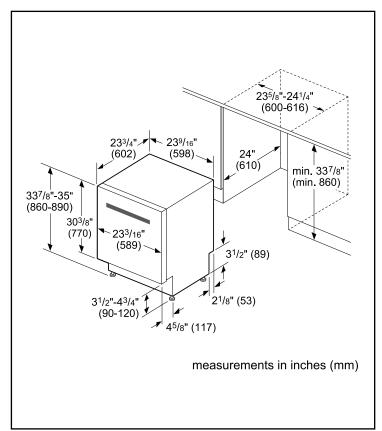

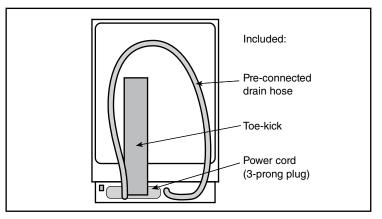

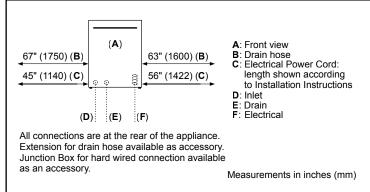

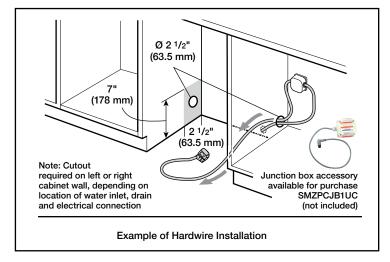

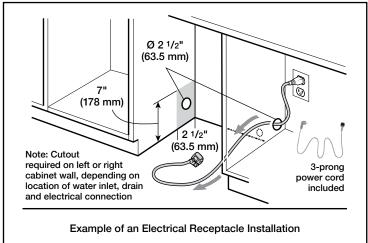

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.


Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.


# 24" Scoop Handle Dishwasher

300 Series - Stainless Steel SHS53CD5N



### **Installation Details**

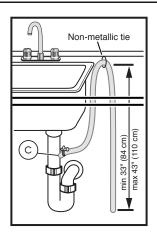

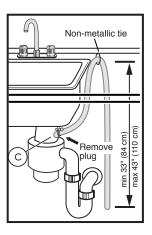

Note: Plumbing installations will vary - refer to local codes. Drain hose included is 79" (201 cm) and can be extended to a maximum of 155 3/4" (396 cm).

Always use the approved drain hose extension kit (SGZ1010UC).

Ensure a portion of the drain hose is raised between min. 33" (84 cm) and max. 43" (110 cm) above the cabinet floor.

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.