# 27" Warming Drawer

500 Series - Stainless Steel HWD5751UC





**HWD5751UC** Stainless Steel

The warming drawer keeps meals hot and is designed to match the perfectly flush fit of a Bosch wall, speed or steam oven.

#### **Features & Benefits**

The warming drawer has 3 settings to keep meals hot and ready to serve.

Installs vertically under Bosch 120V speed, or wall oven. (separate cut outs needed)

Matches Bosch built-in products. Install either flush or proud.

General Properties	
Power levels	High, low, medium
Dough proofing mode	Yes
Temperature range	100°-190° F
Timer 5 min 5 hours	Yes
Automatic shut off after 1 hour	Yes
Door opening	Push to Open
Hinges	Ball bearing hinges
Wattage heating element	450W
Control type	Illuminated TouchControl
Capacity	
Cavity capacity (cu. ft.)	1.9 cu. ft.
Technical Details	
Watts (W)	450 W
Circuit breaker (A)	15 A
Volts (V)	120 V
Frequency (Hz)	60 Hz
Power cord length (in)	84"
Plug type	120V-3 prong

Dimensions & Weight	
Overall appliance dimensions (HxWxD) (in)	9 7/16" x 26 3/4 x 23 1/2"
Required cutout size (HxWxD) (in)	9 1/4" x 25 1/2" x 23 1/2"
Net weight (lbs)	50 lbs









# 27" Warming Drawer

500 Series - Stainless Steel HWD5751UC



### **Installation Details**

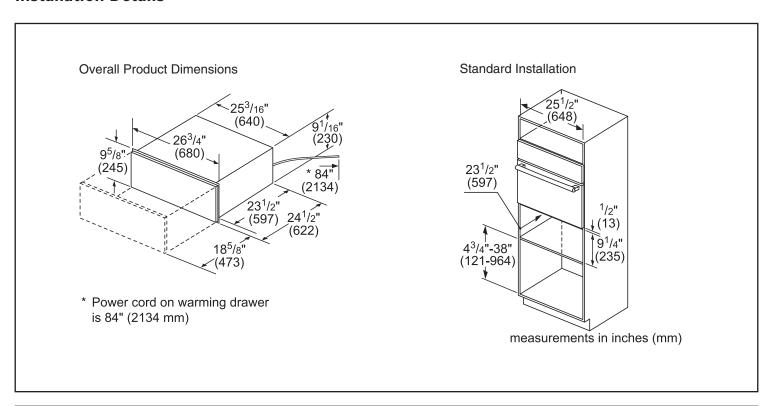

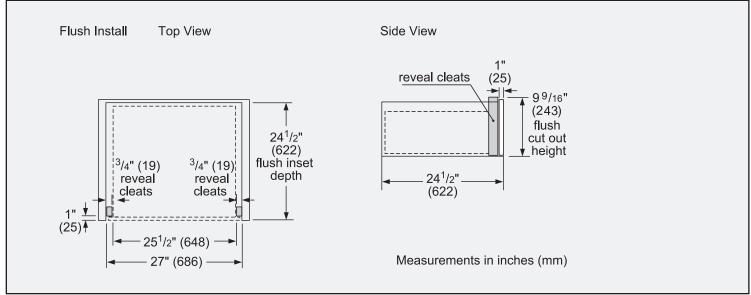

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.


Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.

### 27" Warming Drawer

500 Series - Stainless Steel HWD5751UC



### **Installation Details**

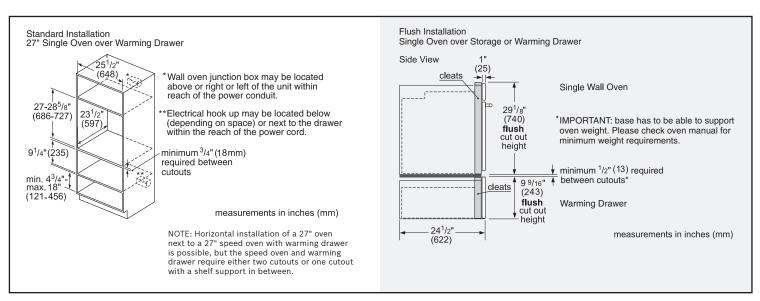

#### Flush Installation Standard Installation 27" Double Oven over Warming Drawer Double Oven over Storage or Warming Drawer Side View (25)(648)cleats Double Wall Oven 49<sup>3</sup>/4"-51<sup>1</sup>/2' 52<sup>3</sup>/16" 231/2 (1264-1308)(1326)(597 flush cut out height $9^{1}/4"(235)$ minimum 3/4" (18mm) required between cutouts \*IMPORTANT: base has to be min. 4<sup>3</sup>/<sub>4</sub>" max. 18" able to support oven weight. (121 - 456)Please check oven manual for minimum weight requirements. measurements in inches (mm) minimum \*Wall oven junction box may be located above or right or left of the unit within reach of the power conduit. $^{1}/_{2}$ " (13) required \*\*Electrical hook up may be located below between 99/16" (depending on space) or next to the drawer within the reach of the power cord. cutouts\* cleats (243)flush Warming Drawer cut out height 24<sup>1</sup>/2" (622)measurements in inches (mm)

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.

Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.