



Frigidaire

Factory Parts Catalog

Product No.	FEB27T6DBA	FEB27T6DQA	FEB27T6DSA
	37054781E4061	37054781E4041	37054781E4011
Series	27" double	27" double	27" double
Color	black	bisque	white
Market	North America	North America	North America
Wiring Diagram	318046116	318046116	318046116
Owner's Guide	318200924	318200924	318200924
Installation Instructions	316201514	316201514	316201514
Service Data Sheet	316047305	316047305	316047305
Timer Guide	318200132	318200132	318200132

 **Electrolux**

ELECTROLUX HOME PRODUCTS, INC.
P.O. Box 212378, Augusta, GA 30917


Publication No.
5995422713
04/11/23
(EN/SERVICE/ECL)
377

**DOUBLE ELECTRIC
WALL OVEN**

Model No.
FEB27T6D

Copyright © 2004 Electrolux Home Products, Inc.
All rights reserved.

CONTROL PANEL

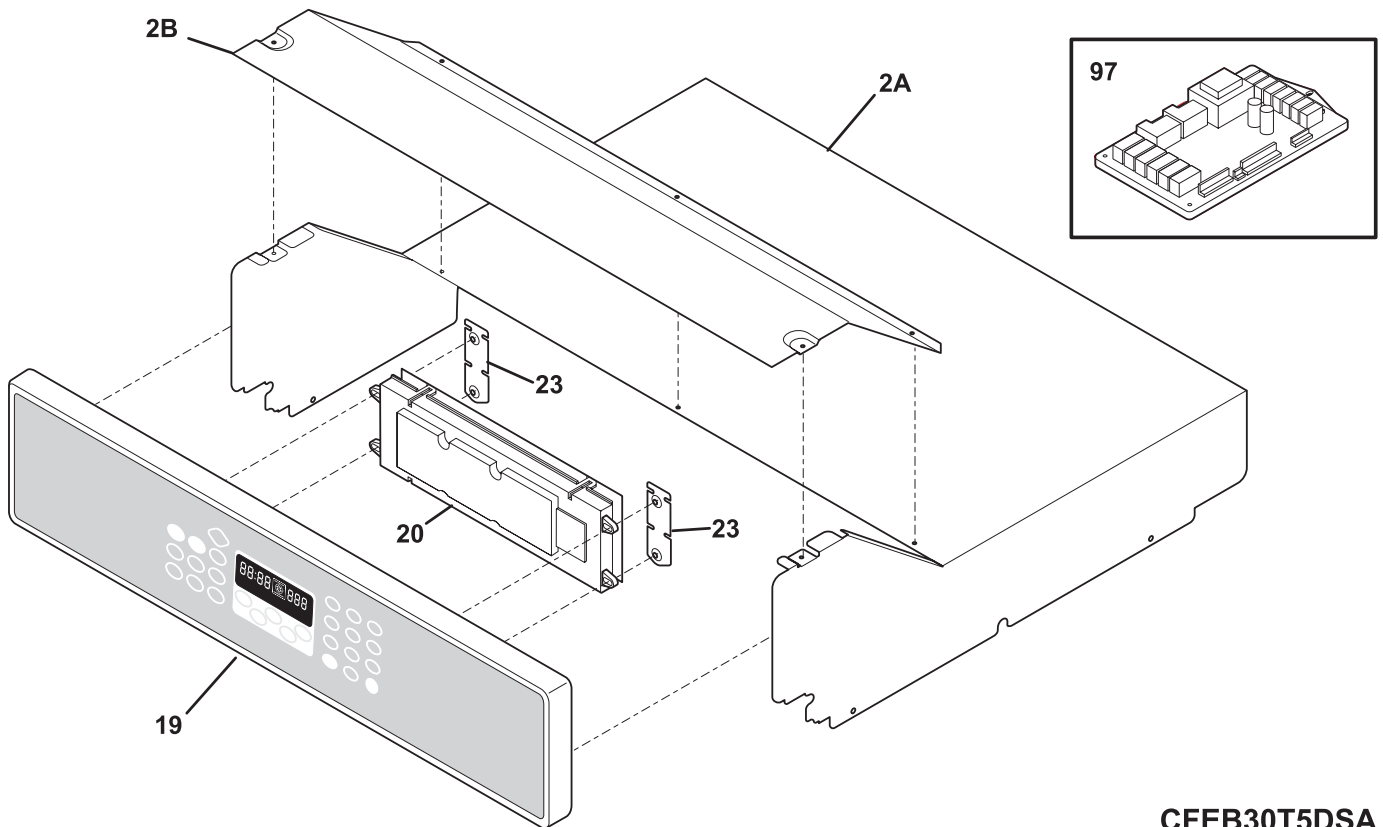


CFEB30T5DSA

CONTROL PANEL

Model Index: A FEB27T6D (FEB27T6DBA)
 B FEB27T6D (FEB27T6DQA)
 C FEB27T6D (FEB27T6DSA)

POS. NO	PART NO.		DESCRIPTION
2A	318257301	A B C	Shield, oven top
2B	318260102	A B C	Cover, box
19	318274419	A - -	Control Panel Assembly, glass, black, w/ touch pad
19	318274418	- B -	Control Panel Assembly, glass, bisque, w/ touch pad
19	318274417	- - C	Control Panel Assembly, glass, white, w/ touch pad
20 #	316429704	A B C	Control, electronic, 5800W2, dual oven
*	316021107	A B C	Screw, hex head, 8-32, silver
23	318262900	A B C	Bracket, control mtg., (2)
97	316429800	A B C	Board, relay, dual oven
*	318231704	A B C	Harness, wiring, control-relay
*	5303211311	A B C	Screw, 8 x 0.500

UPPER OVEN

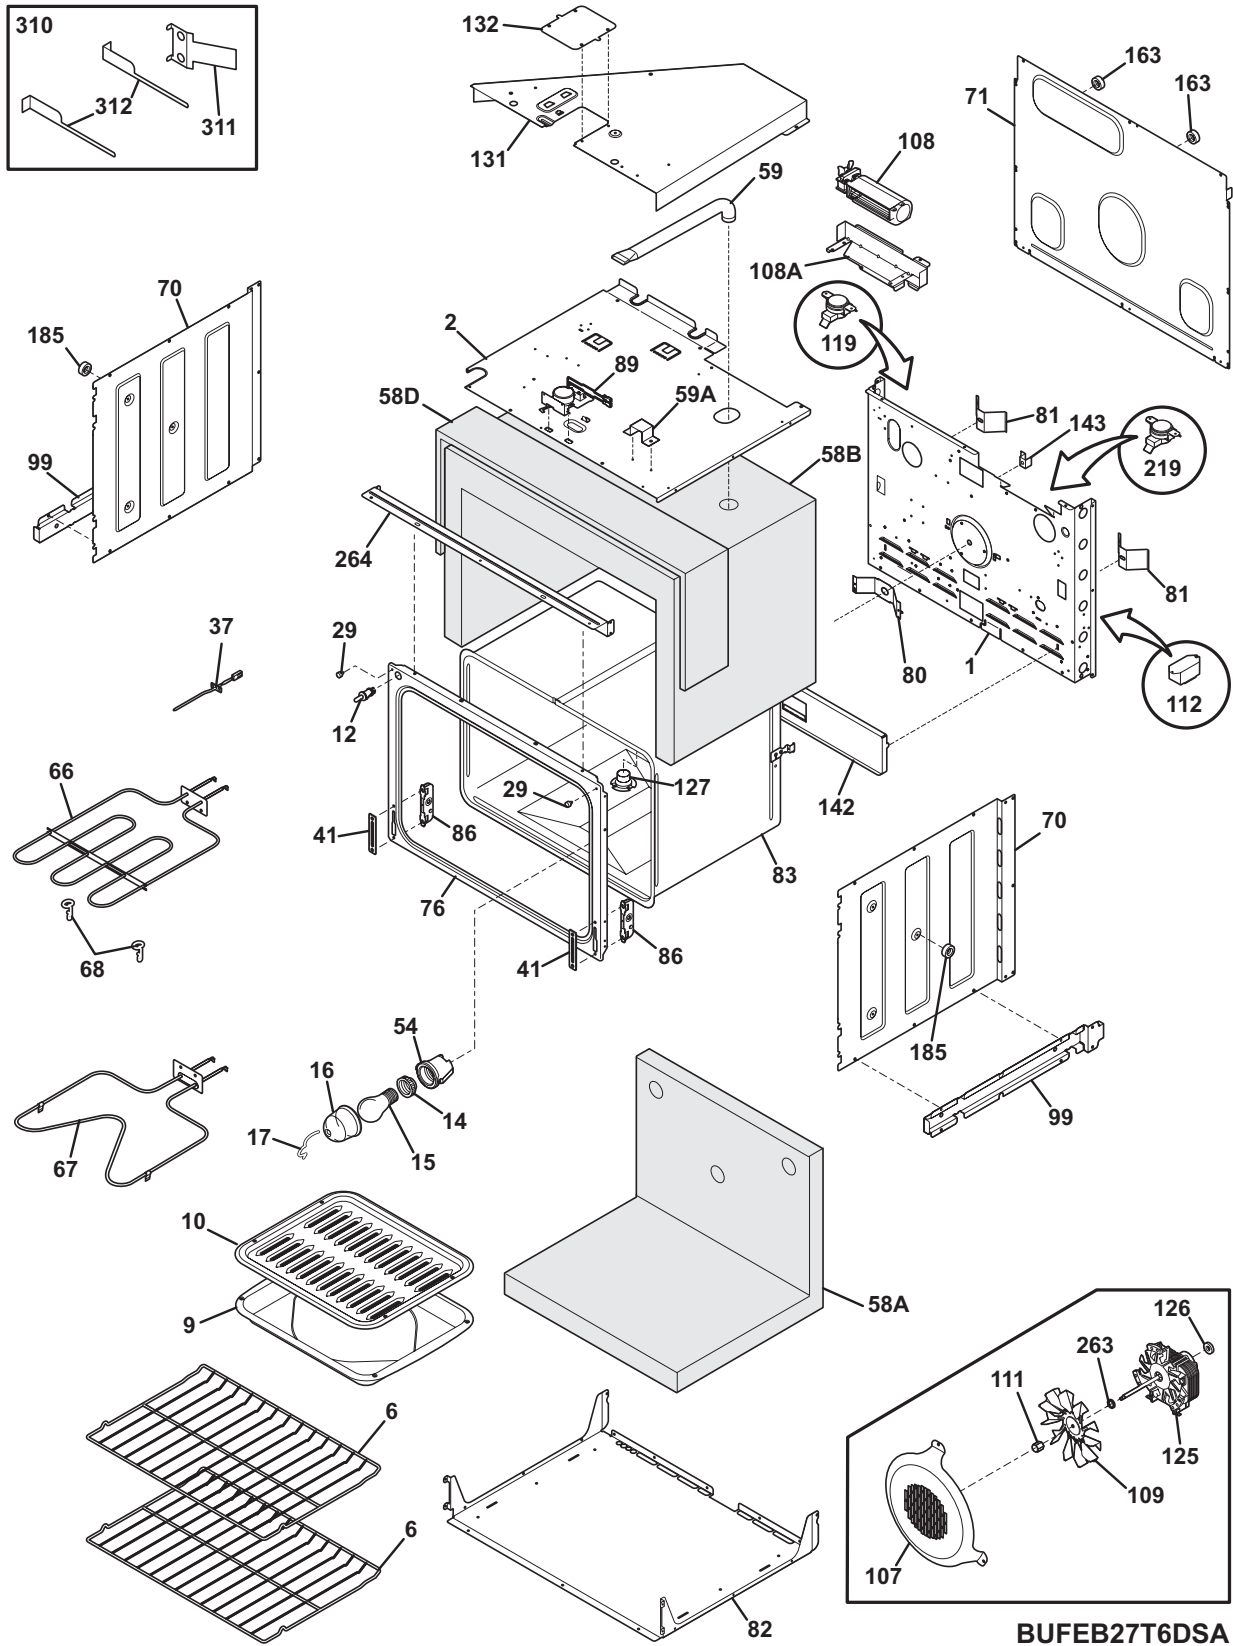


BUFEB27T6DSA

UPPER OVEN

Model Index: A FEB27T6D (FEB27T6DBA)
 B FEB27T6D (FEB27T6DQA)
 C FEB27T6D (FEB27T6DSA)

POS. NO	PART NO.		DESCRIPTION
1	318259210	A B C	Back, main
2	318258910	A B C	Shield, insulation, upper
6	318262602	A B C	Rack, oven, (2)
9	5303317977	A B C	Pan, broiler
10	5303317976	A B C	Insert, broiler pan
12 #	318089917	A B C	Switch, light
*	3015722	A B C	Clip, wire retainer
14	318224000	A B C	Receptacle, oven light
14*	318268099	A B C	Insulation, oven light
15	5303013071	A B C	Bulb/Lamp, oven light
16	3201911	A B C	Cover, oven light, glass
17	5304400195	A B C	Retainer, light cover
29	318147411	A B C	Bumper, door, (2)
37 #	316217002	A B C	Probe, oven temp
41	5303310526	A B C	Cover, hinge cutout
54	318222400	A B C	Housing, oven light
58A	318133795	A B C	Insulation, oven wrapper, back/bottom
58B	318133794	A B C	Insulation, oven wrapper, top/sides
58D	318133793	A B C	Insulation, 1/2" thick, 43 x 9.5
59	318072560	A B C	Duct, oven vent
59A	318261600	A B C	Bracket, vent tube
66 #	318255601	A B C	Element, broil, 3400W
67 #	318255103	A B C	Element, bake, 2300W
68	5304403015	A B C	Support, element hanger
70	318259100	A B C	Shield, insulation, sides, (2)
71	318260001	A B C	Panel, rear box
76	318056222	A B C	Front, oven
80	5303320846	A B C	Plate, oven mtg
81	318192400	A B C	Spring, oven
82	318258710	A B C	Shield, insulation, lower
83	318261503	A B C	Liner, oven assy
86	5303310524	A B C	Receptacle, hinge
89#	318261200	A B C	Motor, latch assy
*	318231705	A B C	Harness, latch
99	318252800	A B C	Support, side
*	5303300265	A B C	Screw, 8-18 x 0.500, chrome, (3)
107	318219401	A B C	Cover, fan
108#	318073018	A B C	Motor, blower
*	08016432	A B C	Screw, truss head, 8-18 x 0.375
108A	318251300	A B C	Bracket, fan support
109	316136400	A B C	Blade, fan
111	316136600	A B C	Nut, fan retainer
112#	318112701	A B C	Relay
119#	318004900	A B C	Switch, thermal
125#	316415800	A B C	Motor, fan
126	318142100	A B C	Washer, motor, RH, convection
127	5303310542	A B C	Adapter, vent tube, with converter
131	318272900	A B C	Box, vent

UPPER OVEN

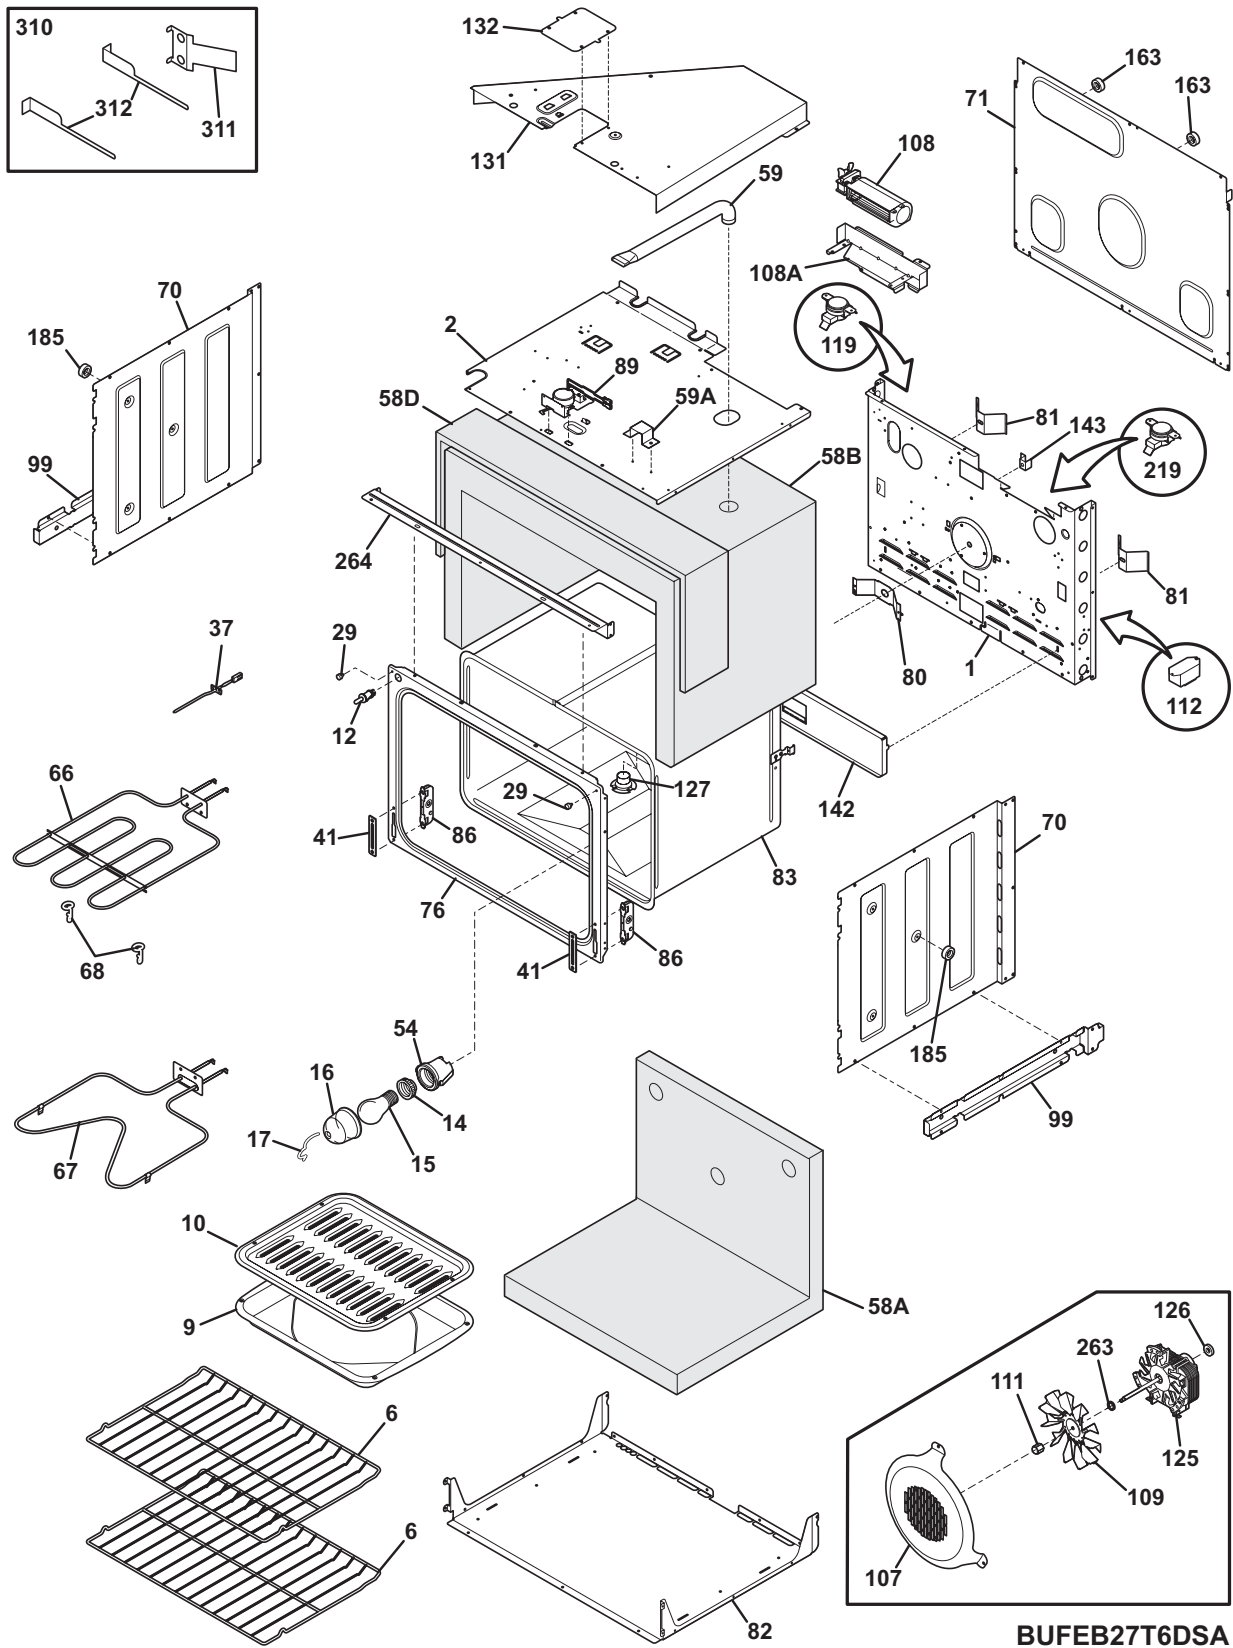


BUFEB27T6DSA

UPPER OVEN

Model Index: A FEB27T6D (FEB27T6DBA)
 B FEB27T6D (FEB27T6DQA)
 C FEB27T6D (FEB27T6DSA)

POS. NO	PART NO.		DESCRIPTION
132	318003000	A B C	Plate, shield
142	318123910	A B C	Deflector
143	318172904	A B C	Support, wire/glass
163	318014111	A B C	Spacer
185	318014700	A B C	Spacer, oven shield, (4)
219#	318003606	A B C	Thermostat, safety
263	316136500	A B C	Washer, fan motor
264	318257711	A B C	Trim, oven, black, front
310	5304440067	A B C	Cabinet Mounting Kit
311	318246010	A B C	Bracket, cabinet mtg, (2)
311*	5304438005	A B C	Screw, 6 x 1, black
312	318246702	A B C	Tool, cabinet bracket, RH
312	318246703	A B C	Tool, cabinet bracket, LH
*	3201861	A B C	Screw, 6 x 0.375, (4)
*	5303211311	A B C	Screw, 8 x 0.500
*	5303323277	A B C	Screw, 8-18 X 13/32
*	5304436875	A B C	Screw, 8-18 X 1/2, black

LOWER OVEN

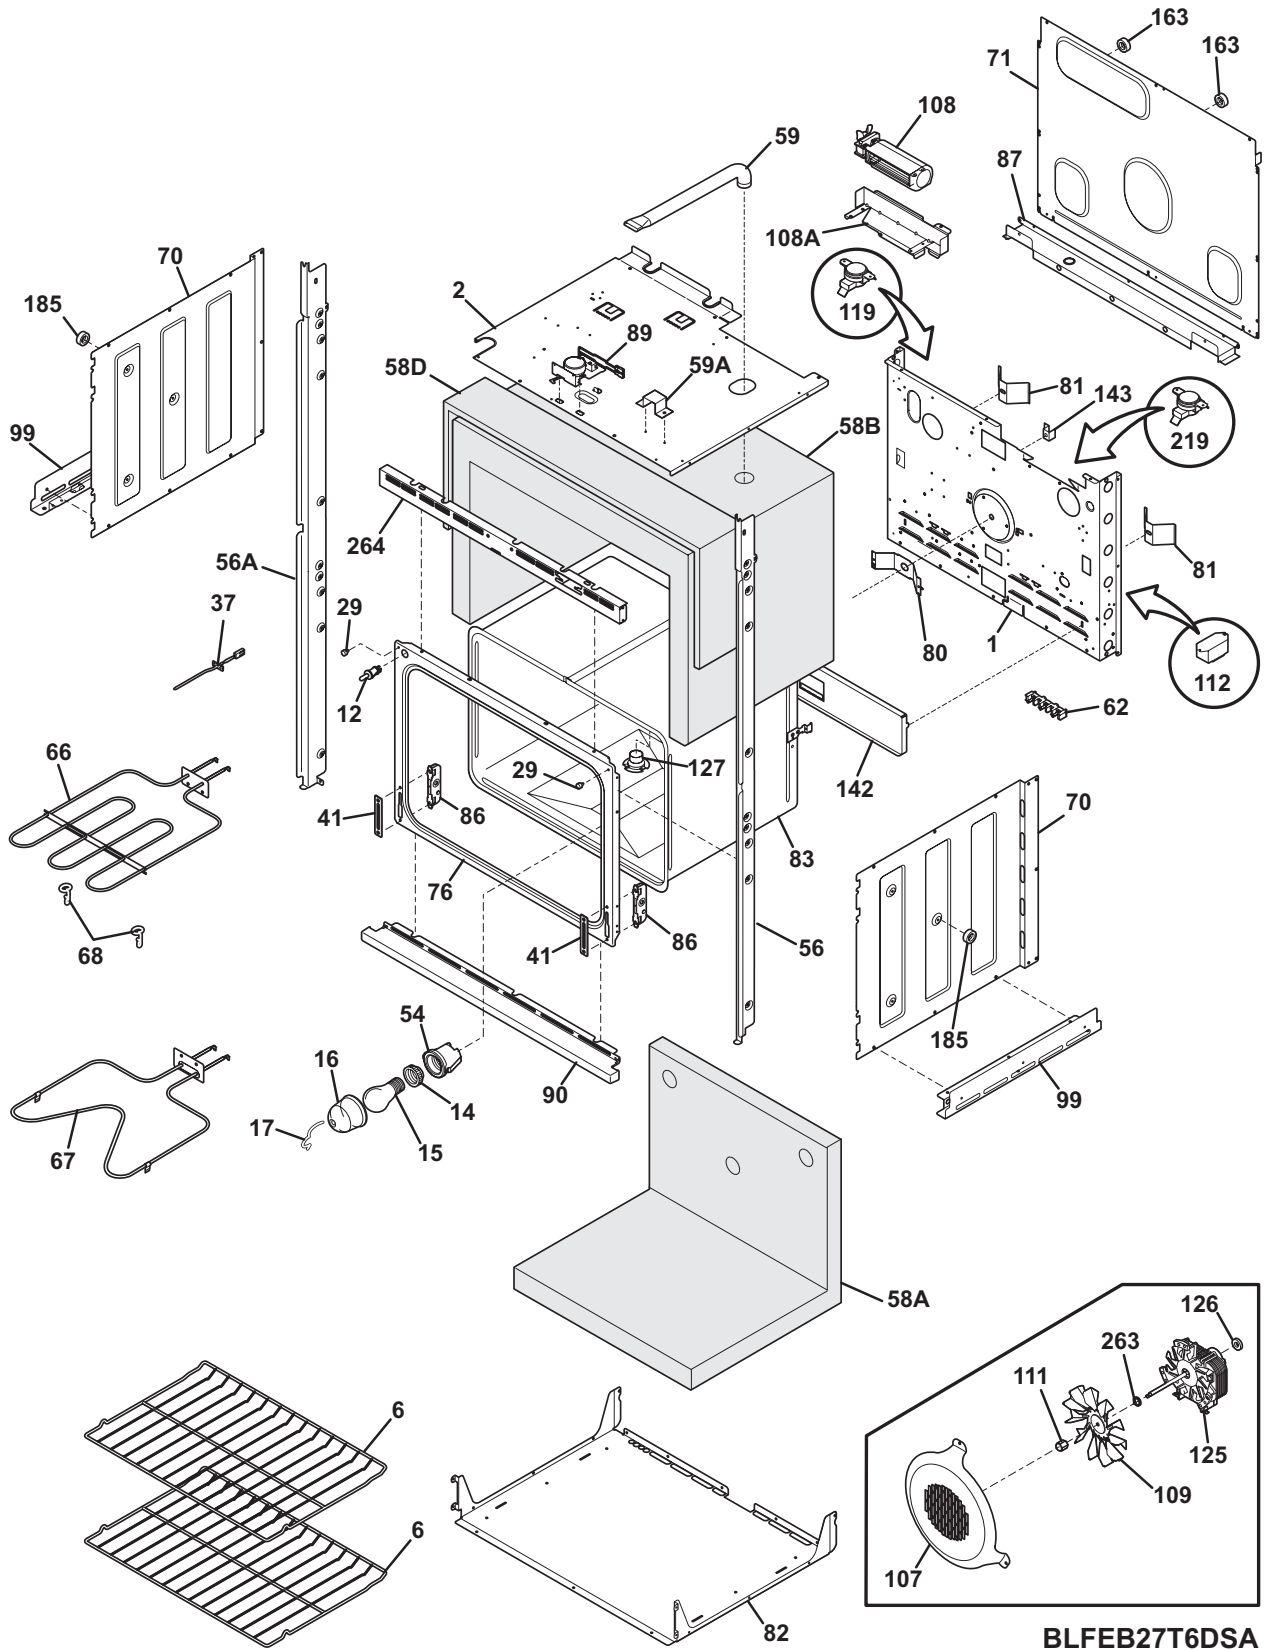


BLFEB27T6DSA

LOWER OVEN

Model Index: A FEB27T6D (FEB27T6DBA)
 B FEB27T6D (FEB27T6DQA)
 C FEB27T6D (FEB27T6DSA)

POS. NO	PART NO.		DESCRIPTION
1	318259210	A B C	Back, main
2	318258910	A B C	Shield, insulation, upper
6	318262602	A B C	Rack, oven, (2)
12 #	318089917	A B C	Switch, light
*	3015722	A B C	Clip, wire retainer
14	318224000	A B C	Receptacle, oven light
14*	318268099	A B C	Insulation, oven light
15	5303013071	A B C	Bulb/Lamp, oven light
16	3201911	A B C	Cover, oven light, glass
17	5304400195	A B C	Retainer, light cover
29	318147411	A B C	Bumper, door, (2)
37 #	316217002	A B C	Probe, oven temp
41	5303310526	A B C	Cover, hinge cutout
54	318222400	A B C	Housing, oven light
56	318259914	A - -	Trim, side filler, black, RH
56	318259916	- B -	Trim, side filler, bisque, RH
56	318259912	- - C	Trim, side filler, white, RH
56A	318259915	A - -	Trim, side filler, black, LH
56A	318259917	- B -	Trim, side filler, bisque, LH
56A	318259913	- - C	Trim, side filler, white, LH
58A	318133795	A B C	Insulation, oven wrapper, back/bottom
58B	318133794	A B C	Insulation, oven wrapper, top/sides
58D	318133793	A B C	Insulation, 1/2" thick, 43 x 9.5
59	318072560	A B C	Duct, oven vent
59A	318261600	A B C	Bracket, vent tube
62	316056000	A B C	Terminal Block
62*	5303323139	A B C	Screw, 10-24 x 0.906
62*	5303323144	A B C	Nut, 10-32
66 #	318255601	A B C	Element, broil, 3400W
67 #	318255103	A B C	Element, bake, 2300W
68	5304403015	A B C	Support, element hanger
70	318259100	A B C	Shield, insulation, sides, (2)
71	318260001	A B C	Panel, rear box
76	318056222	A B C	Front, oven
80	5303320846	A B C	Plate, oven mtg
81	318192400	A B C	Spring, oven
82	318258710	A B C	Shield, insulation, lower
83	318261503	A B C	Liner, oven assy
86	5303310524	A B C	Receptacle, hinge
87	318260601	A B C	Bracket, cable mtg.
89#	318261201	A B C	Motor, latch assy
*	318231705	A B C	Harness, latch
90	318259711	A - -	Trim, oven front, black, bottom
90	318259712	- B -	Trim, oven front, bisque, bottom
90	318259710	- - C	Trim, oven front, white, bottom
99	318256200	A B C	Bracket, side, bottom, (2)
107	318219401	A B C	Cover, fan
108#	318073018	A B C	Motor, blower

LOWER OVEN

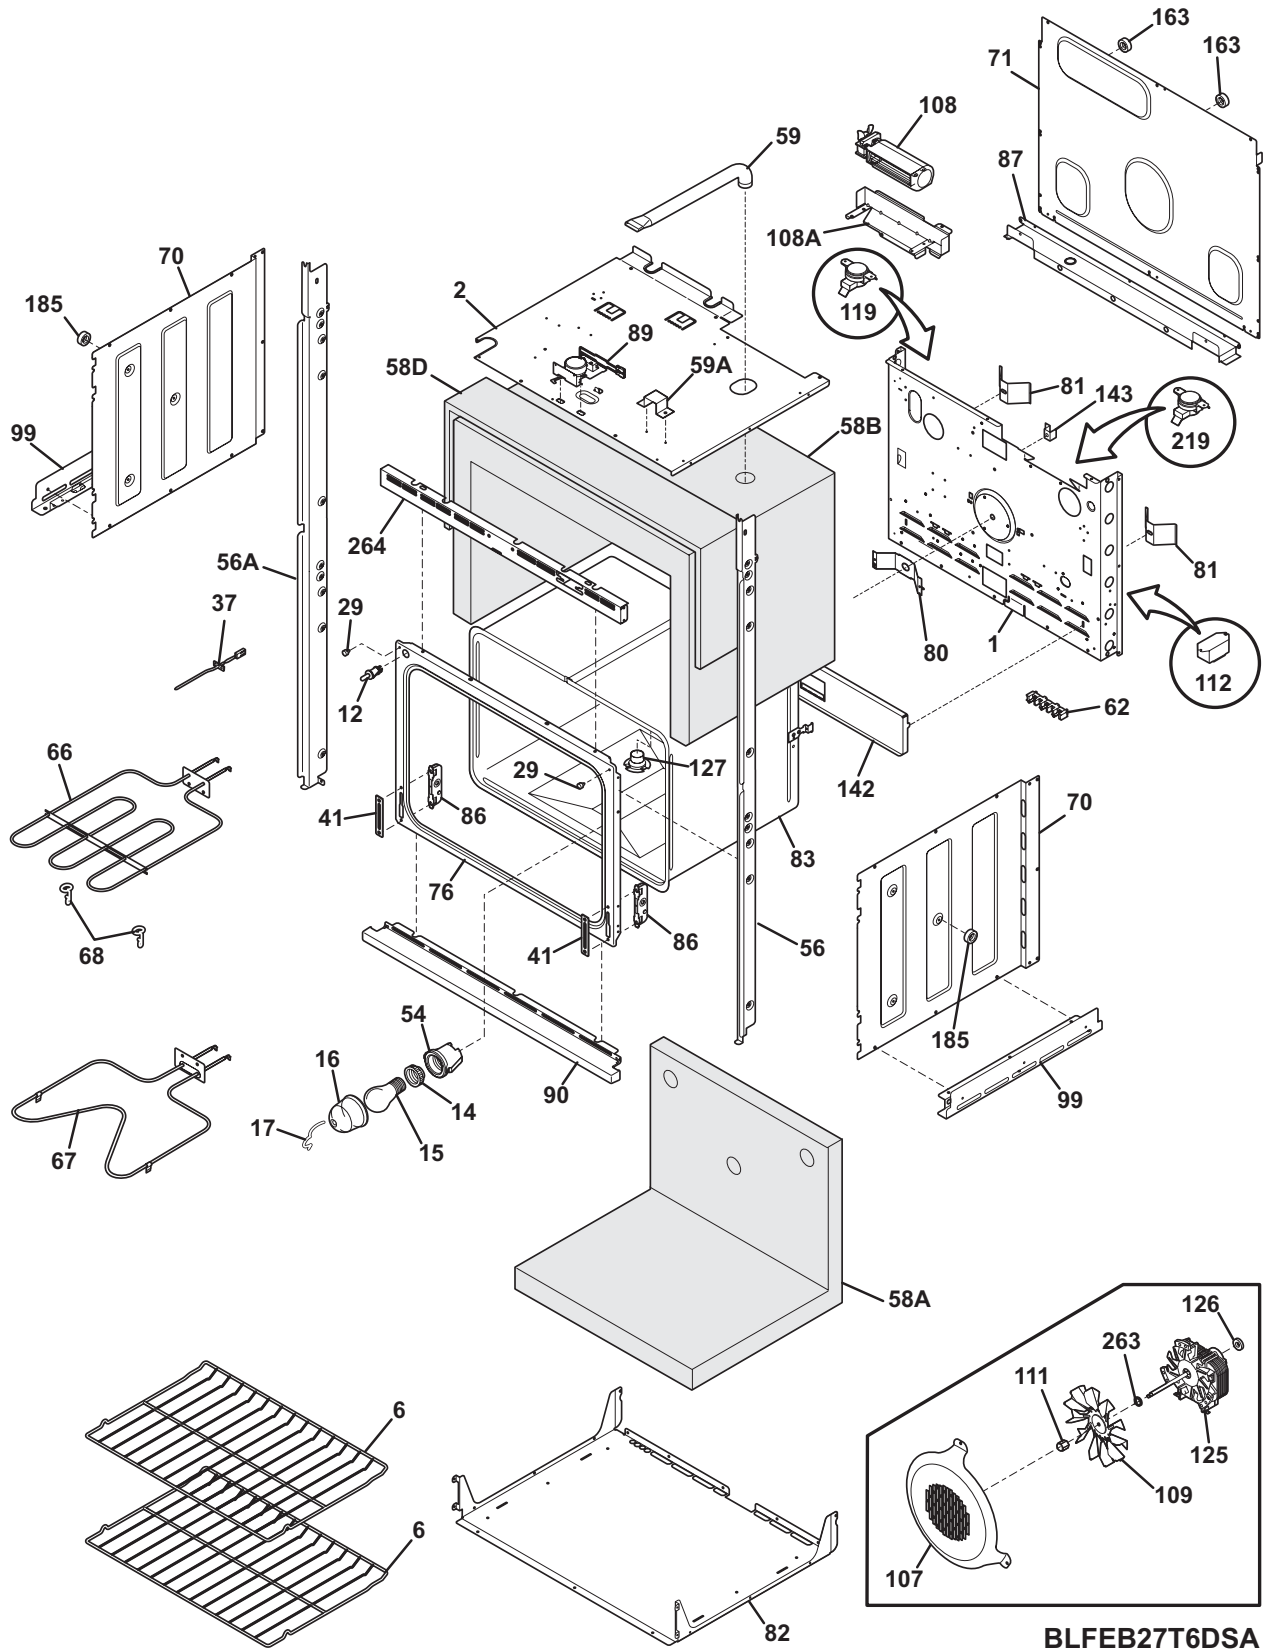


BLFEB27T6DSA

LOWER OVEN

Model Index: A FEB27T6D (FEB27T6DBA)
 B FEB27T6D (FEB27T6DQA)
 C FEB27T6D (FEB27T6DSA)

POS. NO	PART NO.		DESCRIPTION
*	08016432	A B C	Screw, truss head, 8-18 x 0.375
108A	318251300	A B C	Bracket, fan support
109	316136400	A B C	Blade, fan
111	316136600	A B C	Nut, fan retainer
112#	318112701	A B C	Relay
119#	318004900	A B C	Switch, thermal
125#	316415800	A B C	Motor, fan
126	318142100	A B C	Washer, motor, RH, convection
127	5303310542	A B C	Adapter, vent tube, with converter
142	318123910	A B C	Deflector
143	318172904	A B C	Support, wire/glass
163	318014111	A B C	Spacer
185	318014700	A B C	Spacer, oven shield, (4)
219#	318003606	A B C	Thermostat, safety
263	316136500	A B C	Washer, fan motor
264	318257811	A B C	Trim, oven, black, front
* #	318078543	A B C	Box & wires assy
*	318231716	A B C	Harness, wiring, main
*	3201861	A B C	Screw, 6 x 0.375, (4)
*	5303211311	A B C	Screw, 8 x 0.500
*	5303323277	A B C	Screw, 8-18 X 13/32
*	5304436875	A B C	Screw, 8-18 X 1/2, black

DOOR

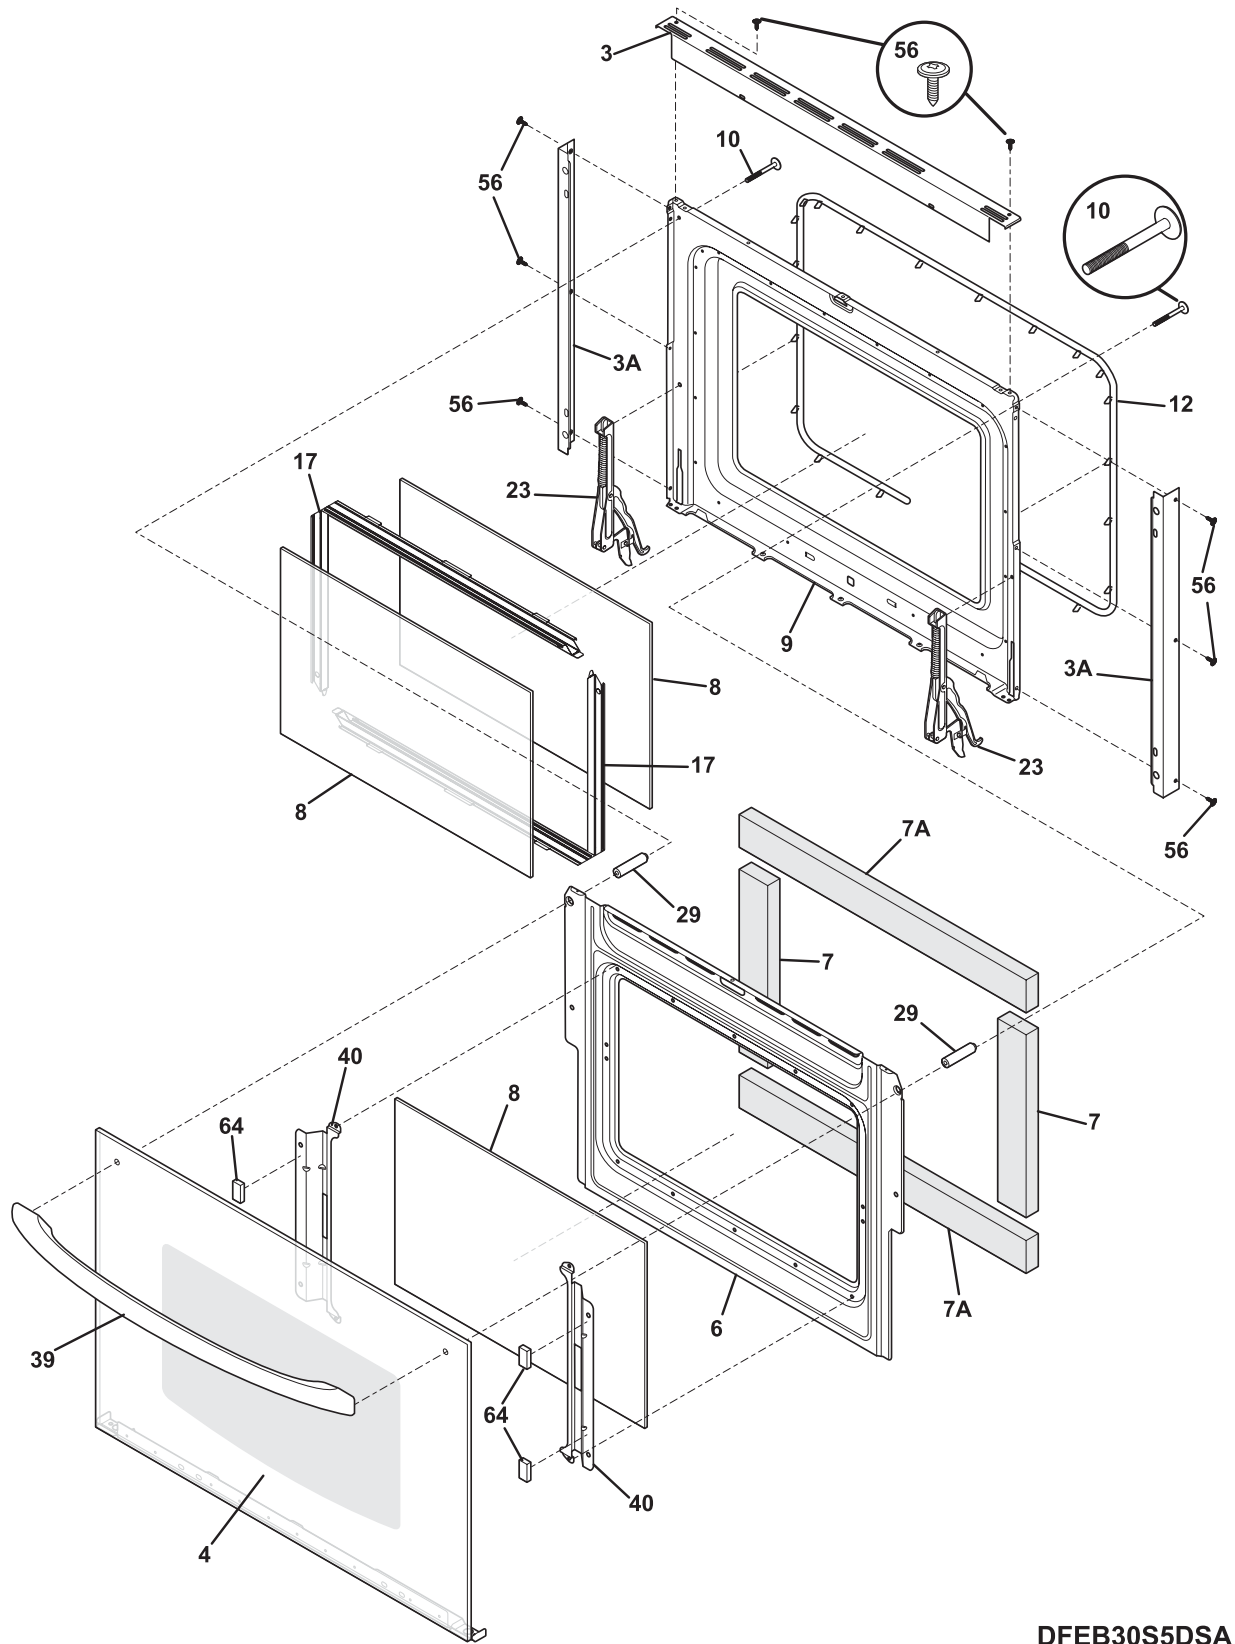

DFEB30S5DSA

DOOR

Model Index: A FEB27T6D (FEB27T6DBA)
 B FEB27T6D (FEB27T6DQA)
 C FEB27T6D (FEB27T6DSA)

POS. NO	PART NO.		DESCRIPTION
3	318260211	A B C	Trim, oven door, black, upper
3A	318260401	A B C	Trim, oven door, side, (2)
4	318261350	A - -	Glass Assy., oven door, black, outer, w/ trim
4	318261352	- B -	Glass Assy., oven door, bisque, outer, w/ trim
4	318261351	- - C	Glass Assy., oven door, white, outer, w/ trim
6	318260510	A B C	Baffle, door
7	318133792	A B C	Insulation, oven door
7A	318133796	A B C	Insulation, oven door, cavity
8	318212200	A B C	Glass, oven door, heat barrier
9	318259611	A B C	Liner, oven door, upper
10	5304416408	A B C	Screw, 10-24 x 1.750, handle mtg
12	318053125	A B C	Seal, upper door
17	318264700	A B C	Spacer, glass, (2)
23	318024722	A B C	Hinge, upper door, (2)
29	318014402	A B C	Spacer, door
39	318264500	A - -	Handle, oven door, black
39	318264502	- B -	Handle, oven door, bisque
39	318264501	- - C	Handle, oven door, white
40	318242700	A B C	Bracket, glass holder, (2)
56	5304436875	A B C	Screw, 8-18 X 1/2, black
64	318165800	A B C	Spacer, (4)
*	5303323277	A B C	Screw, 8-18 X 13/32

WIRING DIAGRAM

