# FRIGIDAIRE.



# **Drop-In Cooktops**

FFEC3005L S/W/B/Q



### **Signature Features**

### Ready-Select® Controls

Select options or control cooking temperature with our easy-to-use controls.

# Approved Over Frigidaire® Electric Wall Ovens

Cooktops are approved for installation above any of our Electric Single Wall Ovens.

### **Durable Stainless Steel** Cooktop1

A premium look that stands up to everday use.

### Spill Saver™ Cooktop

Cooktop contains your spillovers for easier cleanup.

### 30" Electric

#### **Product Dimensions**

Width 30" Depth 21-1/2" Height

#### More Easy-To-Use Features

#### **Color-Coordinated Control Knobs**

White, Black and Bisque cooktops come with matching knobs — while Stainless Steel models feature our neutral black

#### "On" Indicator

Alerts you when your cooktop is on.

#### Spill Saver™ Drip Bowls

Cooktop features chrome drip bowls that make cleaning up spills quick and easy.

#### Available in:









Elements Size Watts Right Front 2,100 8" Right Rear 6" 1.250 Left Front 6" 1.250 Left Rear 8" 2,100

<sup>1</sup>Select models only.




# **Drop-In Cooktops**

FFEC3005L S/W/B/Q 30" Electric

Features				
Controls	Ready-Select*  Stainless (S), Color-Coordinated Porcelain (W/B/Q)			
Surface Type				
Right Front Element (Watts)	8" - 2,100			
Right Rear Element (Watts)	6" - 1,250			
Left Front Element (Watts)	6" - 1,250			
Left Rear Element (Watts)	8" - 2,100			
"On" Indicator	Yes			
Control Location	Right Side			
Knob Color	Black (S), Color-Coordinated (W/B/Q)			
Knob Type	Plastic Chrome			
Bowl Type				
Specifications				
Power Supply Connection Location	Right Rear			
Voltage Rating	240V/208V/60Hz			
Connected Load (kW Rating) @ 240/208 Volts¹	6.7/5.0			
Amps @ 240/208 Volts	22.3/19.2			
Minimum Circuit Required (Amps)	30			
Approved for Electric Single Wall Oven Combination Installation <sup>2</sup>	Yes			
Shipping Weight (Approx.)	30 Lbs.			

Single phase 3- or 4-wire cable, 120/240 or 120/208 Volt, 60 Hertz AC only electrical supply with ground required on separate circuit fused on both sides of line.

<sup>&</sup>lt;sup>2</sup>Cooktops are approved for installation above any of our Electric Single Wall Ovens.

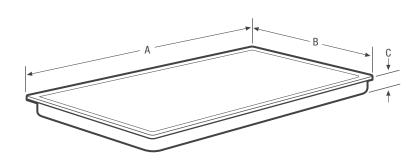

NOTE: Always consult local and national electric codes. Refer to Product Installation Guide for detailed installation instructions on the web at frigidaire.com.






Product Dimensions	
A - Width	30"
B-Depth	21-1/2"
C-Height	3"

Cutout Dimensions	
Width (Min.)	26-3/4"
Width (Max.)	28-1/4"
Depth (Min.)	19-1/8"
Depth (Max.)	20"
Height	5"

Granite Countertop Installation Kit available.

Accessories information available on the web at **frigidaire.com** 

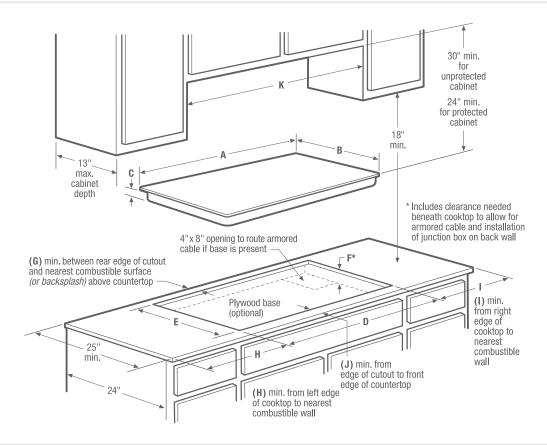

Product Dimensions			Required Clearances			
A - Width	B - Depth	C - Height	G (min.)	H (min.)	I (min.)	J (min.)
30"	21-1/2"	3"	2-1/4"	7-1/2"	7-1/2"	2-1/2"
Product Cutout Dimensions			K - Cabinet Opening Width		Utility Connection Locations	
D - Width (min max.)	E - Depth (min max.)	F-Height (min.)*	(min.)		Power Supply	
26-3/4" - 28-1/4"	19-1/8" - 20"	5"	30"		Right Rear	

#### **Drop-In Cooktop Specifications**

- Product Shipping Weight (approx.) 30 Lbs.
- Single phase 3- or 4-wire cable, 120/240 or 120/208 Volt, 60 Hertz AC only electrical supply with ground required on separate circuit fused on both sides of line.
- Connected Load (kW Rating) @ 240/208 Volts = 6.7/5.0 kW
- Amps @ 240/208 Volts = 22.3/19.2 Amps
- Recommended Circuit Breaker 30 Amps
- Always consult local and national electric codes.
- Cooktop cutout height includes clearance needed beneath cooktop to allow for armored cable and installation of junction box on back wall.
   Position center of junction box 10" inward from right side of cooktop cutout, and 12" down from underside of countertop.
- · Overhead cabinetry should not exceed a 13" maximum depth.
- Absolute minimum horizontal distance between overhead cabinets installed to either side of appliance must be no less than 30".
- Allow 30" minimum clearance between top of cooktop platform and bottom of unprotected wood or metal overhead cabinet; or 24" minimum clearance when bottom of wood or metal overhead cabinet is protected by not less than 1/8" flame-retardant millboard covered with not less than No. 28 MGS sheet steel, 0.015" stainless steel, 0.024" aluminum or 0.020" copper.

- Allow 2-1/4" minimum clearance between rear edge of cutout and nearest combustible surface (or backsplash) above countertop.
- Allow 7-1/2" minimum required clearance from left edge of cooktop to nearest combustible wall and 7-1/2" minimum from right edge of cooktop to nearest combustible wall.
- Installation of drawer not recommended beneath cooktop.
- To reduce risk of fire when using overhead cabinetry, install range hood that projects horizontally a recommended minimum of 5" beyond bottom of cabinets.
- Electric Drop-In Cooktop model FFEC3005L is NOT approved to be used over any Frigidaire® Single Wall Oven.

Note: For planning purposes only. Refer to Product Installation Guide on the web at frigidaire.com for detailed instructions.


#### **Optional Accessories**

• Granite Countertop Installation Kit - (PN # 903061-9010).

Accessories information available on the web at **frigidaire.com** 





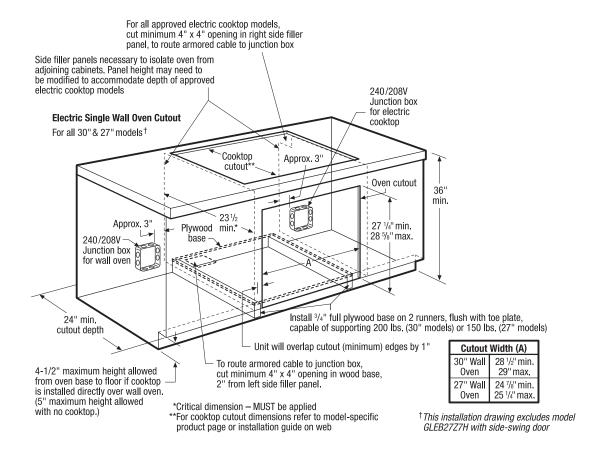

#### 30"/27" Electric Single Wall Oven Under-Counter Installation Specifications

- Single phase 3- or 4-wire cable, 120/240 or 120/208 Volt, 60 Hertz AC only electrical supply with ground required on separate circuit fused on both sides of line.
- For detailed electrical requirements, refer to model-specific product page and installation guide on web.
- Always consult local and national electric codes.
- Minimum 21" clearance for oven door depth when open.
- Minimum 23-1/2" deep cutout dimension is critical for proper installation, to ensure that oven's faceplate will fit flush against cabinet front.
- · Side filler panels necessary to isolate oven from adjoining cabinets.
- Full oven base of solid plywood or similar material required, capable of supporting 200 Lbs. (30" models) or 150 Lbs. (27" models). Install over two runners and flush with toe plate.
- · Base must be level and cabinet front must be square.
- Allow 5" maximum height from oven base to floor, if NO cooktop is installed directly over wall oven.


## Electric Cooktop Installation Over 30"/27" Electric Single Wall Oven Specifications

All Frigidaire® Electric Single Wall Ovens are approved to be used beneath any approved Frigidaire® Electric Cooktop. (This installation page excludes approved wall oven model GLEB27Z7H. For model-specific installation details, refer to Electric Cooktop Installation Over 27" Electric Single Wall Oven GLEB27Z7H Specifications pages on web.) For detailed Electric Cooktop installation, refer to model-specific product page and installation guide on web.

- Side filler panel height may need to be modified to accommodate the depth of approved electric cooktop models.
- To route armored cable to junction box, cut minimum 4" x 4" opening in right side filler panel.
- Allow 4-1/2" maximum height from oven base to floor, if cooktop is installed directly over wall oven.

Note: For planning purposes only. Refer to Product Installation Guide on the web at frigidaire.com for detailed instructions.

## Electric Cooktop Installation Over 27" Electric Single Wall Oven (GLEB27Z7H)

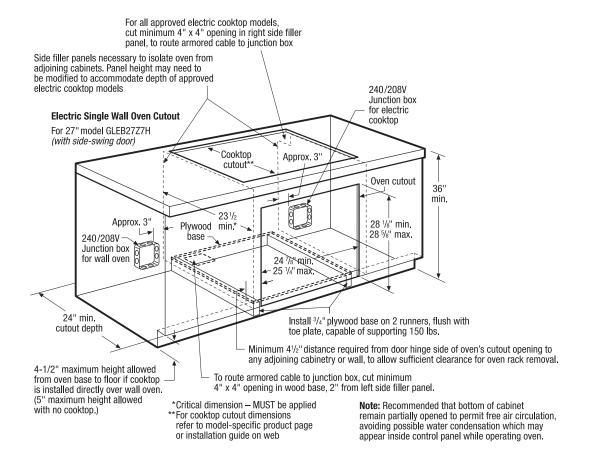

#### 27" Electric Single Wall Oven (GLEB27Z7H) Under-Counter Installation Specifications

- Single phase 3- or 4-wire cable, 120/240 or 120/208 Volt, 60 Hertz AC only electrical supply with ground required on separate circuit fused on both sides of line.
- For detailed electrical requirements, refer to model-specific product page and installation guide on web.
- Always consult local and national electric codes.
- Minimum 27-1/4" clearance for oven door depth when open.
- Minimum 23-1/2" deep cutout dimension is critical for proper installation, to ensure that oven's faceplate will fit flush against cabinet front.
- Minimum 4-1/2" distance required from door hinge side of oven's cutout opening to any adjoining cabinetry or wall, to allow sufficient clearance for oven rack removal.
- Side filler panels necessary to isolate oven from adjoining cabinets.
- Oven base of solid plywood or similar material required, capable of supporting 150 Lbs. Install over two runners and flush with toe plate.
- · Base must be level and cabinet front must be square.
- Recommended that bottom of cabinet remain partially opened to permit free air circulation, avoiding possible water condensation which may appear inside control panel while operating oven.
- Allow 5" maximum height from oven base to floor, if NO cooktop is installed directly over wall oven.

# Electric Cooktop Installation Over 27" Electric Single Wall Oven (GLEB27Z7H) Specifications

Frigidaire® Single Wall Oven model GLEB27Z7H is approved to be used beneath any approved Frigidaire® Electric Cooktop.

For detailed Electric Cooktop installation, refer to model-specific product page and installation guide on web.

- Side filler panel height may need to be modified to accommodate the depth of approved electric cooktop models.
- $\bullet$  To route armored cable to junction box, cut minimum  $4^{\prime\prime}$  x  $4^{\prime\prime}$  opening in right side filler panel.
- Allow 4-1/2" maximum height from oven base to floor, if cooktop is installed directly over wall oven.

Note: For planning purposes only. Refer to Product Installation Guide on the web at frigidaire.com for detailed instructions.