

23.25"5

36

ELECTRIC SUPPLY LOCATION¹

10'

30" SLIDE-IN ELECTRIC RANGE

24"

PRODUCT DIMENSIONS




MODEL SKUs

MES5775BAF

MES5775BAB

MES5775BAN

MES5775BAS

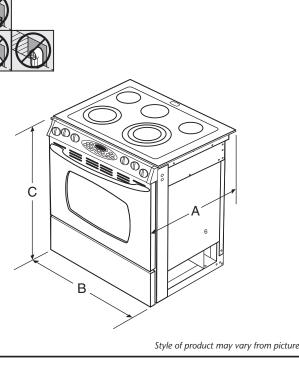

NOTES:

1-1/2"min

- 1. Provide for 120/208, 120/240 volt outlet per applicable cord in this area. 16" (40.6 cm) W x $5^{3}/4$ " (14.6 cm) H, located 7" from side wall.
- 2. Depth excluding handle. Dimension given is from wall to front of oven door.
- 3. Height may vary slightly depending upon leveling legs.
- 4. If cabinet backsplash behind unit is not present, backsplash kit (UXA9107AA in B=black, W= white, Q= bisque, S=stainless) may be ordered from dealer.
- 5. When replacing an existing unit, a maximum of 23 1/2" is acceptable. If the cut depth exceeds 23 1/2" use filler kit (K71FILL in B=black, W= white, Q=bisque).
- 6. If end cabinet is not present, side panel kit (UXA1100AA in B=black, W= white, Q= bisque, S=stainless) may be ordered from dealer.
- 7. 120/240 V or 120/208 V Grounded Electrical Outlet in the hatched area. Outlet MUST be flush. Nothing located in hatched area can extend more than 2" from wall or range will not slide all the way back.
- 8. Some white European style cabinets are equipped with delicate white vinyl drawer and door fronts. The vinyl may not be designed to withstand the heat produced by the normal safe operation of a selfclean range. Discoloration or delamination may occur. To avoid possible damage, we recommend increasing the 30" cabinet opening to 31 1/4" minimum and using heat shield (CABKIT V). The countertop cut-out must remain 30".