



EN USER INTERFACE

FR GROUPE DE COMMANDES


ES GRUPO DE MANDOS

PT GRUPO DE COMANDOS

CONTROL UNIT

For an optimal and efficient use of the product, it is recommended that you switch on the hood a few minutes before you start cooking and keep it on for at least 15 minutes after you have finished or until the steam and odours have been completely eliminated. The following types of controls can be found on the front of the hood:

6-button control panel

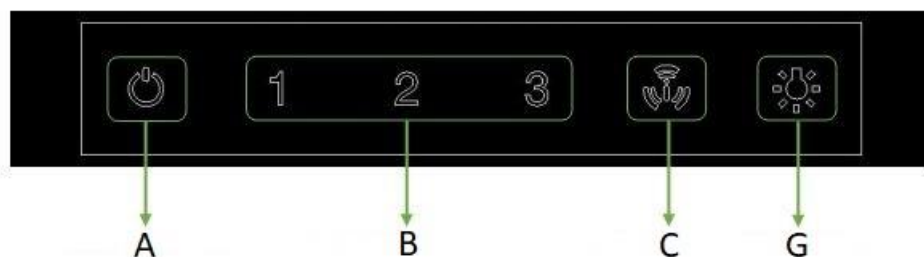

Button functions



Hood OFF button. (If the fan and the lights are on).



Speed 1 button. Lights up when the motor is running at speed 1.



Speed 2 button. Lights up when the motor is running at speed 2.



Speed 3 button. Lights up when the motor is running at speed 3.



Turbo speed button. Lights up when the motor is running at speed 4. The motor switches from speed 4 to speed 3 after about 7 minutes. When the Turbo function is active, the button flashes and the timer function is not active.



Lights On/Off button. Illuminated when the light is on.



1 - 2 - 3 Pressing these buttons twice activates the timer. The timer function can only be activated when the fan motor is on. Once activated, a 10-minute timer starts, when the time elapses, the motor stops and the light switches off. The button flashes during this time. The timer can be cancelled by touching the same button.



Light brightness adjustment

Briefly touching the  button immediately switches the lights on or off. Touching and holding this button for more than 1 second gradually increases the brightness to the maximum level and then decreases it to the minimum level as long as the button is pressed. Release the button once you have obtained the required brightness. This level of brightness will be saved in the non-volatile memory so that it will be set each time the light is switched on by tapping the button once. Tapping the light button twice when the light is off will set it to maximum brightness. It is factory set to maximum brightness.



Filter alarm reset

After 100 hours of hood operation, buttons **1**, **2**, **3**, will start to flash to remind you to clean the filters. To reset this warning, press the On/Off button for 5 seconds, the light of the On/Off button will flash once to indicate that the filter time has been reset.



24h air exchange function

The 24h air exchange function allows you to clean the air in the room. To start the 24 hour function, press and hold the  button for 3 seconds. The extraction hood will run at minimum speed for 10 minutes every hour (up to a maximum of 24 hours). The **1** and  buttons will flash as long as the function is active. Briefly touching any button (apart from the  button) will disable the function.

GHOST function

When this product is turned off, only the  button remains illuminated (at low brightness). If the  button is pressed, the hood will be set to standby and all buttons will light up with a brightness of 5%. When in standby, if a function is activated, the relative button will light up with 100% brightness. If you press the  button, the hood returns to standby mode and all buttons will light up with a brightness of 5%.