NEW MODEL Cylindra

Stainless wall cylinder

Image Collection

LUXURY STYLING & FUNCTION

- Stunning stainless steel cylinder
- Artistic design, impeccable fit & finish
- Two halogen bulbs with 2 level lighting
- Dishwasher-safe grease filters
- Easy Mounting System
- 600 cfm internal PRO™ blower model
- Perimetric suction system
- Comfort Panel sound proofing

STATE OF THE ART CONTROLS

- Touch (LED) electronic controls
- 4 pre-set speeds plus Intensive Power Boost
- 24-hour kitchen anti-pollution mode
- 30 minute delayed shut-down mode
- Grease filter saturation indicator

DUCTING OPTIONS

- Top 6 " round / direct rear venting
- · Convertible to ductless, only filters needed



a C

C

e

S S

0

r

i е

S





Size | Color Model # 15 Stainless CYLN15SS

Charcoal Filter

FILTER2

Glass Kit (36" x 20")

GLSCYLN

Flat glass "canopy" attaches to the bottom of the stainless cylinder to increase capture area and add design and flair

CFM Reducer Kit

CFMRED

Reduces CFM to under 300 cfm for makeup air environments

Remote Control

REMCTRL

Optional wireless remote control to operate the hood











Note: Above photo shown with glass kit



ON AIR. SINCE 1955

Faber introduces the new Cylindra wall hood, featuring a stainless steel cylinder with state of art LED push button controls and the innovative perimetric suction system to decrease sound and improve efficiency. Use the stainless cylinder alone or add the glass kit




Note: Two Cylindras shown without glass



LED Electronic Controls

Dimensional Diagrams

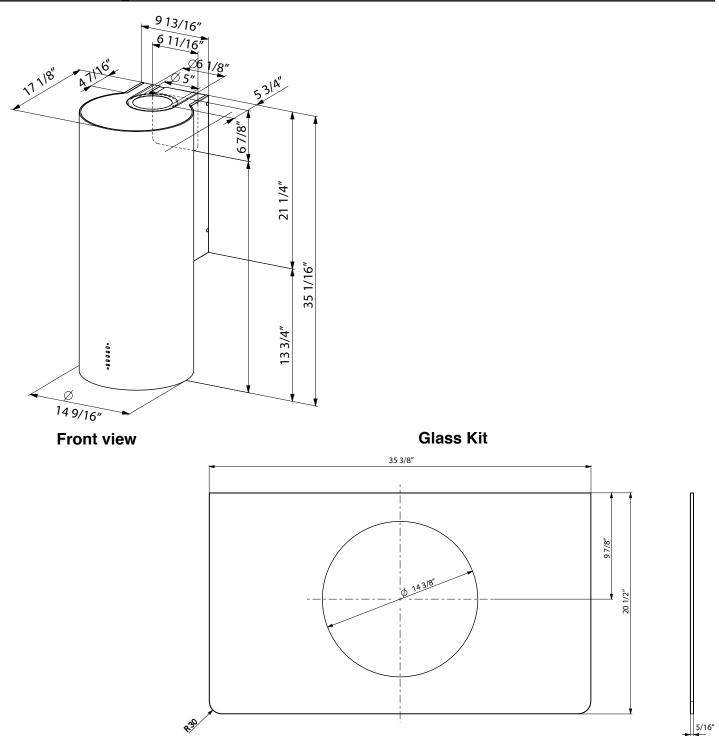

Pre-Planning Your Installation - Important: Consult the installation instructions before you begin installing this rangehood.

Make your ductrun as straight and short as possible. The ductrun should not exceed 35 equivalent feet if ducted with the required minimum of 6" round duct. Count 45° angles as 3 feet, 90° elbows as 5 feet, and 90° flat elbows as 12 feet.

For best results, use no more than three 90° elbows. Make sure that there is a minimum of 24" of straight duct between elbows if more than one is used. Do not install two elbows together. If you must elbow right away, do it as far away from the hood's exhaust opening as possible.