
FULGOR MILANO

CUTOUT DIMENSION

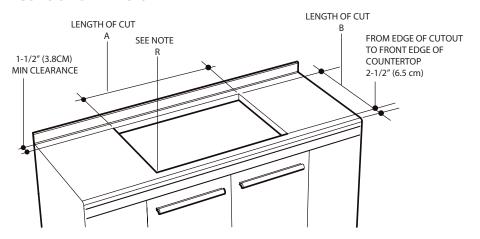

CUTOUT REQUIREMENTS

Ltr.	CUTOUT DIMENSION	inch	cm
Α	Cutout Width	28-3/4" +/- 1/16"	73,0 +/- 0.1
В	Cutout Depth	19-7/16" +/- 1/16"	49,4 +/- 0.1
С	Opening between cabinets	Min 30" min	Min 76,2
D	Height from countertop to nearest cabinet on either side of unit	Min 18"	Min 45.7
Е	Clearance from countertop to unprotected overhead surface	Min 30"	Min 76.2
F	Clearance from cutout to side wall on the left and right of the unit	Min 2"	Min 5
G	Depth of unprotected overhead cabinets	Min 13"	Min 33

PACKAGING		lb / inch	Kg / mm
GROSS WEIGHT		36 lb	16.3 Kg
	W	34"1/2	876
DIMENSION	D	23"1/2	598
	ΙнΙ	7"1/4	185


NOTE

R

Radius corners of cutout and file to Insure smooth edges and prevent corner cracking. Recommend 1/4"or 3/8"diameter drill in each.

* NOTE

24" (61 cm) min. clearance if bottom of wood or metal cabinets is protected by not less than 1/4" (0.6 cm) flame retardant millboard covered with no less than No. 28 MSG sheet steel 0.015" (0.04 cm) stainless steel, or 0.024" (0.06 cm) aluminum or 0.020" (0.05cm) copper. 30" (76.2 cm) min. clearance between top of cooking platform and bottom of unprotected wood or metal cabinet.

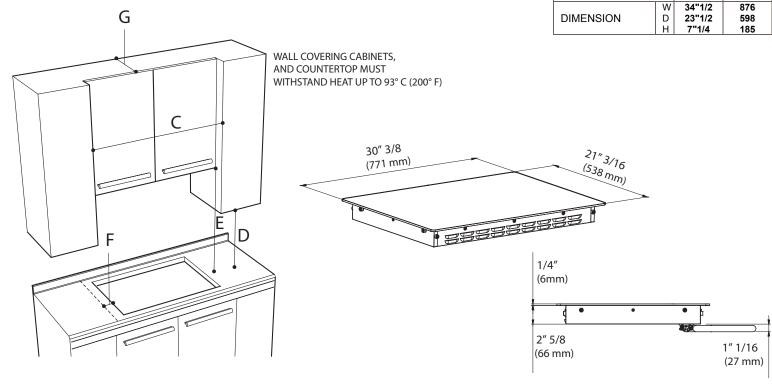




Cooktop Installation

Important Preparation Suggestions

- 1. Chamfer all exposed edges of decorative laminate to prevent damage from chipping.
- Radius corners of cutout and file to ensure smooth edges and prevent corner cracking. Recommend 1/4" or 3/8" diameter drill to start cut at each corner.
- Rough edges, inside corners which have not been rounded and forced fits can contribute to cracking of the countertop laminate.

*The ventilation opening is to extend the full length of the cooktop cutout.

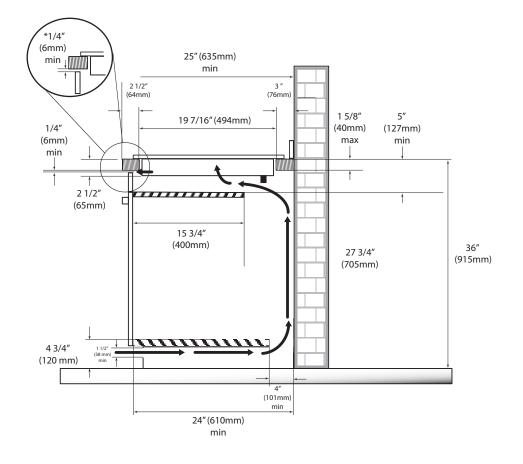

Cooktop Installation Over a Single Oven

- Use the countertop opening dimensions that are given with these Instructions.
- Check the cooktop base for an approved installation label.
 Verify approved oven model numbers that can be installed with your cooktop model number.
- · The cooktop may be installed over a single oven.
- The cooktop should be centred over the oven.
- Both the cooktop and the oven must be installed according to each specific installation instruction.

* The ventilation opening is to extend the full length of the cooktop cutout.

